

DST Setting Module : 5479

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>



To return to the Timekeeping Mode from any other mode, hold down (C) button for about one second.

<How to change the digital time.>

1.



Hold down (A) button until the seconds start to flash.

2.



Press (C) button once.

3.



DST setting will appear.



Press (D) button to toggle ON and OFF.



Press (A) button to exit the setting screen.

<How to change the analog time.>



In the Timekeeping Mode, press (C) button six times to enter the Hand Setting Mode.



Hold down (A) button until the current digital time starts to flash.

3.



Press (D) button to advance the analog time setting by 20 seconds. Holding down (D) button advances the analog time setting at high speed.

4.



Press (A) button to exit the setting screen.

5.



Press (C) button to return to the Timekeeping Mode.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>