

CASIO Electronic Dictionary Quick Guide

The contents of this Quick Guide apply to the CASIO XD-SP and XD-GP Series Electronic Dictionaries. Most illustrations and screen shots show the XD-SP6600.

Loading Batteries for the First Time

Before using your electronic dictionary, load two LR03 AAA-size alkaline batteries.

- Remove the battery cover.**
 - Pressing at the two points shown in the illustration, slide the cover in the direction indicated by the arrows.

- Load two batteries.**
 - Press the springs with the (+) ends.
 - Press the (+) ends down so the batteries are above the ribbons.
 - Make sure the (+) and (-) ends are facing correctly and that the springs are pressed straight down.

- Pull the stylus out of the battery cover and then replace the battery cover.**

- Use the stylus to press the RESET button on the back of the dictionary.**
 - Do not use a toothpick, lead pencil, or other breakable object.

- Unfold the electronic dictionary.**

- On the メインパネルコントラスト設定 (Main Panel Contrast Adjustment) screen, use [Left] and [Right] to adjust display contrast. Press [Enter/Decision] (Set).**

- On the メインパネル調整 (Main Panel Adjustment) screen, use the stylus to touch the centers of the four cross marks.**
 - Touching the center of the fourth cross displays the handwriting panel contrast adjustment screen.

- On the 手書きパネルコントラスト設定 (Handwriting Panel Contrast Adjustment) screen, use [Left] and [Right] to adjust handwriting panel contrast. Press [Enter/Decision] (Set).**

- On the handwriting panel, use the stylus to touch the centers of the four cross marks.**

 
- Touching the center of the fourth cross displays the メニュー (MENU) screen.**

Turning Power On and Off

- Press the ON/OFF key to turn on power.**
 - Power also turns on when you press a dictionary/mode key.
- Press ON/OFF again to turn off power.**
 - Power also turns on and off when you open and close the electronic dictionary's panels.

General Guide

Handwriting Panel
For handwriting of characters for input. This panel also displays buttons that you can tap to perform various operations.

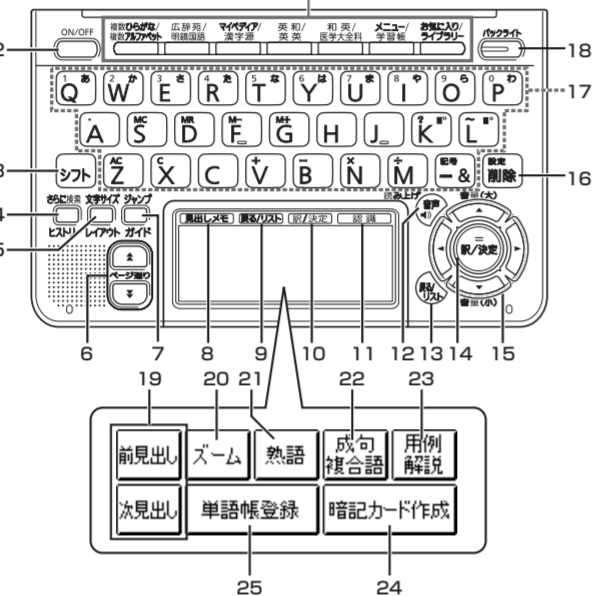

- Dictionary/mode keys**
Toggle between the initial screens of the two dictionaries/modes assigned to each key.
- ON/OFF Key**
Toggles power on and off.
- シフト (Shift) Key**
Shifts the keyboard. To use [シフト], press and release it and then press the next key.
- 履歴 (Additional Search) (History) Key**
Performs additional search. Press after [シフト] to access history data.
- 文字サイズ (Text Size) (Layout) Key**
Cycles through available screen text sizes. Press after [シフト] to change the screen layout.
- スクロール (Scroll) Keys**
Scroll screen contents up and down. Press after [シフト] to jump back or forward between definitions.
- ジャンプ (Jump) (Guide) Key**
Enables look up of a term on the currently displayed definition or explanation screen. Press after [シフト] to view guide information.
- 見出しメモ (Headword Memo) Icon**
Touch to affix a *midashi memo* (headword memo) to a definition or explanation produced by a search.
- 戻る / リスト (Back/List) Icon**
Touch to back-step through previous operations.
 - Touch while a dictionary's initial screen is on the display to return to the メニュー screen.
 - Touch while a definition screen is on the display to switch to the list of terms, which includes the term whose definition you were viewing.
- 訳 / 決定 (Translate/Select) Icon**
Touch to execute a function or to select an on-screen item.
- 認識 (Confirm) Icon**
Touch after inputting a character when inputting individual characters on the handwriting panel.
- 音声 (Audio) (Read) Key**
Press to hear a reading by the voice of a native speaker of the applicable language. Press after shift [シフト] to hear a reading by synthesized voice.
- 戻るリスト (Back/List) Key**
 - Press to back-step through previous operations.
 - Press while a dictionary's initial screen is displayed to return to the メニュー screen.
 - Press while a definition screen is on the display to switch to the list of terms, which includes the term whose definition you were viewing.
- 訳 / 決定 (Translate/Select) Key**
Executes a function or selects an on-screen item.
- Arrow Keys**
 - Move the selection highlighting or cursor up, down, left, or right.
 - The left and right arrow keys move the cursor.
 - To adjust the audio volume, press [シフト] and then the [Increase] or [Decrease] arrow key.

- 設定 / 削除 (Setup/Delete) Key**
 - Deletes the character at the current cursor location.
 - Press after [シフト] to display a screen for changing the setup of the electronic dictionary.
- Letter Keys**
Use these keys to enter letters and numbers.
- バックライト (Backlight) Key**
Toggles the backlight on and off.
- 前見出し / 次見出し (Previous Headword/Next Headword) Icon**
Tap to jump from the current term to the previous or next term. The same result can be achieved by pressing [シフト] and then [Up] or [Down].
- ズーム (Zoom) Icon**
Tap to enlarge the characters of a definition or explanation screen.
- 熟語 (Compound Terms) Icon**
Tap to view compound terms that use the kanji you are currently viewing in the 漢字源 (Japanese kanji) dictionary.
- 成句複合語 (Idioms and Compound Expressions) Icon**
Tap to view idioms and compound expressions that use the term you are currently viewing.
- 用例解説 (Samples and Explanations) Icon**
Tap to view samples and explanations in dictionaries that include such information.
- 暗記カード作成 (Create Flash Card) Icon**
Tap to create a flash card.
- 単語帳登録 (Add to Word List) Icon**
Display a term, sample sentence or idiom screen and then tap this icon to add the term, sample sentence or idiom to the word list.

Display Indicators

The following explains the meanings of display indicators.

This indicator:	Means this:
(Explanation)	There is an explanation for the word where the indicator is located.
(Compound Term)	The 漢字源 (Japanese kanji) dictionary contains a compound term that includes the kanji character you are looking up.
(Idiom/Compound Expression)	There is an idiom or compound term that uses the term you are looking up.
(Sample)	There is a sample sentence that uses the term you are looking up in an English dictionary.
(True Voice)	Native speaker pronunciation is available for the contents to the right or below this indicator.
(Reading)	Synthetic voice reading is available.
(Readings Search)	Readings are available for the English on the screen.
(English)	The language whose pronunciation is applied for readings.
(Jump)	There is a term that contains the term you are viewing or there is related information about the term in the dictionary you are currently accessing.
(History)	Jump function in use
(Zoom)	History function in use
(Guide)	Display zoom in use
(Word Order)	Guide function in use
(Continuous)	Indicates the display method when using search within results and world order search.

Keyboard Input



Use English input for unaccented alphabetic characters.
● See the following notes about other languages for other characters.


To input this:	Type this:
internet	I N T E R N E T
?	シフト [Q]
~	シフト [W]

Hangul




To input this:	Type this:
ㅁ	[ㅁ] [ㅁ]

 Chinese (Pinyin)

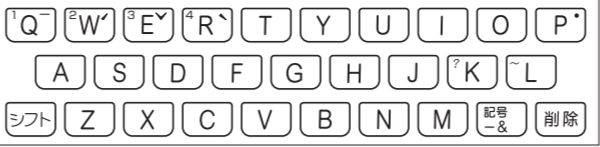

To input this:	Perform this operation:
ü	Type (keyboard): [V] Tap (Handwriting Panel): [一 ー]
—	Type (Keyboard): [シフト] [Q] (Displayed as 1.) Tap (Handwriting Panel): [二 声 一]
✓	Type (Keyboard): [シフト] [W] (Displayed as 2.) Tap (Handwriting Panel): [三 声 一]
√	Type (Keyboard): [シフト] [E] (Displayed as 3.) Tap (Handwriting Panel): [四 声 一]
∧	Type (Keyboard): [シフト] [R] (Displayed as 4.) Tap (Handwriting Panel): [輕 聲 一]
•	Type (Keyboard): [シフト] [P] (Displayed as 0.)
ming2tian1 (明天)	MING [二 声 一] TIAN [一 声 一] MINGシフト TIANシフト

 Japanese

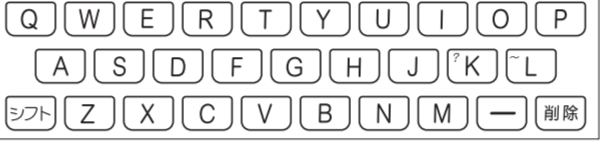

To input this:	Type this:
いんこ	I N K O
みかん	M I K A N N
さんぽ	S A N N P O or S I A M P O
きょう	K Y O U
らっこ	R A K K O or R A X T U R O
えーる	E R U
とうるーず	T W U R U Z U

German, French, Spanish and Italian

All alphabetic characters are input in lower case, regardless of their normal capitalization.

- For the German "ß", input "ss".
- For other characters that normally include a diacritic, input the character without the diacritic. Example: "ä" -> "a", "ë" -> "e", etc.
- For the French "ç" input "c", and for "œ", input "oe".
- Input hyphenated terms as single words, without a hyphen. To look up "peut-être", for example, input "peutetre".
- When inputting a term that consists of multiple words, input the words without any spaces. To look up "die Elbe", for example, input "dieElbe".

Handwriting Input

Use the stylus to write characters on the handwriting panel and then tap [認識].


Character Input Mode

The indicators described below appear on the main panel to show the current input mode. Also note that the handwriting panel changes to two characters per screen or five characters per screen in accordance with the input mode.

Two Characters Per screen

Indicator	Supported Input Characters
	Hiragana
	Katakana
	Kanji
	Simplified Chinese
	Hangul

 
Two-character Handwriting Panel

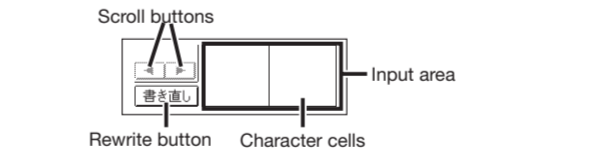

Five Characters Per screen

Indicator	Supported Input Characters
	Alphabetic
	Accented alphabetic
	Numbers

 
Five-character Handwriting Panel

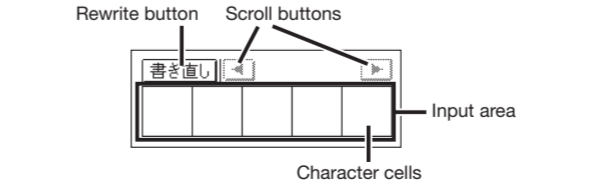

- Simplified Chinese, Hangul, and accented characters cannot be input on a model that does not include a dictionary that requires such characters. Input of the applicable characters becomes possible when optional software is installed.
- Handwriting input of Russian characters becomes enabled when the optional Russian dictionary software is installed.
- You can specify use of handwriting input on the initial screen of some dictionaries.

Correcting Kanji Character Input

 Example: After mistakenly inputting 喜怒哀楽 instead of 喜怒哀衰

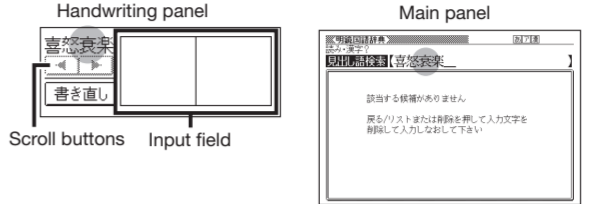


- On the handwriting panel or in the input field on the main panel, tap a character (衰).**
 - This displays up to 10 possible candidates for the character.
 - If there are too many characters to fit, tap the scroll buttons to scroll.

- If you find the correct character among the candidates, tap it.**

- If you do not find the correct character, tap [書き直し] (rewrite), rewrite the character on the handwriting panel and then tap [認識].**


Stylus Basics

 - When using the stylus to perform operations on the main panel, avoid applying excess pressure. Excess pressure can crack the main panel.
- When using the stylus to perform an operation on the main panel, support the main panel from behind with your hand.

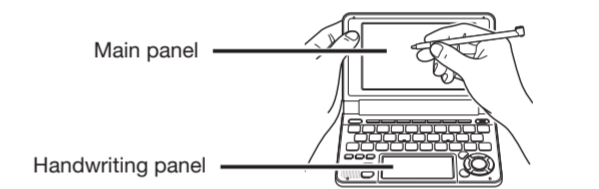

To select a category and initial screen items

 - Press [メニュー] to display the メニュー screen.**
- With the stylus, tap a category tab and then the dictionary/mode you want. This will highlight the dictionary/mode.**



- Tap the highlighted dictionary/mode again to display its initial screen.**
 - Instead of step 3, you also could tap [訳 / 決定] on the handwriting panel.
 - Other operations you can perform on the main panel by tapping with the stylus are selecting a search option, selecting a term, and selecting a headword.

Search Functions

The following is an overview of some of the search functions.

Headword Search

This is the most basic type of search. Use it when you want to look up a term in a dictionary.

- Display the initial screen of a dictionary/mode.**
- Use [Up] and [Down] to select 見出し語検索 (Headword Search).**
- Enter the term you want.**
 - As you enter each character, the list of terms on the main panel is updated accordingly.
 - When entering a headword, you can use the following wildcard characters.

Character	Represents
?	A single unknown character
~	A series of multiple unknown characters of unknown length

- Use [Up] and [Down] to move the highlighting to a term and then press [訳 / 決定] to display its definition screen.**

Sample Sentence Search

You can use the following procedure to search for sample sentences containing a specific term when the initial screen of the mode you are in has a 例文検索 (sample sentence search) option.

- Display the initial screen of a dictionary/mode.**
- Use [Up] and [Down] to select 例文検索.**
- Enter the term.**
 - When inputting multiple words, separate them using the ampersand character (&), not spaces. Example: return to → return&to
- Press [訳 / 決定].**
 - This displays a list of all sample sentences that contain the term.
- Use [Up] and [Down] to move the highlighting to a sample sentence and then press [訳 / 決定] to display detailed information.**

Jump Search
You can use jump search to jump to another location in the same dictionary or to another dictionary.

Jumping in the Same Dictionary

- When search results show items with a large arrow (→) or small arrow (↔) jump symbol, press the [ジャンプ] indicator.**
 - The [ジャンプ] indicator appears and the first character on the screen becomes highlighted.

- Use [Up] and [Down] to move the highlighting to the item you want and then press [訳 / 決定] to jump.**

Jumping to Additional Information

The following indicators on a definition screen indicate additional information is available. Press [辞書] , use the [Up] , [Down] , [Left] , and [Right] keys to move the highlighting to the indicator and then press [訳 / 決定] to view the information.

Indicator	Applicable Model and Dictionary	Available Information
	XD-GP7150 クラウン独和辞典 (German-Japanese Dictionary) XD-SP7400 伊和辞典 (Italian-Japanese Dictionary)	Conjugation
	XD-GP7250 仏和大辞典 (French-Japanese Dictionary)	Usage
	XD-GP7150 独和大辞典 (German-Japanese Dictionary)	Conjugation table
	XD-SP7500 現代スペイン語辞典 (Spanish Dictionary) XD-GP7250 ブチロワイヤル仏和辞典 (French-Japanese Dictionary) ブチロワイヤル和仏辞典 (Japanese-French Dictionary)	Usage table

Jumping to another Dictionary

- While the results of a search are displayed, press the [辞書] indicator.**
 - The [ジャンプ] indicator appears and the first character on the screen becomes highlighted.
- Use the arrow keys to move the highlighting to a term and then press [訳 / 決定].**
 - This displays a dictionary menu.

- Use [Up] and [Down] to select a dictionary and then press [訳 / 決定].**
 - This jumps to the applicable dictionary and searches for the term.

Multi-dictionary Search

Use the following procedure to search for a term across multiple dictionaries.

- On the メニュー screen, select the 便利な機能 (Useful Functions) tab and then select 複数辞書アルファベットで検索 (Alphabetic Multi-dictionary Search).**
 - You also could select 複数辞書ひらがなで検索 (Hiragana Multi-dictionary Search) or 複数辞書漢字で検索 (Kanji Multi-dictionary Search).
- On the search screen that appears, enter a term.**
 - Terms starting with the characters you have entered appear in a list on the display.
 - Each term also includes an indicator showing its dictionary.
- Use [Up] and [Down] to move the highlighting to a term and then press [訳 / 決定] to display its definition screen.**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>