

USER'S MANUAL

7" TFT LCD COLOR MONITOR

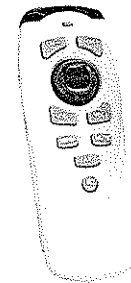 


Table of Content

I . Before using the product

1. Important Safety Precautions

II . Explanations of Each part

1. Monitor & Cable
2. Remote Control

III. Explanations of Function





1. Menu Function
2. Headphone
3. IR Transmitter

IV. Specification


V. Memo

VI. Warranty


1. Important Safety Precautions

 <p>WARNING</p>	<p>PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL AND THOSE MARKED ON THE UNIT, FAILURE TO READ OR FOLLOW THE INSTRUCTION MAY RESULT IN SEVERE INJURY OF DEATH.</p>
 <p>WARNING</p>	<p>DO NOT DISASSEMBLE OR ALTER. ATTEMPTS TO DISASSEMBLE OR ALTER MAY LEAD TO AN ACCIDENT, FIRE AND / OR ELECTRIC SHOCK.</p>
 <p>WARNING</p>	<p>DO NOT OPERATE THE EQUIPEMENT WHILE DRIVING.</p>
 <p>CAUTION</p>	<p>DO NOT RAISE THE VOLUME EXCESSIVELY. KEEP THE VOLUME AT A CERTAIN LEVEL, WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING. UNABLE TO HEAR OUTSIDE WHILE DRIVING COULD CAUSE AN SERIOUS ACCIDENT.</p>

 
1. Monitor & Cable

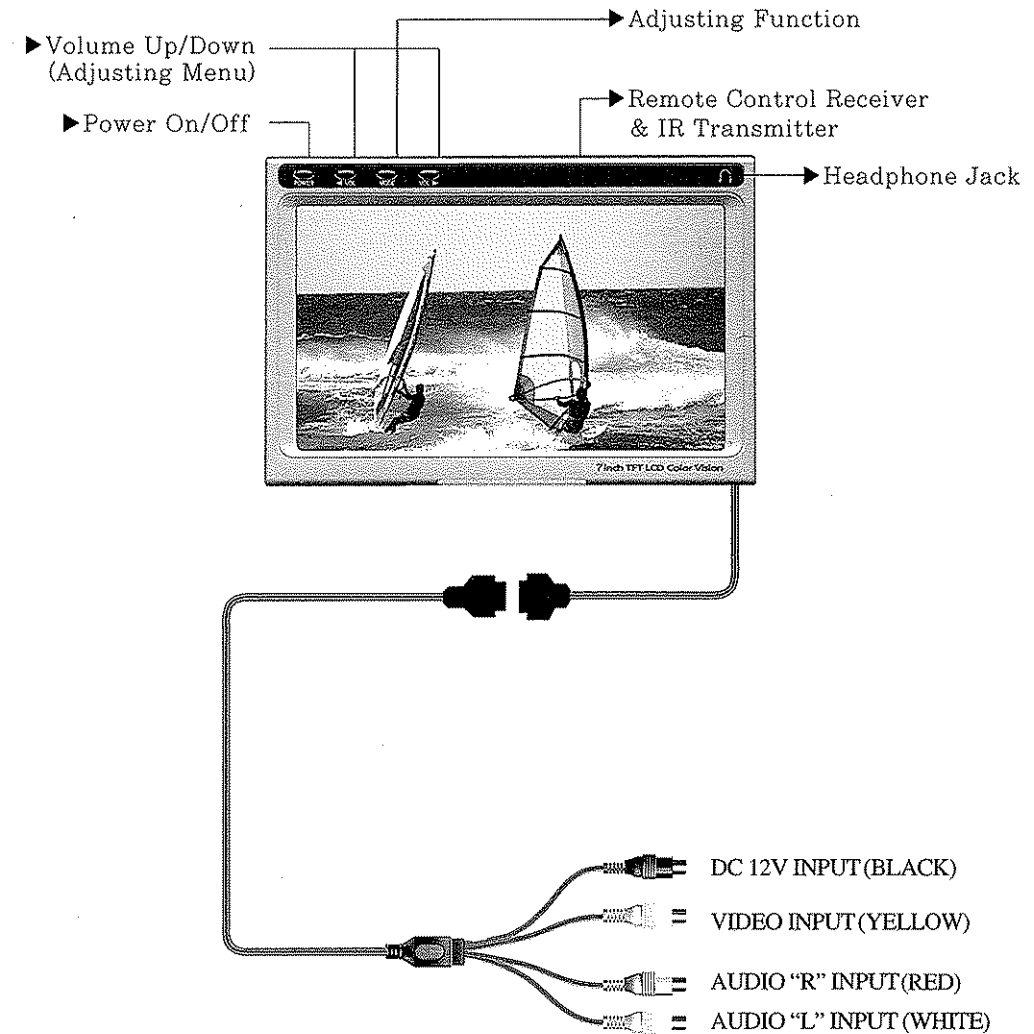

 2. Remote Control

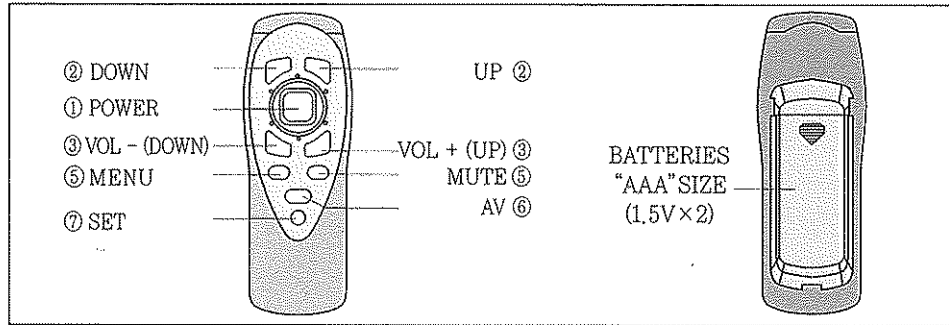

 - 1) **POWER** : Power ON/OFF button
- 2) **UP/DOWN** : Not available
- 3) **VOL +/- (UP/DOWN)** : Menu adjusting / Volume adjusting
- 4) **MENU** : Function adjustment
- 5) **MUTE** : Turns sound ON / OFF
- 6) **AV** : Not available
- 7) **SET** : Change the size of screen

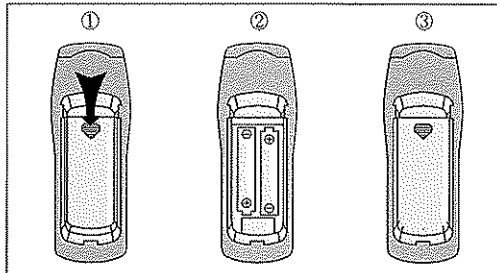


◆ **REMOTE CONTROL BATTERIES
 INSTALL/REPLACE**


1. Slide batteries compartment cover out from the back of remote control.
2. Insert two 1.5V(AAA) batteries as shown on left picture.
3. Replace batteries compartment cover back in.

1. Menu Function


When pressing menu button on the remote control or monitor, the following menu will appear on the screen in order as below.

  - Adjust each function with VOL(+, -) button.
- The OSD will disappear automatically after 5 seconds if no button.

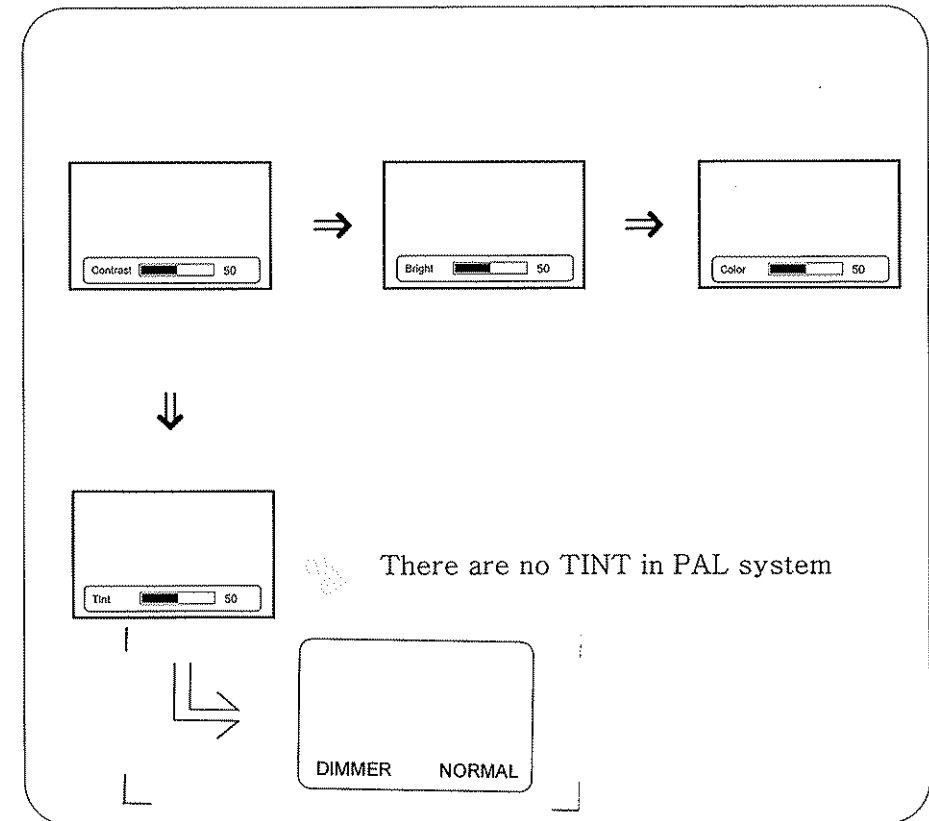


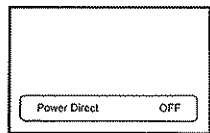

 
This function allows power to be turned on automatically as soon as the power jack is connected.

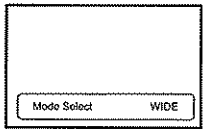

 Wide - picture ratio size is also 16:9, but width is slightly narrower than full picture size
Normal - picture ratio size for normal is 4:3

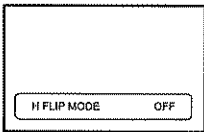


Screen can be changed to left and right

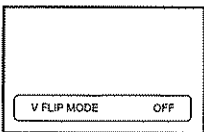 

Screen can be changed to Up and Down

 
2. Head Phone

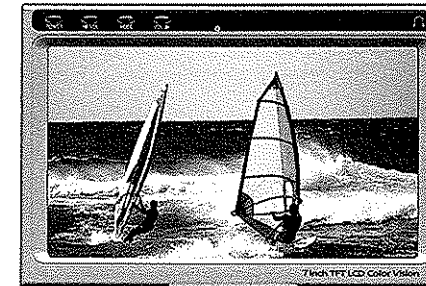

Headphone




 3. IR Transmitter

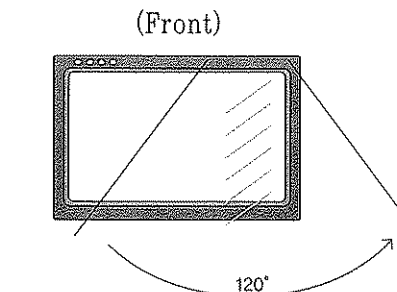

(Front)

 (Side)

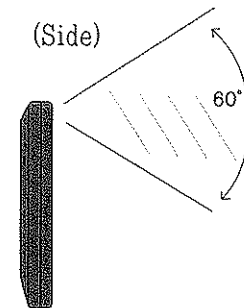

IR Wireless Headphone

IR Wireless Headphone



System	NTSC/PAL switching
Power Source	DC 12 V
Operate Temperature	-10°C ~ +60°C
Storage Temperature	-20°C ~ +80°C
LCD Panel	7"
Resolution	480 x RGB x 234
Angle of sight	Left/Right: $\pm 60^\circ$, Up/Down: Up 40° , Down 60°
IR Angle	Left/Right: 120° , Up/Down: 60°
Power Consumption	1) MONITOR : 8.5W
External Terminal	1) 1Video / Audio (L/R) Input

WARRANTY

Model		Mfg. No.	
Warranty Period		1 year	
Outgoing	Date	Date of Purchase	Date
Dealer	Seller Shop	Name	Seller Shop
	Tel.		Tel.
customer	Add.		
	Tel.		
	Name		

- ◆ Make sure every details in this form have been filled in.
Free service will be provided during the warranty on the basis of this form.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>