

**Wet
Tunes™**

Shower CD/Radio



OWNER'S MANUAL

MODELS:

WT51BL, WT51GY, WT51OR,
WT51PB, WT51PL, WT51RD

 


Congratulations! You are the proud owner of the Wet Tunes™ Shower CD/Radio. To obtain maximum satisfaction and enjoyment, please follow these simple guidelines.


1. **Do not submerge the Wet Tunes™ Shower Radio in water.**
It is water resistant, not waterproof!
2. **Insert 4 AA ALKALINE batteries (not included) into the Battery Compartment.**
3. **Signal Reception.**
Turn on the Radio and move it around to various locations and positions on the wall to determine a suitable location that provides good reception.
Avoid locations that lie directly in the path of the shower stream.
4. Before operating unit, please remove the plastic strip from the LCD Display and remove the cardboard insert inside the CD Door.

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

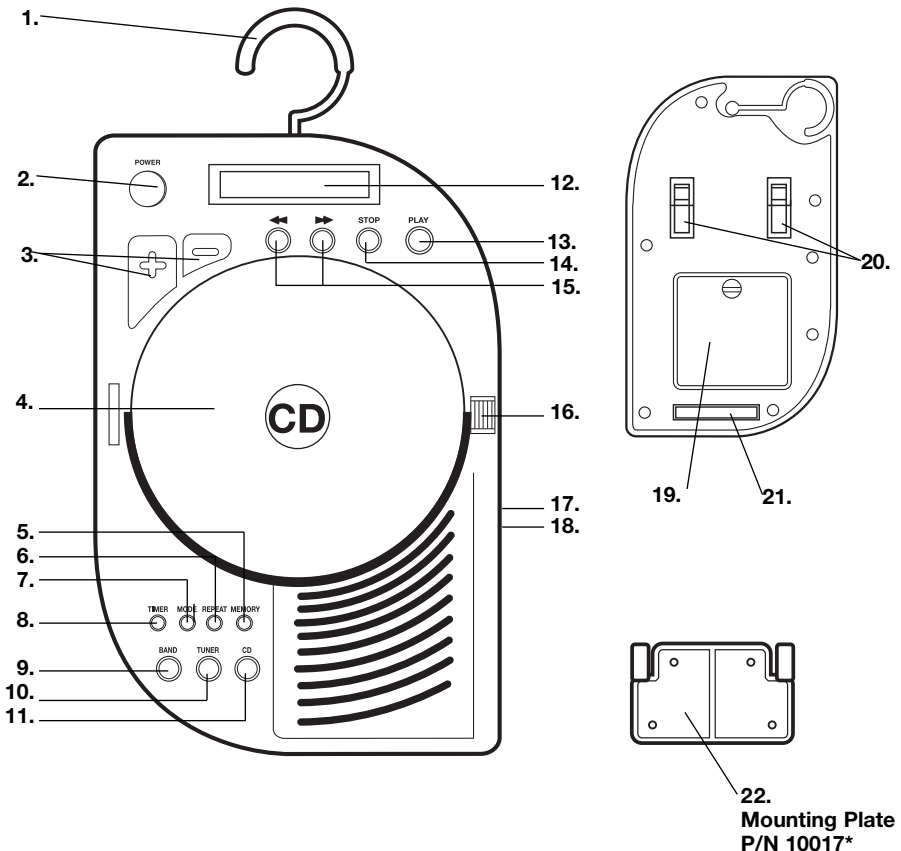

OPERATING INSTRUCTIONS (Continued)

1. **Swivel Hanging Hook.** Used to hang unit around shower head. Fits most standard shower heads. (P/N 10018*)
2. **POWER Button.** Press to turn the power: ON or OFF.
3. **VOLUME Control Buttons.** Press to adjust sound level: UP (+) or DOWN (-).
4. **CD Door.**
5. **MEMORY (Clock Adjust) Button.** Program Setting/Clock or Timer adjusting.
6. **REPEAT/M-UP. In CD Mode:** Press to repeat one or all tracks while CD plays. **In RADIO Mode:** Press M-UP to select a stored radio station.
7. **MODE Button.** Press to change the Display as shown: Radio Frequency, Clock, Timer, or CD Remaining Time, Clock, Timer.
8. **TIMER ON/OFF Button.** Press to select Timer function.
9. **BAND Select Button.** Press to select Radio Band: FM or AM.
10. **TUNER Select Button.** Press to set the unit to RADIO Mode.
11. **CD Select Button.** Press to set the unit to CD Mode.
12. **LCD Display.** Shows various functions in all Modes.
13. **PLAY/PAUSE Button.** Press to begin CD playing or to pause.
14. **STOP Button.** Press to stop CD play.
15. **TUNING/SKIP/TIMER Buttons (▶▶| |◀◀).** Press to skip/search ▶▶| forward or |◀◀ backward while in CD Playing Mode. Press to search radio station ▶▶| upward, or |◀◀ downward while in RADIO Mode. Press to select time while setting Clock or Timer.
16. **Latch.** Press to open the CD Door.
17. **DC Jack.** (Input DC 6V, 500 mA) . Used to connect AC adapter. (Not included.) **Do not use in shower/sauna.**
18. **EARPHONES Jack.** Connect headphones here for private listening. (Not included.)
19. **Battery Door.** Unscrew to insert batteries. (P/N 10019*)
20. **Mounting Plate Slots.** For attaching the Mounting Plate.
21. **Slot.** For attaching CD/Radio to the Stand.
22. **Mounting Plate.** Used to mount the unit on the wall. (P/N 10017*)

*Color reference: BL, GY, OR, PB, PL, RD.

 
USING THE WET TUNES™ STAND

TO ATTACH: Lower Wet Tunes™ CD/Radio onto Stand pressing it downward against the Spring Loaded Bar. Match the Slot on the Radio with the Hooked Tab on the Stand, pushing unit backward and into Slot, then lifting up slightly until it clicks into place.


TO RELEASE: Push downward on the Radio and pull it forward and off of the Stand.

*Color reference:

BL, GY, OR,
PB, PL, RD.

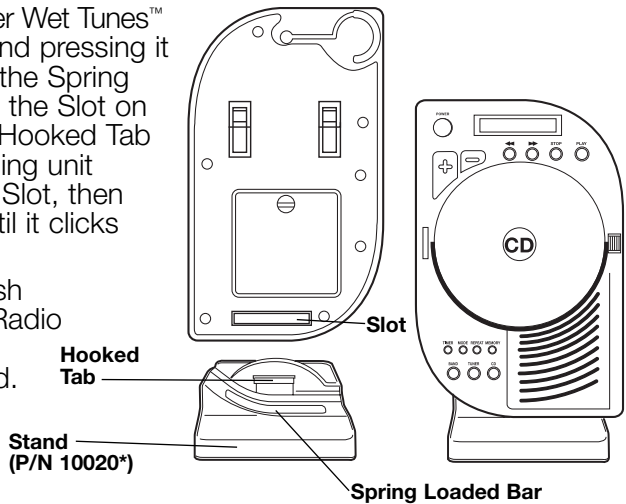

FRONT PANEL DISPLAY

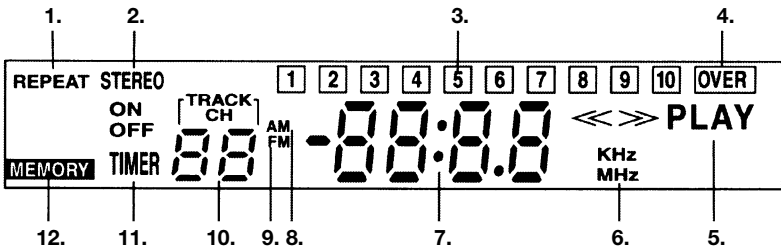 


1. **REPEAT.** Repeats entire CD.
 REPEAT (flashing). Repeats current playing track.
2. **STEREO.** Lights when the received station is broadcasting in stereo.
3. **CD TRACK Indicator.** Flashing number indicates current CD track.
4. **OVER.** Flashes when current CD track is above the number 10.
5. **PLAY.** Lights when CD is playing.
6. **KHz/MHz Indicator.**
7. **TIME/STATION.** Shows CD playing time or current radio station.
8. **AM Indicator.** Lights when AM band selected.
9. **FM Indicator.** Lights when FM band selected.
10. **TRACK/CH.** Shows CD track number and preset radio station.
11. **TIMER ON/OFF.** Lights when setting Timer function.
12. **MEMORY Indicator.** Lights when programming CD Player and when presetting radio stations.

POWER ON

When battery is connected for the first time or battery has been reinstalled:

 1. The LCD Display shows the following:



2. Power ON Button is pressed on, the unit defaults to TUNER Function, FM band.

Afterward when the Power ON is pressed on, the previously chosen function will be displayed.

CLOCK SETTING

1. Press MODE Button, to display Clock.

 
2. Press MEMORY Button, HOUR digit will flash.

Press [▶▶] Forward / [◀◀] Backward Button to set the hour on the Clock, watching for "AM" or "PM."



3. Press MEMORY Button again, MINUTE digit will flash.

Press [▶▶] / [◀◀] Button to set the minute.




4. Press MEMORY Button once more, flashing stops and the time is set.

NOTE: If Button is not pressed for several seconds, this mode is released automatically.

TIMER OPERATION

The Timer Function allows you to program the Radio to automatically turn on/off at a set time.

 Timer Setting:




1. Press MODE Button to display the Clock.

2. Press MODE Button again, to set the TIMER ON Indicator flashing, then press the MEMORY Button until the HOUR digit flashes.

Press [▶▶] / [◀◀] Button to select the desired hour.


Press the MEMORY Button again, and the MINUTE digit will flash.

 Press the [▶▶] / [◀◀] Button to select the desired minute. This will be the time the CD/Radio will turn on.



TIMER OPERATION (Continued)

 3. Press MODE Button again, the TIMER OFF is shown:




4. Press the MEMORY Button until the HOUR digit flashes. Press [▶▶] / [◀◀] Button to select the desired hour. Press the MEMORY Button again, and the MINUTE digit will flash. Press the [▶▶] / [◀◀] Button to select the desired minute. This will be the time the CD/Radio will turn off.

5. Press MODE Button to return to Display.


NOTE: If Button is not pressed for several seconds, this mode is released automatically.

TO ACTIVATE TIMER FUNCTION

 1. Press MODE Button, the Clock will be displayed:



 2. Press TIMER Button, the TIMER Indicator appears on the LCD Display.




3. The TIMER will turn on the function last used, either the last radio station will broadcast or the last CD setting will play.

VOLUME CONTROL

Adjust the VOLUME UP (+) / DOWN (-) Button to a comfortable listening sound level.

RADIO OPERATION

 1. Press POWER Button to turn unit on.
2. Press the TUNER Button to select RADIO Mode.



3. Press and release the BAND Button to select desired radio station (FM/AM).
4. Press and hold the TUNING / SKIP (▶▶|◀◀) Button briefly to search up and down (Auto Scan) for the next receivable station.
5. Press and release TUNING / SKIP (▶▶|◀◀) Buttons to select the desired radio station.

RADIO STATION MEMORY PRESETS

 
You can store up to 20 FM and 20 AM favorite stations in memory.

1. Select the desired radio station as described above.
2. Press MEMORY Button on main unit, MEMORY Indicator flashes on the LCD Display.

NOTE: If Button is not pressed for several seconds, MEMORY ENTRY Mode is released automatically.



3. Press M-UP Button to select CH to store station into.
4. Press MEMORY Button again to register.




5. Repeat steps 1 - 4 store additional radio stations.



TO RE-CALL STORED PRESET STATION

 1. Press TUNER Button to select RADIO Mode.
2. Press BAND Button to select AM or FM.
3. Press M-UP Button to select desired stored preset station.




CD OPERATION


1. Press POWER Button to turn unit ON.
2. Press the CD Button to select CD Mode. Press the OPEN/CLOSE Button to open the CD Door; insert a CD disc by gently pressing on the center part of the disc, so that it locks into place. With the label side facing forward, close the CD Door.
3. Press PLAY/PAUSE ►|| Button. The LCD Display will show the first track number and play time will appear on the LCD Display and the CD will begin to play.



 NOTE: If there is no disc in the CD Compartment and CD select Button is pressed. The LCD will show “No disc.”




4. Press PLAY/PAUSE ►|| Button again to PAUSE playback temporarily. The LCD Display will show the following:

 

During PAUSE, the PLAY and playing time will flash. Press it again to resume playback.

5. Press and release the SKIP ►►| (Forward) or |◄◄ (Backward) Button to skip forward or backward to the desired track.

 NOTE: If batteries are low, it may still play Radio but not CD Player and Display may show:




Try replacing with fresh, new batteries.

MEMORY CD PLAY FUNCTIONS


The CD Player can be programmed to play up to 20 tracks in the order desired.

 1. Press the POWER Button to turn ON, and insert a disc.
2. Before setting, CD PLAY Function should be set to STOP Mode.
3. Press MEMORY Button to select program mode, MEMORY Indicator appears on the LCD Display and TRACK & MEMORY Indicator are flashing. The LCD Display shows:




NOTE: If Button is not pressed for several seconds, the MEMORY PROGRAM Mode is released automatically. If this occurs before you have completed programming, simply press MEMORY again to advance to where you left off.

 4. Press SKIP ►►I (Forward) Button to select track number into memory.
5. Press MEMORY Button to store the track.



 6. Repeat steps 4 - 5 to program additional tracks up to a maximum of 20 tracks.
7. Press PLAY/PAUSE ►►II Button to start MEMORY Play. The CD Player will play back the tracks in the order programmed.




IMPORTANT: If the STOP KEY (■) is pressed at any time during Steps 3 - 6 then all memory is cleared.


INFORMATION CONCERNING COMPACT DISCS



 - 1. Usable compact discs.** Use a compact disc bearing the mark as shown:
- 2. Note on handling discs.** Removing the disc from its storage case and loading it.

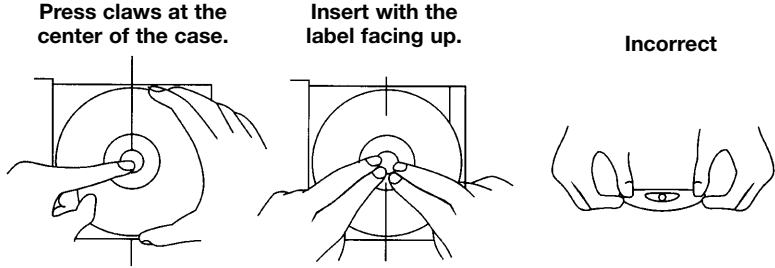

- Lift out without touching the recorded surface. Press the disc gently to insert it.
 - Do not touch the rainbow color reflecting recorded surface.
 - Do not stick paper or write anything on the label surface.
 - Do not bend the disc.
- 3. Storage.** For storage, be sure to return a disc to its case.
 - Do not expose discs to direct sunlight, high temperatures such as from a heater, high humidity, or dusty places.
 - 4. Cleaning a disc.** Before operation, wipe off dust, dirt and fingerprints on the surface with a soft cloth. The disc should be cleaned from inward to outward. Never use thinner, benzene, analog record cleaner or anti-static spray.

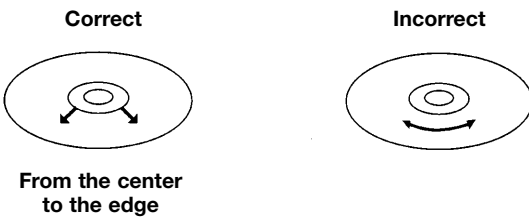 


NOTE: NEVER PUT YOUR FINGERS INTO THE CD COMPARTMENT WHEN CLOSING THE CD DOOR.

INSTALLATION



WALL MOUNTING WITH ADHESIVE

 1. Select a spot on the wall that is as smooth as possible, such as a smooth ceramic tile. Thoroughly clean the spot of all soap, oil or other films using a household cleaning solvent such as Acetone or nail polish remover. DO NOT use the tile cleaner or other wax-based substances. Allow area to dry completely. Room temperature should be at 60 to 70°F.
2. For best results, hold adhesive tube (supplied) at a 45-degree angle and apply sealant to Mounting Plate, approximately 1/8" bead and 1/4" from edges. Use entire contents. If additional adhesive is required, use silicone caulking compound or you may order extra adhesive packets. (P/N 01005)
3. Place Mounting Plate against clean wall surface using enough pressure to displace air, but not adhesive.
4. Allow adhesive to cure for 24 hours.
5. Slide the Radio onto the secured Mounting Plate.

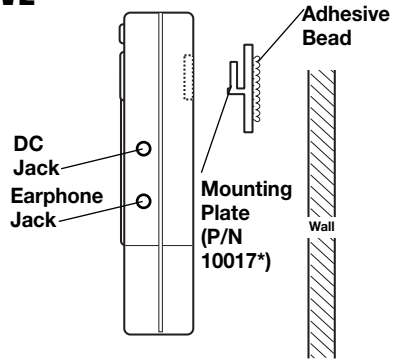

WALL MOUNTING WITH SCREWS

  1. Place Mounting Plate against a clean wall surface and mark the spots on the wall where you will be drilling. Remove the Mounting Plate from the wall.
2. Drill 4 holes in the wall that match the placement of the holes in the Mounting Plate.
3. Insert a Screw Socket into each of the 4 holes.
4. Place Mounting Plate against the wall in the correct position and drill in the 4 Screws.
5. Slide the Radio onto the secured Mounting Plate.

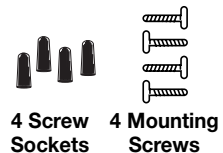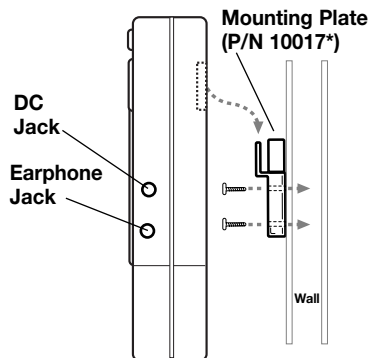

*Color reference: BL, GY, OR, PB, PL, RD.

ONE-YEAR LIMITED WARRANTY

This Salton, Inc. product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Some states do not allow the exclusion or limitations of implied warranties or consequential damages, so the above limitations or exclusions may not apply to you.

Salton, Inc. is not responsible or liable for indirect, special or consequential damages arising out of or in connections with the use or performance of the product or other damages with respect to loss of property, or loss of revenues or profit.

Legal Remedies: This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable unit (at Salton, Inc.'s option) when the product is returned to the Salton, Inc. facility listed below. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

If service is required, you should first call toll-free 1-800-233-9054 **between the hours of 8:00 am and 5:00 pm Central Standard Time** and ask for **CONSUMER SERVICE**. Please refer to Model WT51 when you call.

In-Warranty Service for a product covered under the warranty period, no charge is made for service and return postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Call for return authorization.

Out-of-Warranty Service: There will be charges rendered for repairs made to the product after the expiration of the aforesaid one (1) year warranty period, after purchaser is advised appropriately. Include \$6.00 (U.S.) for return shipping and handling.

Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your unit: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; **a copy of your sales receipt or other proof of purchase to determine warranty status.** C.O.D. shipments cannot be accepted.

Return the appliance to: ATTN: Repair Department, Salton, Inc.
708 South Missouri St. Macon, MO 63552

For more information on Salton, Inc. products, visit our website:
<http://www.salton-maxim.com>, or email us at: salton@saltonusa.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>