

FARBERWARE®

SPECIAL SELECT



USE & CARE INSTRUCTIONS

4-SLICE WIDE MOUTH TOASTER

FOR MODELS: FST400M (White), FST400RM (Red),

FST400BM (Black), FST400CBM (Cobalt Blue)

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the **CANCEL** Button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if Toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when Toaster is plugged in.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Use and Care Guide before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. Do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
6. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
7. Do not use this appliance in an unstable position.
8. Use the Toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.
9. If this appliance begins to malfunction during use, immediately lift each Toasting Lever manually and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.

WARNING: ELECTRICAL SHOCK HAZARD. Never attempt to dislodge food inside the Toaster while the Toaster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.

CAUTION: This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.

CAUTION:

DO NOT toast pastries with runny fillings or frosting.

DO NOT toast torn slices of bread.

DO NOT place buttered bread or wrapped food into the Toaster.

DO NOT toast small-size breads, mini-baguettes, breadsticks, etc.

POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.


Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

GETTING TO KNOW YOUR **FARBERWARE®** FST400M (White), FST400RM (Red), FST400BM (Black), FST400CBM (Cobalt Blue) 4-SLICE WIDE MOUTH TOASTER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

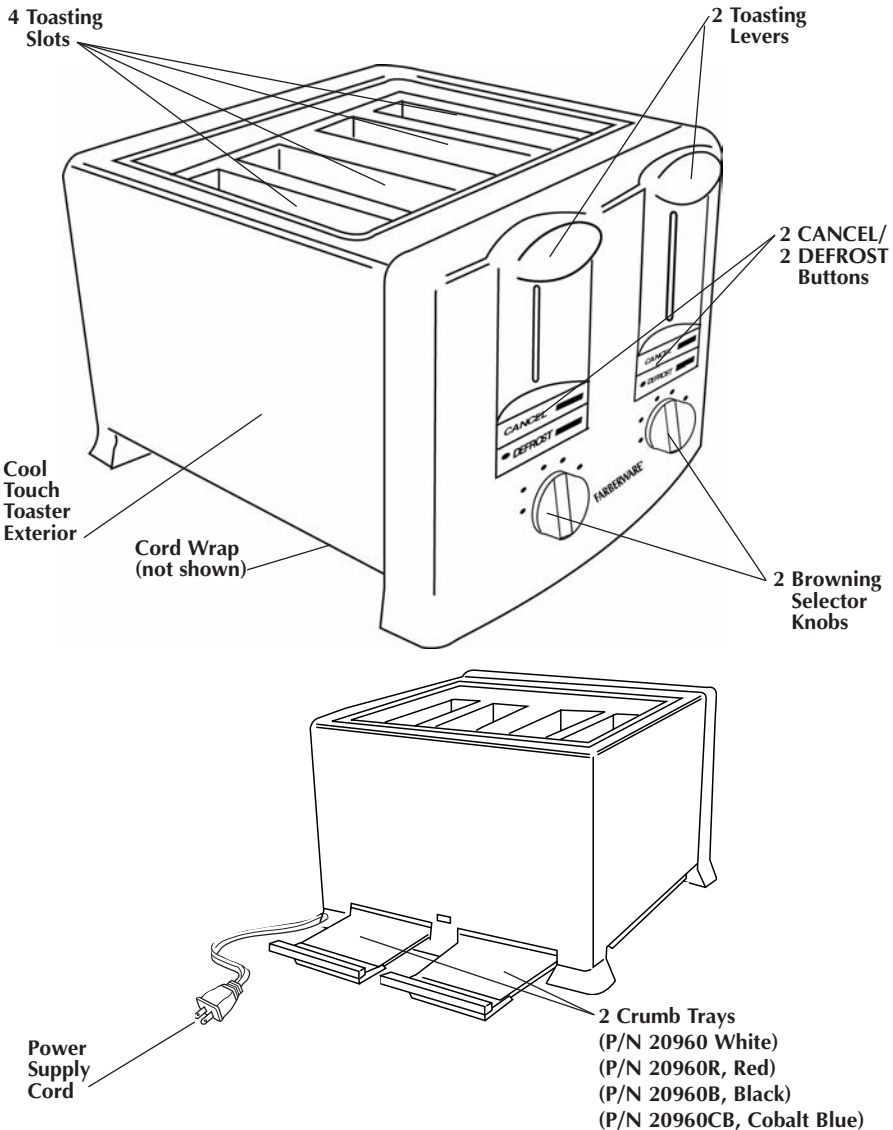

OPERATING INSTRUCTIONS


BEFORE FIRST USE

1. Carefully unpack your Toaster and remove all packaging materials.
2. To remove any dust that may have accumulated during packaging, simply wipe the Toaster exterior with a clean, damp cloth.
3. Do not use abrasive cleansers.
4. Do not put the Toaster, cord or plug in water.
5. Plug power cord into a 120V AC electrical outlet.
6. Before toasting for the first time, operate both pairs of the Toasting Slots without bread and with both Browning Selector Knobs set at Dark (#6), the maximum setting. This will help to burn off any dust or manufacturing oils, etc. which may have accumulated on the elements. The new elements may give off an unpleasant smell but this is normal for a new Toaster. Make sure the room is well ventilated while doing this.

SELECTING TOAST COLOR

Both Browning Selector Knobs are located on the front of your Toaster. Adjust one or both of the Knobs to the desired toast color: Light (#1) is for warming and very light toasting; Dark (#6) for dark toasting. The numbers are a guide to help you select your desired color (the higher the number, the darker the toast).


The first time you toast, it is best to use all Toasting Slots; position each Knob mid-way between Light and Dark settings (between #3 and #4); then adjust each subsequent toasting to your preference.

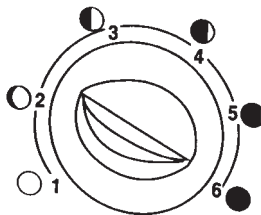

CANCEL BUTTONS

There are 2 CANCEL Buttons, one for each pair of Slots.

If you wish to stop the toasting cycle before it is complete, press the CANCEL Button that corresponds to the appropriate Slot(s). The elements will be turned off, the toast or toaster food will pop up.

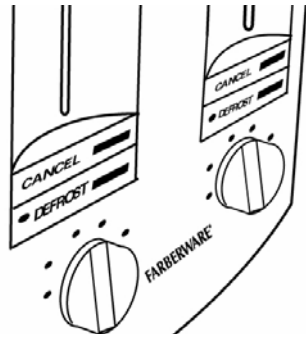

DEFROST BUTTONS

There are 2 DEFROST Buttons, one for each pair of Slots.

Leave the Browning Selector(s) mid-way between Light and Dark settings (between #3 and #4), place the frozen bread or toaster food into the Toasting Slots, lower the Toasting Lever, then press the DEFROST Button(s) that correspond to the appropriate Slots. The DEFROST Light(s) will illuminate, and will stay on until defrosting/toasting is complete. The toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

NOTE: With the flexibility of dual Selectors, you are able to toast frozen bread in 1 pair of Toasting Slots and unfrozen bread in the 2nd pair of Toasting Slots at the same time.

TOASTING BREAD

1. Place your Toaster on a flat, level surface.
2. Plug power cord into a 120V AC electrical outlet. The unit may emit an odor and / or smoke during the first few uses from oils used in manufacturing. This is normal for a new Toaster.
3. Adjust the Browning Selector Knob(s) to the desired lightness or darkness. Turn each Knob to the left for Light toast (#1) or to the right for Dark toast (#6).
4. Remove all protective wrappings from food before placing in Toasting Slots.
5. Avoid toasting torn slices of bread and broken pastries, which may get lodged in Toasting Slots.
6. Place bread or toaster food into one or both pairs of Toasting Slots and push down to lower the corresponding Toasting Lever(s). Centering Guides will automatically center bread for even toasting. When toasting a single slice, the bread may be placed in either Toasting Slot, but may toast slightly darker on the inside than on the outside.

TOASTING BREAD *(Continued)*

NOTE: The Toasting Lever(s) will not lock down unless the Toaster is plugged into an electrical outlet.

7. Toast will automatically pop up when the selected color is reached.
8. Unplug cord from wall outlet when not in use.

NOTE: To prevent a fire hazard, never place bread over the opening of the Toaster, but always place it into the Toasting Slot(s).

NOTE: Do not operate the Toaster unless both Crumb Trays are in position and correctly fitted.

9. To interrupt toasting, press either one or both of the corresponding CANCEL Buttons.

BAGEL AND ENGLISH MUFFIN TOASTING INSTRUCTIONS

1. Plug power cord into a 120V AC electrical outlet.
2. Set one or both of the Browning Selector Knobs to the color desired. For the first use, set the Toast Browning Selector(s) midway between Light and Dark settings (between #3 and #4).
3. Slice bagel or English muffin in half; place one half in each Toasting Slot with the cut sides facing the center of the Toaster.
4. Push down to lower the corresponding Toasting Lever(s). Centering Guides will automatically center for even toasting.

NOTE: Use any slot when toasting only half a bagel or English muffin. Use slices that fit freely into Toasting Slots. The Automatic Centering Guides hold food upright for uniform side-to-side toasting.

5. When the bagel or muffin is done, the Toasting Lever will pop up. The Toaster will shut off automatically.
6. To interrupt toasting, press either one or both of the corresponding CANCEL Buttons.

CONVENIENCE FOODS TOASTING

Extra wide Toasting Slots accommodate many varieties of packaged convenience food available today, both frozen and non-frozen (shelf pastry).

Since toaster foods and individual tastes vary, it is difficult to recommend exact Browning Selector settings. However, after a little experimentation you will discover the best setting for your needs. You may also wish to refer to the heating instructions on food packaging.

PASTRY

For best results, follow the instructions printed on the pastry package. If the package does not have instructions, position the Browning Selector Knob mid-way between Light and Dark settings (between #3 and #4). Some pastries may require a second toasting cycle.

NOTE: Do not use this Toaster for toasting pastry items with runny-type frosting or open fillings.

NON-FROZEN SHELF PASTRY

Move the Toast Browning Selector to a lighter setting. For thicker convenience foods, it may be necessary to adjust the Toast Browning Selector clockwise for a longer toasting cycle.

FROZEN FOODS

1. Plug power cord into a 120V AC electrical outlet.
2. Set one or both of the Browning Selector Knobs to the color desired. For the first use, set the Toast Browning Selector(s) mid-way between Light and Dark settings (between #3 and #4).
3. Place the frozen bread or toaster food into the Toasting Slot(s).
4. Push down to lower the corresponding Toasting Lever(s); then press the DEFROST Button(s). The DEFROST Light(s) will illuminate, and will stay on until defrosting and toasting is complete. The toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

NOTE: With the flexibility of dual Selectors, you are able to toast frozen bread in 1 pair of Toasting Slots and unfrozen bread in the 2nd pair of Toasting Slots at the same time.

5. To interrupt toasting, press either one or both of the corresponding CANCEL Buttons.

REMOVING LODGED TOAST OR TOASTER FOOD

If a piece of toast or toaster food becomes lodged in the Toaster, **unplug the Toaster and allow to cool.** Press the corresponding Toasting Lever down. Turn the Toaster upside down, and shake the toast/toaster food loose.

IMPORTANT: Never use a fork or sharp-edged utensil to remove toast because that may damage the heating elements or cause injury.

AUTOMATIC CENTERING GUIDES

Lowering either one or both of the Toasting Levers closes either one or both of the Centering Guides, and holds the bread or toaster food centrally in the Toasting Slots.

IMPORTANT POINTS

1. Remove all protective wrappings from food before placing in Toasting Slots.
2. For best results, clean Crumb Trays frequently.
3. Different breads require different color settings. Press the appropriate **CANCEL** Button at any time to check toast color.
4. Do not block top openings. Do not place any object over the top openings.
5. Do not toast buttered bread or buttered pita bread. Melted butter will cause fire.
6. Bread which has been toasted but not buttered may be reheated. Use a lighter setting and watch it carefully.
7. When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
8. Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted on the lighter settings.
9. Never immerse Toaster in water.
10. **Never use a fork or sharp-edged utensil to remove toast because that may damage the heating elements or cause injury.**

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

TO CLEAN

DO NOT IMMERSE IN WATER OR OTHER LIQUID.

Always unplug the Toaster and allow to cool fully before cleaning.

Crumb Trays: The Crumb Trays are located at the bottom of the Toaster. For ease in cleaning, grasp the Crumb Tray Handle and pull all the way out. Brush crumbs from the Trays and, if necessary, wipe with a clean, damp cloth. Always dry the Trays thoroughly before replacing. When replacing either of the Trays, be sure to push firmly so that it is fully inserted in the bottom of the Toaster.

Exterior: Wipe surfaces with a clean, damp cloth. Do not use abrasive cleaners, as they may scratch the surface.

TO STORE

Unplug unit, allow to cool, and clean before storing. Store in its box in a clean, dry place. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Wrap on the bottom of the Toaster. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

FARBERWARE®

ONE-YEAR LIMITED WARRANTY

Warranty: This Farberware® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

SERVICE AND REPAIR: SHOULD THE APPLIANCE MALFUNCTION, YOU SHOULD FIRST CALL TOLL-FREE 1 (888) 881-8101 BETWEEN THE HOURS OF 9:00 AM AND 5:00 PM CENTRAL STANDARD TIME AND ASK FOR CONSUMER SERVICE STATING THAT YOU ARE A CONSUMER WITH A PROBLEM. PLEASE REFER TO MODEL NUMBER: FST400M (White), FST400RM (Red), FST400BM (Black), or FST400CBM (Cobalt Blue) WHEN YOU CALL.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (888) 881-8101.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include **\$10.00** (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1-888-881-8101
E-mail: Farberware-electric@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products, visit our website: www.eSalton.com

©2004 Salton, Inc. All rights reserved.

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

08/04 PRINTED IN CHINA

Download from Www.Somanuals.com. All Manuals Search And Download.

P/N 61532

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>