



SI Products  
Service Center

1.888.856.6781  
8:30a.m. – 7:00p.m. (EST)  
M – F

Mail To: SI Products  
Consumer Relations  
Service Center Dept. 168  
3000 Pontiac Trail  
Commerce Township, MI  
48390

e-mail:  
cservice@siproducts.com

#### ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

**SI PRODUCTS Consumer Relations  
Service Center Dept. 168  
3000 Pontiac Trail  
Commerce Township, MI 48390**

No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: [www.siproducts.com](http://www.siproducts.com)

THE SHARPER IMAGE ® name and logo are registered trademarks.  
Marketed and distributed by SI Products under license. ©The Sharper Image.  
All rights reserved.

IB-KPW140

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



# Wine Preservation System



**Instruction Manual  
and Warranty Information**

KP-W140

**1** year  
limited warranty



### Preserve the rich taste of your wines for days.

Thank you for purchasing The Sharper Image® Wine Preservation System.

This product, along with the entire The Sharper Image® collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. Keep your wines fresh and tasting great days after you pop the cork. The Sharper Image® Wine Preservation System maintains the original flavor of the wine by creating an air tight seal so you can enjoy it just as you did when you opened it the first time.

## IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

### READ ALL INSTRUCTIONS BEFORE USING

## DANGER - TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in a wet or moist condition.


**Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.**

## WARNING - TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY TO PERSONS:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Extreme caution is necessary when this appliance is used by or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electrocution or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.

### SAVE THESE INSTRUCTIONS

Fig. 1

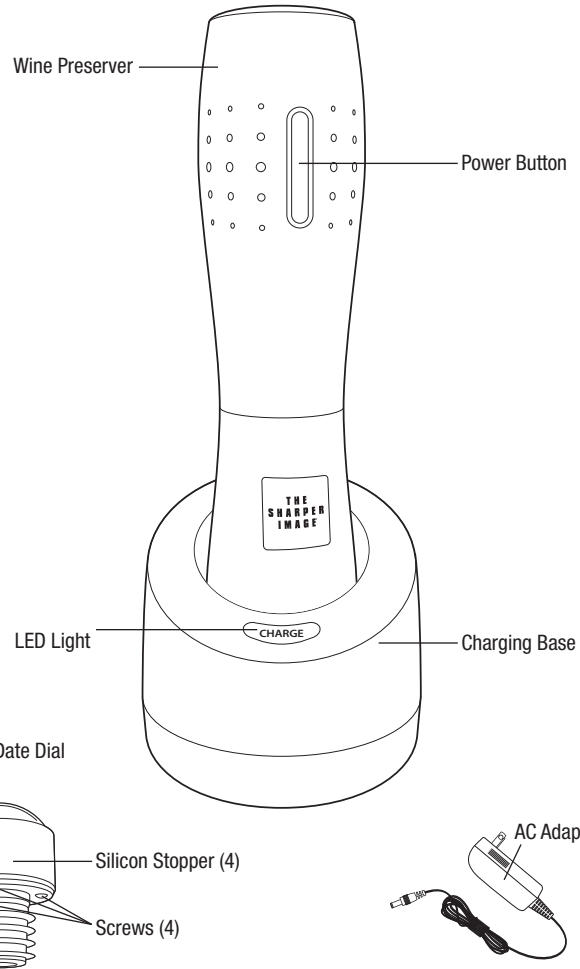

## Wine Preservation System – Operation Instruction

We recommend that you charge your Wine Preserver for at least 12 hours before using for the first time. Please follow the instructions for recharging as stated below:

### 1) Charging your Wine Preserver

- Plug end of the adaptor cord into the recharging base and the A/C end into an electrical outlet.
- Place the motorized wine preserver onto the charging base making sure that it is firmly in position and that it is in full contact with the recharging connection. (Fig.1)
- Press the power button once and a red light turns ON indicating that the unit is charging. It will take approximately 8-10 hours to recharge your Wine Preserver.
- When the wine preserver is fully charged, the LED light becomes green. (Fig.1)

### 2) Date Dial

- Press and hold for 0.5 second on the screen of the LCD date counter to start the countdown.
- The LCD initially shows "0" with a single increment every 24 hours.
- It will automatically change to the 1st day after 24 hours and change to the 2nd day after 48 hours and so on, up until the 9th day.
- Press and hold for 0.5 second on the screen of the LCD date counter to turn off.

**Note:** A 3V button cell battery comes pre-installed into the Date Dial. We recommended that you always keep the date dial off while not in use for energy saving.


### Battery Replacement

- Unscrew the four screws from its end cap to remove its top cover as shown attached.
- Take out the date counter module by releasing the snaps and replace the battery.
- Use a single CR927 3V type battery per module only.

### 3) Sealing the Wine Bottle

- Insert the stopper into the mouth of the bottle, pushing down until it fits firmly.
- Position the wine preserver over the wine bottle and stopper and push down gently. (Fig. 2)
- Press the power button, the battery-operated wine preserver automatically removes the air and the blue back light illuminates to indicate the unit is powered on. (Fig.2)
- When the seal is completed, the wine preserver will automatically shut off.
- Remove the wine preserver from the bottle. Press the date dial for 0.5 second; it will automatically count and change from the 0 day to the 9th day for each 24 hours.
- Press and hold the date dial to turn off.

**NOTE:** Always return the wine preserver to the charging base when done. This will protect and charge the unit while not in use.

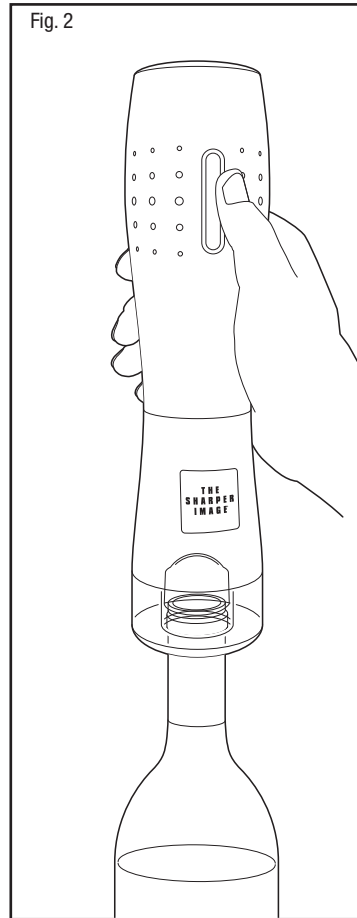

## MAINTENANCE

### To Store

You may leave the unit on display or you can store it in its box in a cool, dry place.

### To Clean

Use only a soft dry cloth to clean the enclosure of the unit. NEVER use liquids or abrasive cleaner to clean.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>