

Sunbeam

Oscillating Digital Ceramic Heater

Instruction Booklet

HE2800

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Safety Precautions for your heater	2
Sunbeam's Total Safety System	3
Features of your Oscillating Digital Ceramic Heater	4
Using your Oscillating Digital Ceramic Heater	6
Resetting the safety auto shut off	8
Care and cleaning	8

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری یکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenli önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Sunbeam's Safety Precautions

- This heater becomes hot during use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (90cm) away from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left unattended.
- Always unplug the heater when not in use.
- Do not use outdoors.
- Do not run the cord of the heater under carpeting. Do not cover the cord with throw rugs, runners or other floor coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- Do not locate the heater immediately below a socket outlet.
- Do not use this heater in the immediate surrounds of a bath, shower, laundry area or swimming pool.
- Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause electric shock or fire, or damage to the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, such as beds, where opening may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where petrol, paint or flammable liquids are used or stored.

Important instructions – retain for future use.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Sunbeam's Total Safety System

Safety auto shut off

Your Sunbeam Oscillating Digital Ceramic Heater is equipped with a safety system that detects any abnormally high temperatures within the heater and automatically shuts it off to prevent overheating. This first stage of the safety system requires the user to manually reset the heater for it to resume operation.

For instructions on how to reset your heater, see page 8.

Thermal back-up fuse

In addition to this automatic cut off, your heater contains a thermal back-up fuse to provide additional back-up protection. If the heater is in an overheat situation, the back-up fuse will open, stopping the power flow to the ceramic heating discs and fan. This fuse cannot be reset, so in the event that the back-up fuse is activated, the heater will need to be replaced.

Features of your Oscillating Digital Ceramic Heater

Control panel

The compact control panel houses all of the buttons required to operate the various functions of the heater.

Mode button

Pres the mode button to select the desired operating mode: Low Heat, High Heat or Auto mode.

Auto mode

 
Select the AUTO mode to operate the thermostat. Use the Temp + and – buttons to select your desired temperature. Once the set temperature is reached the thermostat will cycle the heater on and off to maintain it.

 
Timer function

The timer function allows you to set the heater to switch itself off automatically after a specified period of time, from 1 to 8 hours.

Oscillating function

The heater oscillates 120° on the base, providing greater heat coverage to gradually warm the entire room.

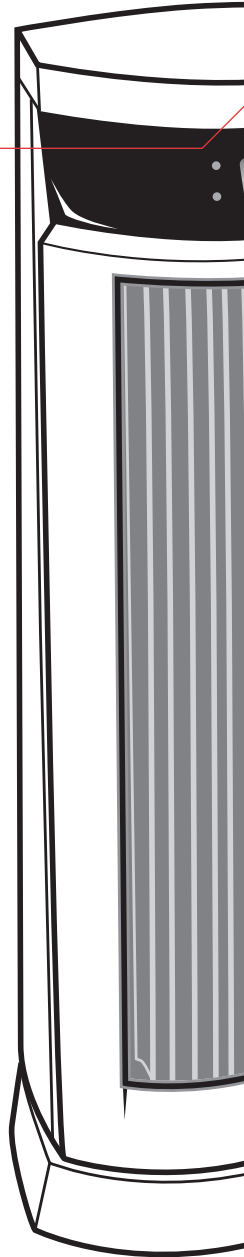

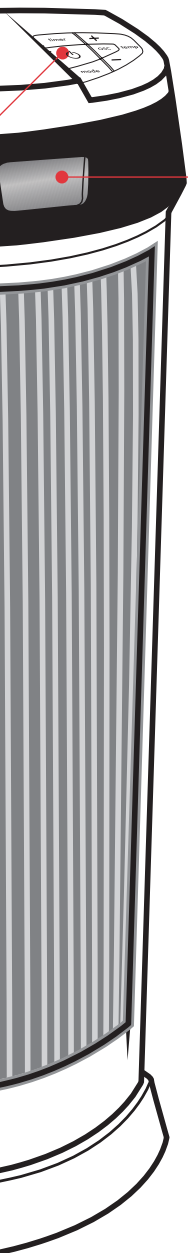

LCD screen

The LCD screen displays the current settings, including the ambient room temperature, the selected mode or heat setting, and the timer icon if activated. It features a blue backlight for easy adjustment in the dark.

Remote control

 
The handy remote allows you to control the heater from wherever you are in the room. Switch the unit on or off, adjust the heat or temperature setting, activate the oscillation, or set the timer, all at the touch of a button. Batteries are included.

Instant tip over cut out


The instant tip over cut out interrupts the power to the heating element and fan if the heater is accidentally tipped over. The heater will not resume operation until it is replaced in the upright position.

Safety auto shut off

The safety auto shut off system detects any abnormally high temperatures within the heater and automatically switches it off to prevent overheating.

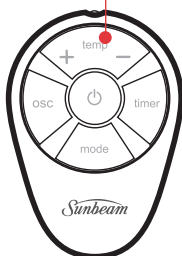

 Using your Oscillating Digital Ceramic Heater

1. Place the heater on a flat level surface and ensure that the air intake and air outlet are clear of obstructions.
2. Insert the plug into a 230-240V power outlet and turn the power on.
3. Move the on/off switch at the rear of the unit to the on (I) position. A beep will sound.
4. Press the power button  on the control panel to turn the heater on. The LCD will display the current room temperature and HIGH, indicating that it is operating in HIGH heat mode.

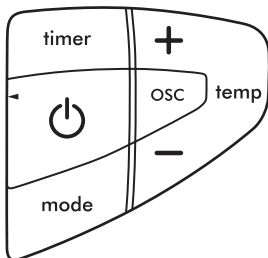 




Fig. 2

5. Press the MODE button to cycle through the various operating modes:
 - LOW – the heater will continuously run at its low wattage.
 - AUTO - the digital thermostat will cycle the heater on and off to maintain your selected temperature. See instructions on setting the digital thermostat below.
 - HIGH - the heater will continuously run at its high wattage.
6. To turn the heater off, press the power button  on the control panel. The heater will stop operating.
7. Move the on/off switch at the rear of the unit to the off position (O). Turn the power off and remove the plug from the power outlet when not in use.

Setting the digital thermostat

1. Press the mode button to select AUTO mode. AUTO will appear on the LCD screen, and the current room temperature will flash.
2. Use the Temp + and – buttons to select the desired temperature setting. SET, TEMP and the selected temperature will flash several times to indicate that the thermostat is set. The LCD will return to displaying the room temperature.
3. Once the room temperature reaches 3°C above the selected temperature, the heater will operate for a further 20 seconds and then cutout. When the room temperature drops below the set temperature, the heater will switch back on. The thermostat will continue to cycle the heater on and off to maintain your selected temperature.
4. To view the set temperature, press the Temp button. The set temperature setting will flash on the screen.
5. To turn the heater off, press the power button  on the control panel. The heater will stop operating.
6. Move the on/off switch at the rear of the unit to the off position (O). Turn the power off and remove the plug from the power outlet when not in use.

Using your Oscillating Digital Ceramic Heater (continued)

Activating the Oscillation function

Press the OSC button on the control panel or remote to activate the oscillation. The heater will continue to oscillate from side to side, distributing warm air around the room, until the OSC button is pressed again.

The body of the heater will stop oscillating in its current position. To align the heater body and base, press the OSC button to activate the oscillation, and press it again when the two parts are aligned.

Using the remote control

The buttons on the remote control function in the same way as the buttons on the control panel. It is powered by 2 x AAA batteries.

Note: when using the oscillating function in AUTO mode the heater will stop oscillating when the selected temperature is reached and the unit cycles off. It will resume oscillating when the heater cycles back on to maintain the selected temperature level.

Setting the timer

1. Set the heater to the desired heat or temperature setting as per the instructions above.
2. Press the timer button once to set the heater to switch off after one hour, twice for 2 hours and so on, up to 8 hours. The timer icon will appear on the screen, as shown in figure 3. The heater will continue operating for the selected number of hours and will then switch off automatically.



Fig. 3

Resetting the safety auto shut off

Your Oscillating Digital Ceramic heater is equipped with a safety system that detects any abnormally high temperatures within the heater and automatically shuts it off to prevent overheating. Should the safety auto shut off activate and switch the heater off, it will need to be reset.

To reset the heater:

1. Move the on/off switch at the rear of the heater to the off position (O).
2. Unplug the heater and wait 5-10 minutes for the unit to cool down.
3. After 5-10 minutes, plug the heater in again and operate as usual.

Care and cleaning

Ensure that the heater is switched off and disconnected from the power outlet before cleaning.

Carefully wipe the exterior of the heater with a soft damp cloth and dry thoroughly with a dry cloth.

Over timer dust may accumulate on the front vent of the heater, this can be removed by wiping with a damp cloth, or carefully going across the vent with a vacuum cleaner with brush attachment.

Do not use harsh or abrasive cleaners to clean your heater, as these will damage the surface.



is a registered trademark of Sunbeam Corporation Limited.

Made in China. Due to minor changes in design or otherwise, the product you buy may differ from the one shown in this leaflet.

Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2004.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771
Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand (09) 912 0747.



Consumer Hotline

Australia

1800 025 059

New Zealand

(09) 912 0747

www.sunbeam.com.au

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>