



Owner's Instructions

REFRIGERATOR MODELS: ARD251M ARD361M ARD560M

READ THIS INFORMATION

It will tell you how to operate and care for your refrigerator.

It also offers tips on how to get the best as well as lowest cost performance.

If you prefer ordering your own parts, use the enclosed list to find the part number. Do not use the illustration number.

For parts or service information, call Absocold Corporation: (800) 843-3714 or (765) 935-7501.

Record in the space provided below the serial number and model number of this appliance.

They are located on the serial plate affixed to the backside of the refrigerator or inside the refrigerator affixed to the inner liner surface on the right hand side.

Model # _____

Serial # _____

ONE FULL YEAR WARRANTY

Absocold Corporation guarantees to the original purchaser that this appliance will be free from defects in material and workmanship for a period of one year from the date of installation, or eighteen (18) months after receipt at destination, whichever is earlier, when this refrigerator is operated and maintained according to instructions attached to or furnished with this product.

FIVE FULL YEAR WARRANTY ON HERMETIC COMPRESSOR UNIT

Absocold Corporation additionally guarantees, to the original purchaser only, the hermetic motor (compressor) furnished as a part of this refrigerator for a period of five (5) years from the date of installation, or sixty-six (66) months after receipt at destination, whichever is earlier, when this refrigerator is operated and maintained according to instructions attached to or furnished with this product.

During the above warranty periods, Absocold Corporation and its authorized dealers or its representatives retain the option to repair or replace the product, free of charge, if installation is within the fifty (50) states and the District of Columbia. If installation is outside the fifty (50) states, the cost of installation is borne by the purchaser, and Absocold's warranty obligations hereunder shall be limited to furnishing all replacement parts and materials, freight prepaid, to the continental United States port designated by the purchaser.

In an effort to properly administer its warranty policy, Absocold Corporation or its representatives may require a proof-of-purchase document before authorizing service or repair to the appliance under this warranty.

Warranty service information is available by simply contacting Absocold Corporation at 1 (800) 843-3714 or by contacting the dealer from whom you purchased this product.

It shall be the responsibility of the purchaser to deliver any compact refrigerator or freezer of less than 4.0 cubic feet in capacity to the nearest authorized service station, as designated by Absocold Corporation or its representatives, to obtain service under this warranty.

Except as provided herein, Absocold Corporation makes no other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose.

This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Part No. 8336460118000B

(SR2505AS - SR3615AB - SR5611AW)

Absocold Corporation
P. O. Box 1545
Richmond, IN 47375

Printed in Mexico

THINGS YOU OUGHT TO KNOW WHEN YOUR REFRIGERATOR IS INSTALLED

INSPECT

Inspect for shipping damage. If unit is damaged or parts are missing, notify your Absocold dealer at once.

INSTALLATION REQUIREMENTS

Remove all packing material and tape. Install on a level floor or well-supported counter. Avoid any direct sunlight, heat source, or moisture. This refrigerator is designed to be *freestanding*—that is, the appliance is to be installed at least 1½" from the wall and the cabinet bottom is at least ¾" to 1" above the floor or carpet, in order to let the air circulate freely around the refrigerator. If this appliance is *recessed*, *built-in* or otherwise enclosed to restrict airflow, then all warranties stated herein are null and void.

ICE STORAGE COMPARTMENT

This compartment is designed for production of ice cubes and short-term storage. The temperature in the ice storage compartment doesn't get cold enough to store frozen foods safely.

ELECTRICAL REQUIREMENTS

120 volts, 60 Hz.

ELECTRICAL GROUNDING

(for 120-volt models only)

Must be grounded. Uses 110-120 volts, 60 Hz.

(60 cycles A.C.) Do not use extension cord. Use three-prong plug, with three-prong grounded wall outlet.

Unless the above grounding method is followed, you are not protected against severe or lethal shock, in the event of a short circuit of an electrical component or wiring of refrigerator.

CAUTION

Should you unplug refrigerator, allow at least three minutes before restarting in order to allow the start relay to function properly.

USE AND CARE INFORMATION

• TIPS ON EVERYDAY USE AND CARE

TO CONTROL TEMPERATURE: Start by setting control on No. 3. Wait 24 hours for refrigerator to cool. Higher number is colder. Fresh food section should be as cold as possible without freezing vegetables or milk. Adjust as necessary.

DEFROST: For the most efficient operation of your refrigerator, defrost it whenever a ¼"-thick layer of ice/frost forms (except for frost-free models). When defrosting, Turn off control. Remove all food from the refrigerator. Do not use heater devices to speed defrosting. Do not scrape or use sharp objects in the ice storage compartment. Let frost melt. Pan of warm water in ice storage compartments speeds defrosting. Empty defrost tray. Reset cold control. Replace food.

FOR ALL CLEANING: Mix 2 tablespoons baking soda or mild soap with 1 quart warm water. No strong cleaners, scouring powder or pads should be used. Do not put the defrost tray in the dishwasher. Vacuum the tubing on outside back when dusty.

• THINGS TO REMEMBER

1. Allow 24 hours for your refrigerator to reach a new temperature setting.
2. The motor will start and stop often. It must do so in order to maintain the temperature you select.
3. Keep your refrigerator reasonably level.
4. Unplug refrigerator before doing anything with its electrical system (even changing a light bulb).

• BEFORE CALLING FOR SERVICE

Check plug and outlet. Test outlet with lamp or other device. Be sure control is on. Read all Use & Care Information. Your questions may be answered. If not, find your model number (on upper back of refrigerator or inside the refrigerator affixed to the inner liner surface on the right-hand side). Refer your model number and the problem to Absocold Corporation at (800) 843-3714 or (765) 935-7501.

DANGER—ELECTRICAL SHOCK HAZARD. Disconnect power before servicing.

ENERGY SAVING TIPS - WAYS TO SAVE POWER, SAVE MONEY, AND STILL ENJOY YOUR REFRIGERATOR

- Reduce door openings.
- Close the door as soon as you can.
- Keep coils on back of the refrigerator clean.
- Adjust temperature control to warmer setting when practical.
- Don't put hot foods in refrigerator.
- Don't allow more than ¼" of frost to build up in the ice storage compartment.
- Keep your refrigerator away from stoves and other heat sources.

WARNING!

- Your refrigerator should be connected directly to a grounded electrical wall outlet. No extension cords, multi-connection bars, etc. should be used.
- In case of prolonged power outage or an electrical disconnect of any type, please check your refrigerator for spoiled food.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>