


# AMERICAN AUDIO

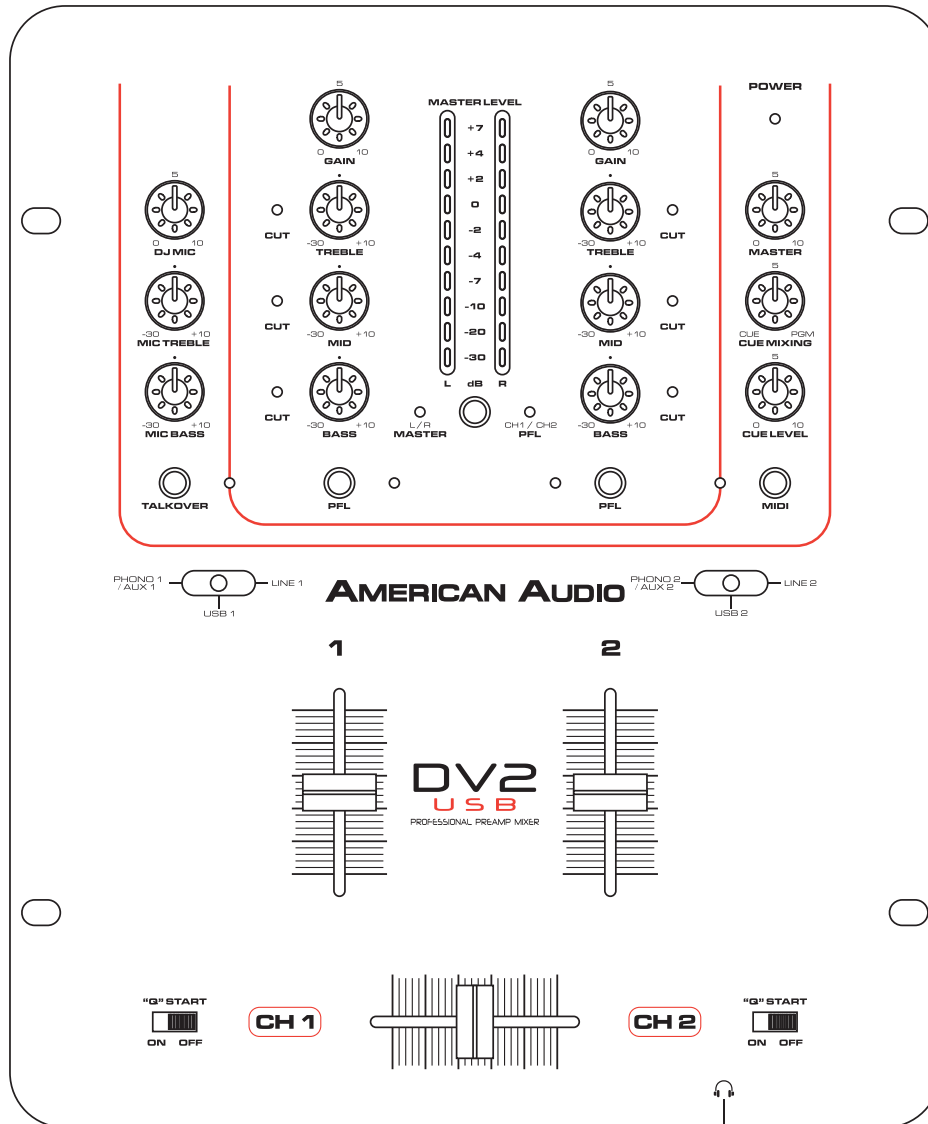

## DV2 USB

### Professional Preamp Mixer

Every DV2 USB has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your mixer for any damage and be sure all equipment necessary to operate the mixer has arrived intact. In case damage has been found or parts are missing, please contact our toll free customer support number for further instructions, please do not return the mixer to your dealer.

**Introduction:**

Congratulations and thank you for purchasing the American Audio® DV2 USB mixer. This mixer is a representation of American Audio's continuing commitment to produce the best and highest quality audio products possible at an affordable price. The DV2 USB comes with a 1 year limited warranty! Please read and understand this manual completely before attempting to operate your new mixer. This booklet contains important information concerning the proper and safe operation of your new mixer.

**Customer Support:**

American Audio® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your initial set up or operation. You may also visit us on the web at [www.AmericanAudio.us](http://www.AmericanAudio.us) for any comments or suggestions. Service Hours are Monday through Friday 8:00 a.m. to 4:30 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2941

E-mail: [support@americandj.com](mailto:support@americandj.com)

To purchase parts online visit <http://parts.americandj.com>

**Caution!** There are no user serviceable parts inside this mixer. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your mixer may require service, please contact American Audio® customer support.

**Do not discard the packing carton in the trash. Please recycle when ever possible.**

Please make any connections before you plug the mixer in. Be sure the Power switch is in the OFF position before connecting other devices to the mixer. All fader and volume controls should be set to 0 or minimum position, before the device is switched on. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch on the mixer immediately. The arising condensation of water might damage your device. Leave the device switched off until it has reached room temperature.

**Operating Determinations:**

- When installing this mixer, please make sure that the device is not exposed to extreme heat, moisture or dust!
- There should not be any cables lying around. Doing so endangers you as well as others.
- Do not operate the mixer in extremely hot (more than 30° / 100°F) or extremely cold (less than 5°C/ 40°F) surroundings.
- Keep the unit out of direct sunlight and away from heaters.
- Operate the mixer only after becoming familiar with its functions. Do not permit operation by persons not qualified for operating the mixer. Most damages are the result of unprofessional operation!

- For adult use only - Keep out of the reach of children.
- Be sure that the local power outlet match that of the required voltage of the unit.
- Disconnect from main power before making any type of connection.
- Do not attempt any service. There are no user serviceable parts inside.
- Never plug this mixer in to a dimmer pack
- Always be sure to mount this mixer in an area that will allow proper ventilation.
- Do not attempt to operate this mixer, if it becomes damaged in any way.
- Never operate this mixer when it's covers are removed
- To reduce the risk of electrical shock or fire, do not expose this mixer rain or moisture
- This mixer is intended for indoor use only, use of this product outdoors voids all warranties.
- During long periods of non-use, disconnect the mixer's main power.
- Always mount this mixer in safe and stable matter.
- Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the mixer.
- Cleaning -The mixer should be cleaned only as recommended by the manufacturer.
- Heat -The mixer should be situated away from heat sources such as radiators, heat registers, stoves, or other mixers (including amplifiers) that produce heat.
- Be sure to save the packing carton in case you may ever have to return the mixer for service.
- Read all documentation before attempting to operate your new mixer. Please save all your documentation for future reference.
- Do not spill water or other liquids in to or on to your mixer.
- Do not attempt to operate this mixer if the power cord has been frayed or broken. Please route your power cord out of the way of foot traffic .
- Always have the front gain controls set to their lowest level during initial power-up to prevent speaker damage.
- The mixer should be serviced by qualified service personnel when:
  - A. Objects have fallen, or liquid has been spilled into the mixer.
  - B. The mixer has been exposed to rain or water.
  - C. The mixer does not appear to operate normally or exhibits a marked change in performance.

- Adjustable Crossfader Curve
- 2 Phono/2 Aux, 2 Line Inputs
- Fader "Q" Start
- Q-Start Compatible (for use with compatible American Audio CD Players )
- -30dB Rotary Kills for Treble, Bass and Mids on both channels
- -30dB% Push Button Kills
- High Output Headphone Jack
- Adjustable Channel Fader Curve
- Built-In 4 In/4 Out USB Audio Interface
- Asio Driver Compatible for PC/Core Audio for Mac
- Soft-touch rubber knobs for better control
- Extremely clean signal to noise ratio
- Light Control Signal Output Jack
- Talk Over Button - Reduces channel output gain by 15dB +/- 1.5 dB
- Dual Function Stereo LED Level Indicator - Indicated Master and PFL (Pre Fader Level) Signal Levels
- Split Cue Monitoring
- Cue Mixing
- Separate gain control for each channel
- MIDI Interface
- Separate Mic EQ Section

American Audio would like to thank for your purchase of this great product. For those of you that are to impatient to read the entire user manual we have compiled these quick start instructions. We hope that you will at least read through these instructions to familiarize yourself with the basic understanding of the unit. The DV2 USB is part of American Audio's continuing evolution in audio technology. This unit has been built and designed with the typical DJ in mind, by DJ's. We have attempted to provide you with the most reliable product on the market by using only components made from quality products.

**MASTER LEVEL** - Use this level control to set your volume output. Try never to send an output of more than +4dB to your system. Signal at levels higher than this will start to distort and may cause damage to your system and speakers. Remember that a distorted signal from you mixer will only be multiplied throughout your system.

**CHANNEL GAIN LEVEL** - The channel trim levels are not to be used as volume controls, never use the channel gain to set the output volume. These controls are used to aid in distortion control. Use these control to preset your signal level before the crossfader. With your channel faders in the maximum position, use the channel trim level to set an average output level of about +4dB on you master level meter.

**HEADPHONES** - To avoid severe hearing damage, always be sure the headphone level is set to minimum before plugging them in. Never put the headphone on without making sure the headphone level is turned down.

**MIC** - The mic connector uses a 1/4" jack unbalanced connector. The DJ mic has an independent volume control. When feedback occurs when using the mic, try lowering the "low" level this may reduce the feedback. Always leave the mic level to it's minimum level when not in use.

**PHONO/AUX SWITCH (25)** - This switch is used to change the selected input from phono level to line level and vice versa. Channels 1 and 2 may be switched PHONO/AUX or LINE. The selectors for AUX1/PHONO1 and AUX2/PHONO2 are on the rear panel.


**Q-START FEATURE** - This function works in conjunction with a compatible American Audio or American DJ "Q"Start CD player. When used with a compatible CD player, you can use the crossfader to start and stop the CD Player with the slide of the fader. The ON/OFF "Q"START switch activates this FADER "Q"START feature.

**CROSSFADER CURVE ADJUSTMENT**- This rotary knob is used to change the way the crossfader will operate. The crossfader can operate in three different modes, NORMAL CURVE, QUICK CURVE and any variation of the two. (Quick Curve usually used for crabbing).

**CHANNEL FADER CURVE ADJUSTMENT** - This rotary knob is used to change the way the channel fader will operate. Each channel has a Curve adjustment. The curve on the faders adjust from long or short or any variation of the two.

**REVERSE FUNCTION** - Both the crossfader and the channel faders will reverse function when the reverse switch is activated.

## Top Panel

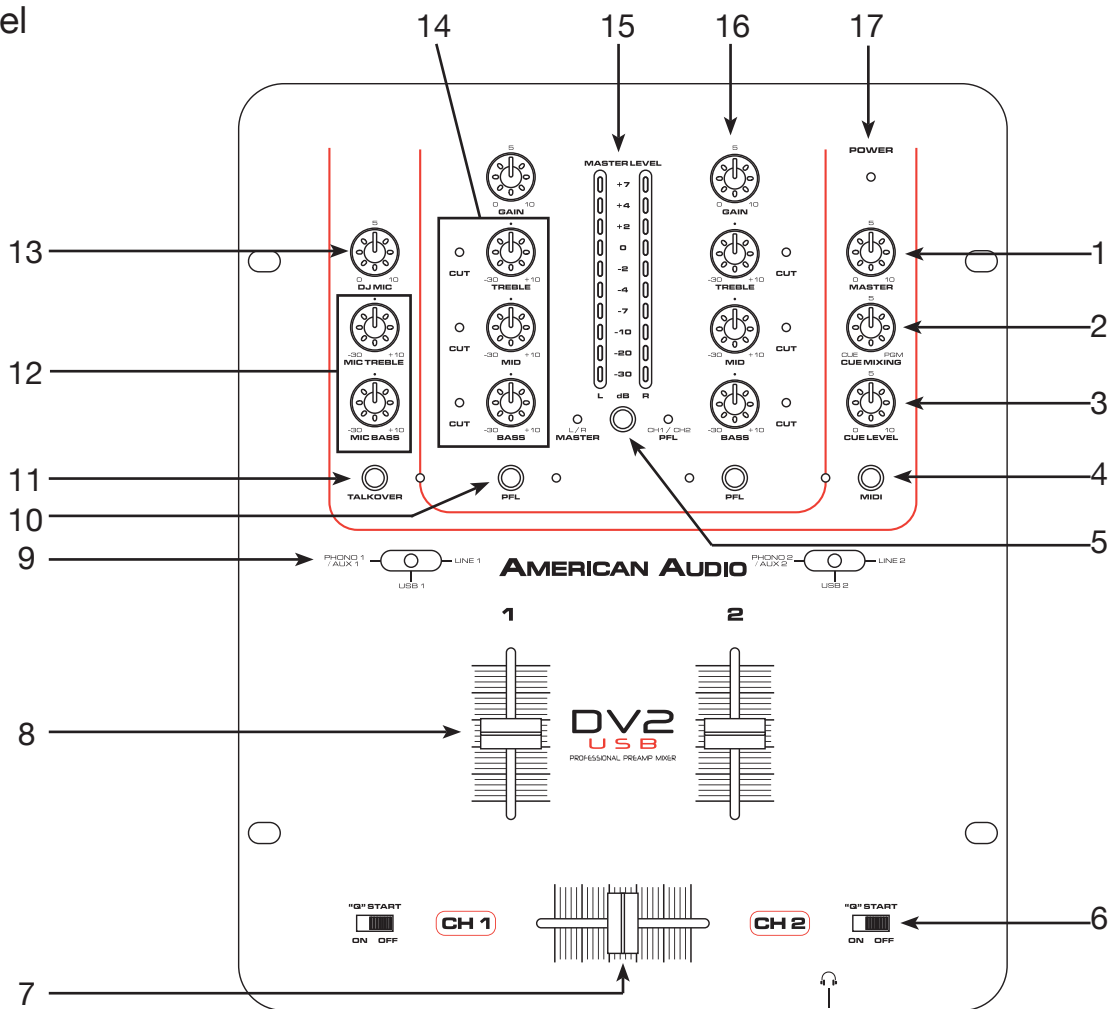

**1. MASTER VOLUME CONTROL** - This rotary knob is used to control the master output level (volume). To avoid distorted output try to maintain an average output signal level +4 dB. Be sure this volume control is always set to zero before turning the unit on.

**2. CUE MIXING CONTROL** - This knob selects the channel for monitoring. The monitor signal comes from the Prefader. This means it will not be affected by the channel faders. You can monitor each channel individually. Connect your headphones to the *HEADPHONES JACK* (36). Turn the CUE MIXING CONTROL to CUE and select the desired channels with the PFL switches. When you turn the CUE MIXING CONTROL to PGM (PFL switches without function), you can cue the output signal of the mixer. If the CUE MIXING CONTROL is set to the center position, you can cue both the channel signal you selected and the output signal. With the CUE LEVEL control, you can adjust the phones volume without changing the output signal.

**3. CUE LEVEL VOLUME CONTROL** - This knob is used to adjust the headphone volume output level. Turn the knob in a clockwise direction to increase the headphone volume.

**4. MIDI BUTTON** - This button activates the MIDI function.

**5. LEVEL INDICATOR MODE SELECTOR** - This button is used to change the operating mode of the *LEVEL INDICATORS* (15). When the switch is in the Master L/R position, the meter will indicate the master output levels. When the switch is in the PFL CH1/CH2 position the meter will use the left side of the meter to indicate channel one's prefader level and use the right side of the meter to indicate channel two's prefader level.

**6. Q-START ON/OFF SWITCH** - This function works in conjunction with a compatible American Audio® or American DJ® “Q” Start CD player. When used with a compatible CD player, you can use the crossfader to start and stop the CD play. The ON/OFF “Q” START switch activates the fader “Q” start feature. When the fader “Q” start feature is activated sliding the *CROSSFADER (7)* from left to right will play or cue any CD player connected to the *CONTROLLER JACKS (21)* on the rear of the unit.

For example, connect a compatible dual CD player connect to mixer channels one and two (refer to your CD player manual for proper set-up). Be sure the Fader “Q” Start feature is activated on both channels. Slide the crossfader to the channel one position (full left) and begin playback on CD drive one. Slide the crossfader to the channel position (far right). This will immediately trigger the play function on CD drive two and return CD drive one to cue mode. To return to normal fader operation turn the Fader “Q” Start ON/OFF SWITCH to the OFF position.

**7. CROSSFADER** - This fader is used to blend the output signals of channels one and two together. When the fader is in the full left position (channel 1), the output signal of channel one will be controlled by the master volume level. The same fundamentals will apply for channel two. Sliding the fader from one position to another will vary the output signals of channels one and two respectively. When the crossfader is set in the center position, the output signals of both the channels one and channels two will be even.

**8. CHANNEL FADER** - These faders are used to control the output signal of any source assigned to its particular channel.

**9. SOURCE SELECTOR SWITCH** - This switch routes the audio from the selected source to the corresponding channel. Setting the source to the USB position will route the audio from your computer to the mixer.

**Note:** When the MIDI function is active the switch is deactivated to prevent accidental source selection. In MIDI, external sources can be routed by setting your software to AUX or external audio.

**10. PFL BUTTONS** - These buttons are used to activate a channels “CUE” mode. A red LED next to the PFL button will glow when a channels cue mode is activated. Cue mode will send a channels incoming signal to the headphones. The cue level is adjusted by the *CUE LEVEL VOLUME CONTROL (3)*. Be sure the cue level is set to minimum before putting a pair of headphones on. Be sure the *CUE MIXING KNOB (2)* is turned to the “CUE” position to hear the selected channel source.

**11. TALKOVER BUTTON** - When engaged this function will decrease all signal levels, except the microphone level, by 15dB. A red LED next to the TALKOVER BUTTON will glow when the talkover function is engaged. In the OFF position all signals will remain at their normal levels.

**12. MICROPHONE EQ SECTION** - These controls are used to adjust the microphone treble level and bass levels. Each microphone input has a separate channel EQ.

**MICROPHONE TREBLE CONTROL** - This knob is used to adjust the treble levels of the Microphone with a maximum signal gain of +10dB or maximum signal decrease of -30dB. Turning the knob in a counter-clockwise direction will decrease the amount of treble applied to the microphone signal, turning the knob in a clockwise direction will increase the amount of treble applied to microphone signal.

**MICROPHONE BASS CONTROL** - This knob is used to adjust the low frequency levels of the microphone with a maximum signal gain of +10dB or maximum signal decrease of -30dB. Turning the knob in a counter-clockwise direction will decrease the amount of bass applied to



the microphone signal, turning the knob in a clockwise direction will increase the amount of bass applied to microphone signal.

**13. MICROPHONE VOLUME** - This knob is used to regulate the microphone output volume. Turning the knob in a clockwise direction will increase the volume level.

**14. CHANNEL EQUALIZER (“ROTARY/PUSH KILLS” - BASS/MID/TREBLE CONTROL)** - All of the channels include a three-band signal EQ. These controls are used to increase or decrease the LOW's, MID's, and HI's of the output signal.

**CHANNEL TREBLE CONTROL** - This knob is used to adjust the treble levels of a channel allowing for a maximum treble gain of 10dB or maximum decrease of -30dB. Turning the knob in a counter-clockwise direction will decrease the amount of treble applied to a channel signal, turning the knob in a clockwise direction will increase the amount of treble applied to a channel signal.

**CHANNEL MIDRANGE CONTROL** - This knob is used to adjust the midrange levels of a channel allowing for a maximum midrange gain of 10dB or maximum decrease of -30dB. Turning the knob in a counter-clockwise direction will decrease the amount of midrange applied to a channel signal, turning the knob in a clockwise direction will increase the amount of midrange applied to a channel signal.

**CHANNEL BASS CONTROL** - This knob is used to adjust the low frequency levels of a channel allowing for a maximum bass gain of 10dB or maximum signal decrease of -30dB. Turning the knob in a counter-clockwise direction will decrease the amount of bass applied to a channel signal, turning the knob in a clockwise direction will increase the amount of bass applied to a channel signal.


**EQUALIZER BAND KILLS** - These buttons are used to cut out the Treble, Mid or Bass frequencies of the incoming audio signal. When these buttons are depressed the selected frequency level is cut by -30dB. When a Cut Button is engaged a red LED located directly above the specific button will begin to glow, indicating the cut function has been activated. Depressing the Cut Button will disengage the cut function.

**15. LEVEL INDICATORS** - The dual LED's indicators are used to indicate either the master output level or the PFL level's of channels one and two. The level indicators will directly reflect the operating mode of the *FADER ASSIGN SWITCH (5)*.

**16. CHANNEL GAIN CONTROL** - This adjustment is used to adjust an audio source signal input gain for a channel. Never use the gain control to adjust output volume. Setting the gain level properly will ensure a clean output signal. To properly set the gain level controls:

1. Be sure the *MASTER VOLUME CONTROL (1)* is set to minimum (zero output).
2. Set the *CHANNEL FADER (8)* to level 7.
3. Begin play on an audio source connected to the channel you are adjusting.
4. Be sure the *LED LEVEL INDICATOR FUNCTION SWITCH (5)* is set to the PFL CH1/CH2 position.
5. Turn the *PFL (10)* function on, for the channel you are adjusting.
6. Use the *GAIN CONTROL (16)* to achieve an average output level of +4 dB.

**17. MAIN POWER INDICATOR** - This LED will glow when the power is turned On.

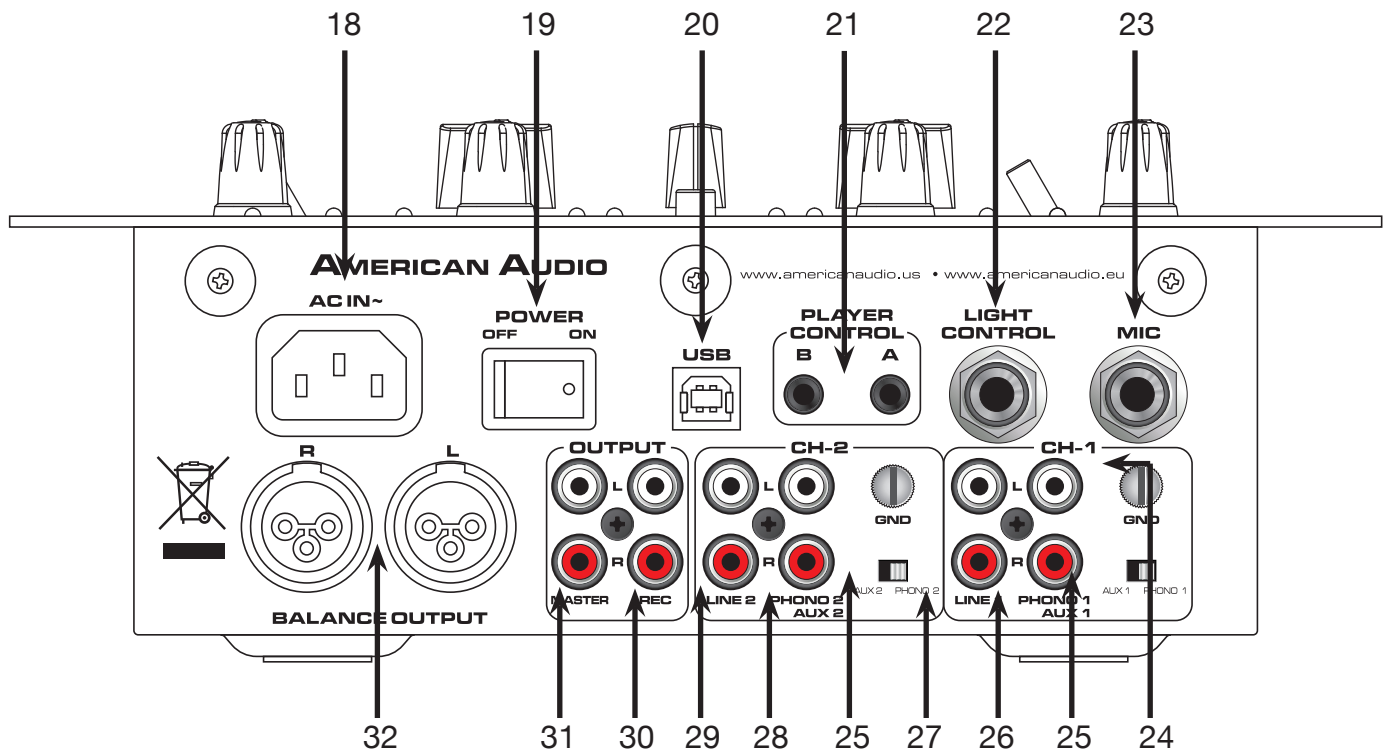

**18. AC CONNECTION** - This connector is used to supply main power to the unit via the included detachable power cord. Use only the supplied, polarized AC power cord. This cord is designed to fit in one direction only. Do not attempt to force a cord in if it does not fit, be sure the cord is being inserted properly

**19. MAIN POWER SWITCH** - This is the main power ON/OFF button. The power switch will glow red when power is ON. Before main power is applied, be sure you have made all connections to the mixer. Also be sure your amplifier(s) is(are) tuned off. Remember to avoid damaging pops, the mixer should be powered on first and turned off last.

**20. USB PORT** - Use this jack to connect to a computer.

**21. PLAYER CONTROL** - These jacks are used to control the “Q-Start” function between the mixer and a compatible American Audio CD Player. Input mini plugs from CD player controller into these jacks, input CD 1 into jack A and CD 2 into jack B.

**22. LIGHT CONTROL** - This jack provides a preset mono audio signal output. There is no way to adjust this level, however this level will directly reflect the output level of the *CHANNEL FADERS* (8). This buffered audio output should only be used for light controllers that can accept an external audio input. Great for Touch Panels and Chase Controllers.

**23. MICROPHONE JACK** - This jack is used to connect a microphone to the mixer. Connect your microphone via 1/4 inch (6.3mm) jack. The signal volume will be controlled by the *MIC VOLUME KNOB* (13). The bass and treble levels can also be adjusted by the built-in *MICROPHONE EQ* (12).

**24. GND (GROUND TERMINAL)** - Connect each of your turntables ground leads to either of the two ground terminal. This will reduce the humming and popping noises associated with magnetic phono cartridges.



**25. LINE LEVEL SELECTOR SWITCH** - This switch is used to change the mode of *PHONO INPUT JACKS (26 and 28)*. When connecting turntable to these jacks be sure the switch is in the PHONO position, and when using line level input devices be sure this switch is in the AUX position. Always be sure main power is shut off before change the position of the Line Level Selector Switch.

**26. CHANNEL 1: PHONO 1 INPUT/AUX 1 JACKS** - The type of input must directly reflect the selected mode of the *LINE LEVEL SELECTOR SWITCH (25)*. Connect turntables equipped with MM pickup cartridge to PHONO inputs (All DJ turntable use MM pick-up cartridges). CD players or Tape Decks and other line level instruments may be connected to these jacks as long as the *LINE LEVEL SELECTOR SWITCH (25)* is in the “AUX 1” position. The red colored RCA jack represents the right channel input and the white represents the left channel input.

These RCA jacks are also routed to the USB interface inputs. Allowing you to record phono or line level signals via the Aux level inputs. This can also be used with drivers that support multiple channel USB audio streams on DJ software.

**27. CHANNEL 1: LINE 1 RCA INPUT JACKS** - These Jacks are used for line level inputs. Connect CD players or Tape Decks to LINE inputs. Line level musical instruments with stereo outputs such as Rhythm Machines or Samplers should also be connected to LINE inputs. Turntables should only be connected to “Phono” inputs. The red colored RCA jack represents the right channel input and the white represents the left channel input.

**28. CHANNEL 2: PHONO 2 INPUT/AUX 2 JACKS** - The type of input must directly reflect the selected mode of the *LINE LEVEL SELECTOR SWITCH (25)*. Connect turntables equipped with MM pickup cartridge to PHONO inputs (All DJ turntable use MM pick-up cartridges). CD players or Tape Decks and other line level instruments may be connected to these jacks as long as the *LINE LEVEL SELECTOR SWITCH (25)* is in the “AUX 2” position. The red colored RCA jack represents the right channel input and the white represents the left channel input.


**29. CHANNEL 2: LINE 2 RCA INPUT JACKS** - These Jacks are used for line level inputs. Connect CD players or Tape Decks to LINE inputs. Line level musical instruments with stereo outputs such as Rhythm Machines or Samplers should also be connected to LINE inputs. Turntables should only be connected to “Phono” inputs. The red colored RCA jack represents the right channel input and the white represents the left channel input.

These RCA jacks are also routed to the USB interface inputs. Allowing you to record phono or line level signals via the Aux level inputs. This can also be used with drivers that support multiple channel USB audio streams on DJ software.

**30. REC OUT** - This is a low current unbalanced output source designed for various tape and CD recorders. The Record Out (REC OUT) level is dictated by the *CHANNEL FADER LEVEL (8)*, it is not influenced by the *MASTER VOLUME CONTROL (1)*.

**31. RCA MASTER OUTPUTS** - The RCA master output unbalanced jacks send a low current unbalanced output signal.

**32. BALANCED XLR MASTER OUTPUTS** - The Master Output includes a pair XLR Balanced JACKS as well as a pair *RCA UNBALANCED JACKS (31)*. The 3-pin XLR jacks send a high current balanced output signal. These jacks should be used when you will be driving an amp or other audio equipment with a balanced input, or whenever you will be running a signal line greater than 15 feet. Always, use these jacks whenever possible.

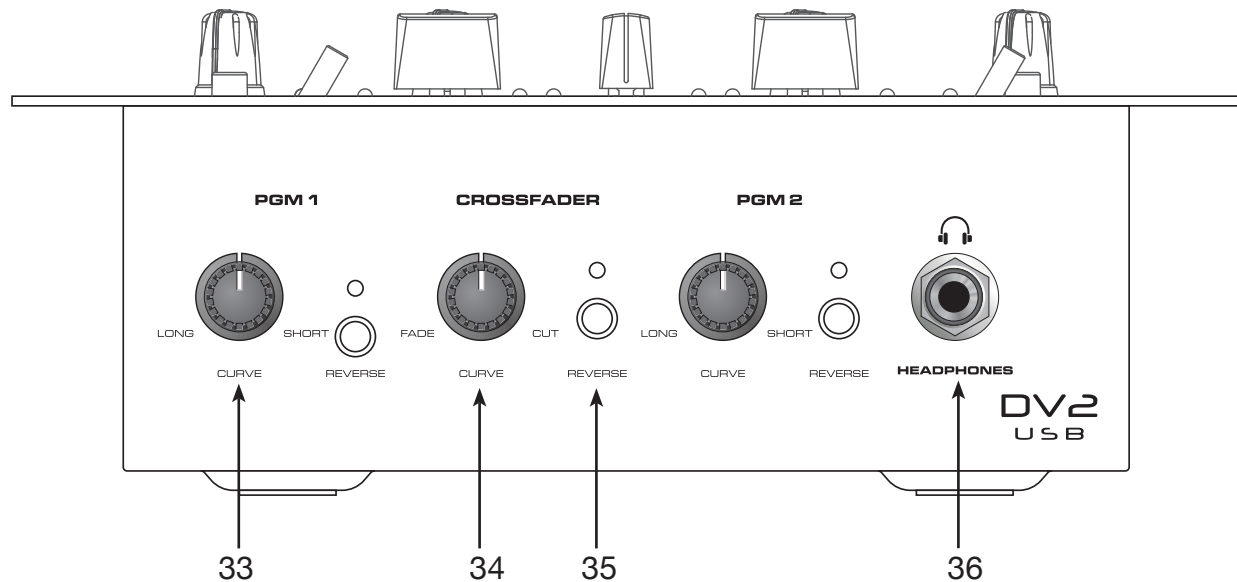

**33. CHANNEL FADER CURVE ADJUSTMENT** - This rotary knob is used to change the way the channel fader will operate. Each of the two channels has a “Curve” adjustment. The curve on the faders adjust from long or short or any variation of the two. The shorter the curve adjustment the sooner full volume will be reached.

**34. CROSSFADER CURVE ADJUSTMENT** - This rotary knob is used to change the way the crossfader will operate. The crossfader can operate in different modes, “NORMAL CURVE”, “QUICK CURVE” or any variation of the two. (Quick Curve usually used for crabbing).

### 35. REVERSE FUNCTION SWITCH -

**CROSSFADER REVERSE** - When the Crossfader reverse switch is activated the LED above it will light up. When this mode is activated the left side of the crossfader is Ch. 2 and the right side is Ch.1.

**PGM REVERSE** - When reversing the channel faders, moving the fader in an upwards direction will decrease channel volume and moving the fader in a downwards direction will increase channel volume.

**36. HEADPHONE OUTPUT JACK** - This jack is used to connect your headphones to the mixer allowing you to monitor the cue source. Use headphones only rated at 8 ohms to 32 ohms. Most DJ headphones are rated at 16 ohm, these are highly recommended. Always be sure the *CUE LEVEL VOLUME* (3) is set to minimum before you put the headphones on.

Use of the DV2 USB audio interface can be used in several modes to mix computer audio from media player software. You may use the DV2 as your default sound card, or in the media player options set the mixer as the speaker output for the desired media player. **Note: Some media players may not have this option.** Most commonly the USB audio interface may be used with one of the many DJ software programs that are available for computers. American Audio has provided software to get you started.

#### **ASIO DRIVER INSTALLATION:**

Most Windows based computer systems will not support multiple channel USB audio routing. Asio drivers are necessary to support multiple sets of stereo outputs. Enclosed with the provided software CD you will find Asio driver installation software for 32 and 64 bit operating systems. The Asio drive can also be downloaded directly by visiting DV2 product page at [www.adjaudio.com](http://www.adjaudio.com).

*Mac users do not need ASIO drivers. Multiple channel streams are supported with Core Audio.*

#### **ROUTING USB AUDIO:**

The DV2 is equipped with a built-in 4 in/4 out USB audio interface to integrate the use of the ever growing popularity of DJ software, Digital Vinyl systems, Media Players, or Production software into your mix.

#### **EXTERNAL AUDIO ROUTING:**

With the MIDI turned "Off" on the DV2, channel 1 will receive the audio that is assigned to USB channels 1 & 2. Channel 2 will receive the audio that is assigned to USB channels 3 & 4. *Note: Not all software supports this set up, check the audio routing under your software options.*

The RCA inputs are routed to the USB inputs. The signal sent to the USB is dependent of the Source Selector Switch. To allow the use of the DVS software when the source select switch is set to USB, the RCA Phono/Aux inputs are routed to the USB inputs, this allows you to route the RCA input signals through software and layer them with your favorite software FX.

To record with DAW software for sampling, the USB input will route the selected source to the software USB input. Check your software manual to set up the DV2 as the input source for recording. *Note: When recording a RCA Phono/Aux can be monitored thru the USB setting. Do not make adjustments to the Gain or EQ of the channel when auditioning audio, this will affect record levels. Recording levels should be set to the desired level beforehand.*

#### **MIDI AND INTERNAL AUDIO ROUTING:**

When MIDI is enabled on the DV2 the USB Audio is routed to function with software that supports MIDI and requires internal audio routing. This mode will route the sound from your software, and the volume levels will be controlled via the MIDI parameter on the MIDI controls. The headphones become USB channel dependent make sure to assign Asio/Core channels 3 & 4 to your software's headphone output.

Please visit [www.adjaudio.com](http://www.adjaudio.com) for MIDI mapping.

name	Type	MIDI	Remarks
MicGain	VR	2C	
MicHig	VR	2D	
MicLow	VR	2E	
CH1Gain	VR	2F	
CH1EqHig	VR	30	
CH1EqMid	VR	31	
CH1EqLow	VR	32	
CH2Gain	VR	33	
CH2EqHig	VR	34	
CH2EqMid	VR	35	
CH2EqLow	VR	36	
Master	VR	37	
CueMix	VR	38	
CueGain	VR	39	
CH1Fader	VR	3A	
CH2Fader	VR	3B	
Crossfader	VR	3C	
CH1Curve	VR	3D	
CFCurve	VR	3E	
CH2Curve	VR	3F	
Ch1HigCut	SW/LED	01/01	
Ch1MidCut	SW/LED	02/02	
Ch1LowCut	SW/LED	03/03	
Ch2HigCut	SW/LED	04/04	
Ch2MidCut	SW/LED	05/05	
Ch2LowCut	SW/LED	06/06	
Level Mode/MASTER LR	SW/LED	07/07	
TalkOver	SW/LED	08/08	
Ch1PFL	SW/LED	09/09	
Ch2PFL	SW/LED	0A/0A	
Ch1Reverse	SW/LED	0B/0B	
CFReverse	SW/LED	0C/0C	
Ch2Reverse	SW/LED	0D/0D	
PFL CH1/CH2	LED	0E	
LEVEL L	LEVEL	0F	0~A(0~10)
LEVEL R	LEVEL	10	0~A(0~10)
Ch1FaderStar	SW	20	
Ch2FaderStar	SW	21	

### CC-ABSOLUTE (VR)

Control Change messages are sent with status 0xBn, where “n” is the channel, for the specified CC controller. Thus the controller MIDI ID is indicated with the channel along with the CC number. The value from 0x00 to 0x7F, is directly related to the location of the controller.

### SWITCH ON/OFF (SW, CENTER, CW, CCW)


These messages are used for switches. Control Change messages are sent with status 0x9n, SWITCH On and Off value are 0x7F and 0x00, where “n” is the channel.


### LED ON/OFF (LED)

These messages are used for LED. Control Change messages are sent with status 0x9n, LED On and OFF value 0x7F and 0x00, where “n” is the channel.

### LEVEL LED (LEVEL)

These messages are used for LEVEL. Control Change messages are sent with status 0x9n, LED Off value is 0x00 and On value is related to LED amount, 0x01 with one LED, 0x02 with two LED...., where “n” is the channel.

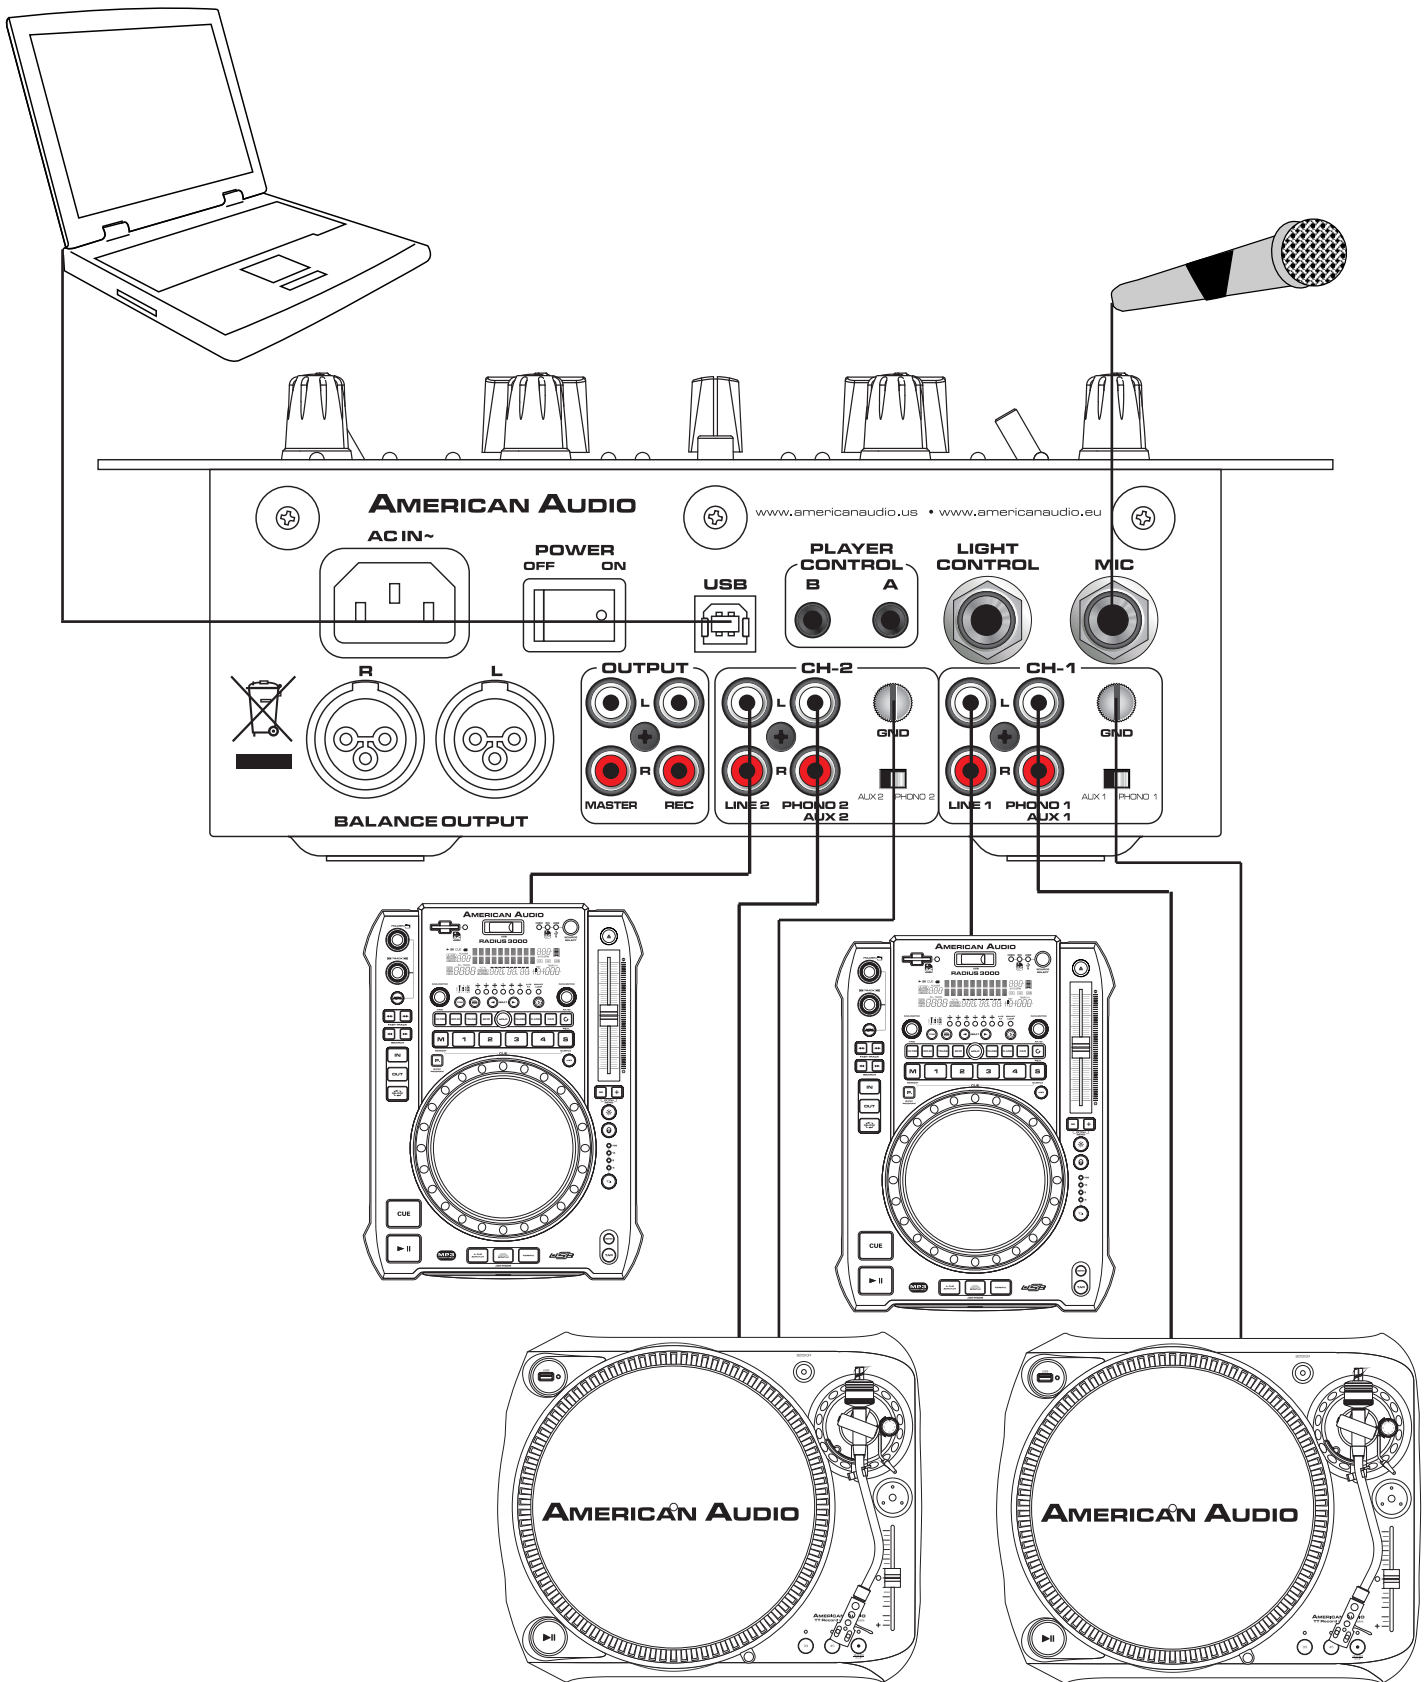

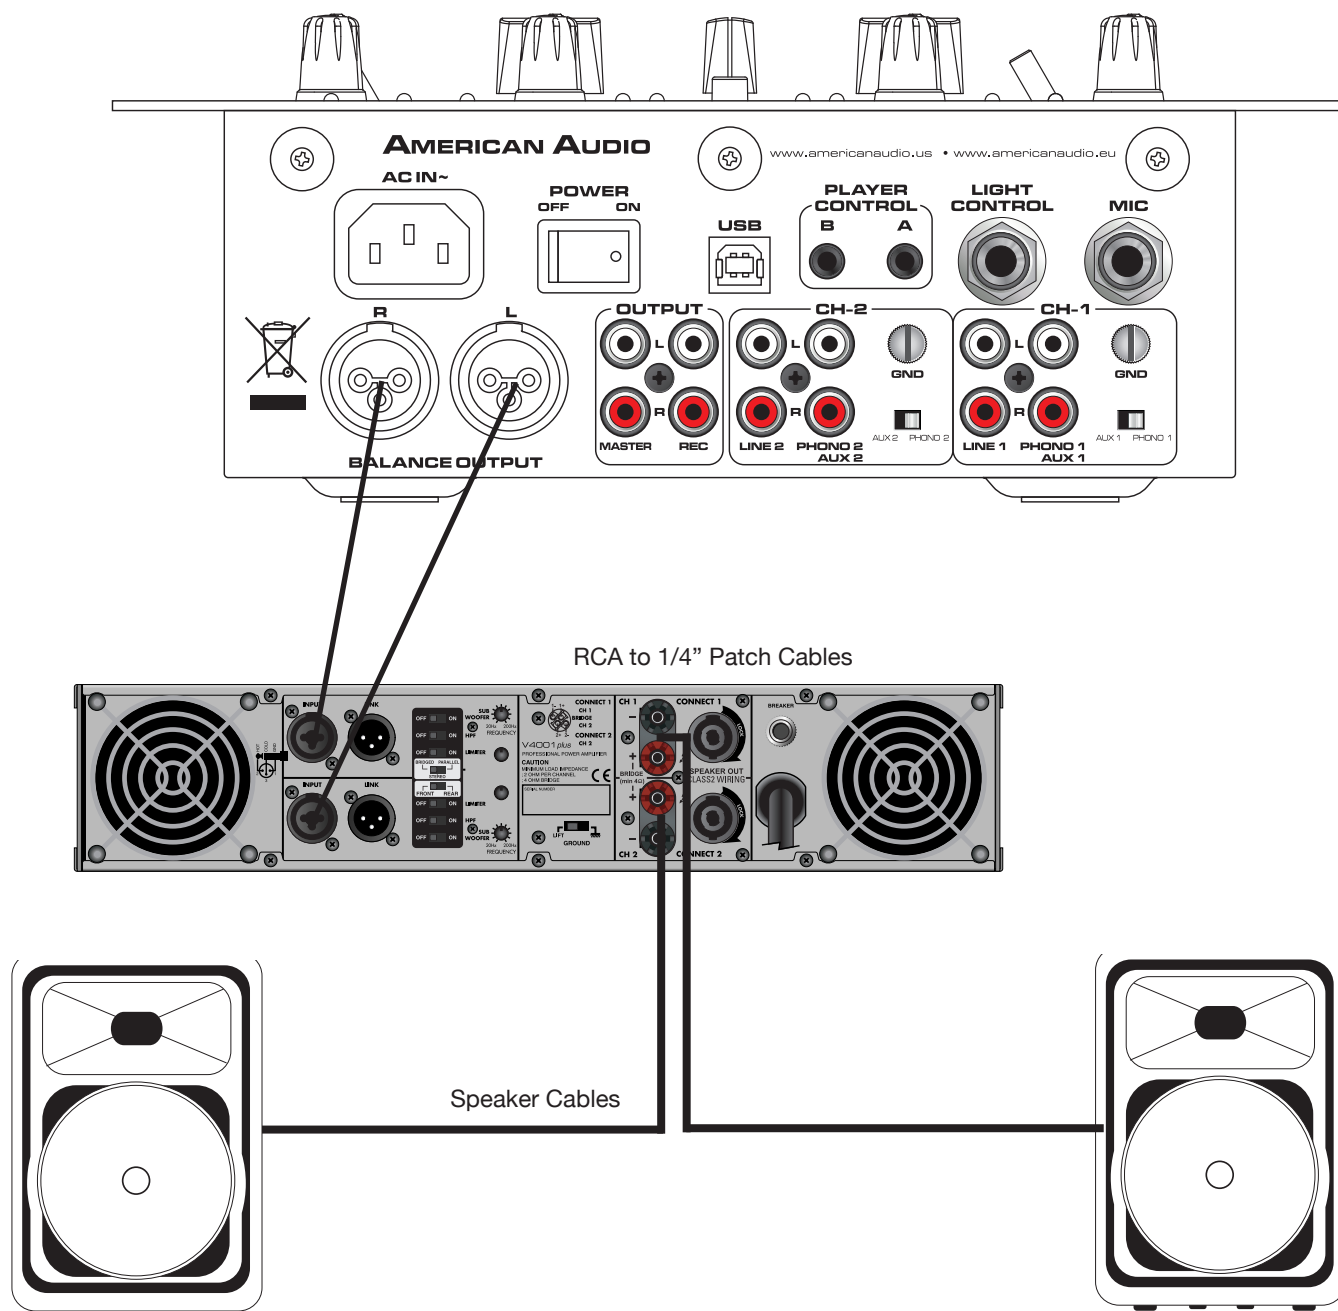

## DV2 USB

## Cleaning

Due to fog residue, smoke, and dust, cleaning the mixer should be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Use a cleaner specially designed for electronics to spray in and around the knobs and switch. This will reduce small particle built up that can effect the proper operation of the mixer.

3. Clean should be carried out every 30-60 days.

4. Always be sure to dry all parts completely before plugging the mixer in.

Cleaning frequency depends on the environment in which the mixer operates (i.e. smoke, fog residue, dust, dew).



The DV2 USB carries a one year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain a R.A. number by contacting customer support at (800) 322-6337.

### 1-YEAR LIMITED WARRANTY

A. American Audio® hereby warrants, to the original purchaser, American Audio® products to be free of manufacturing defects in material and workmanship for a period of 1 Year (365 days) from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the American Audio® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American Audio® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American Audio® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American Audio® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American Audio® factory unless prior written authorization was issued to purchaser by American Audio®; if the product is damaged because not properly maintained as set forth in the instruction manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American Audio® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American Audio® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American Audio®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. American Audio® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American Audio® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American Audio® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to American Audio® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

**Model:** DV2 USB, Professional 2 Channel Preamp Mixer

**POWER SUPPLY:** AC 100~240V, 50/60Hz (Universal)  
**DIMENSIONS:** 10"W x 12.25"D x 3.25"H /254 x 320.6 x 100.3 mm  
**WEIGHT:** 7 Lbs. / 2.77 Kg  
**CROSSFADER:** Feather Fader Plus - VCA detecting fader start control -  
 Low grounding impedance crossfader  
**POWER CONSUMPTION:** 7W typical, 9W w/ full headphone output  
**HEADPHONE IMPEDANCE:** 33 Ohms  
**ENVIRONMENTAL CONDITION:** Operating Temperature: 5 to 35 deg. C; Humidity: 25 to 85%  
 RH (non-condensing); Storage Temperature: -20 to 60 °C

**Input Sensitivity (Level/Impedance) LOAD=47K OHM:**

**LINE:** -10dB (316mV) / 22K Ohm  
**PHONO:** -45dB (5.6mV) / 47K Ohms  
**MICROPHONE:** -45dB (5.6mV) / 6K Ohms  
**AUX:** -10dB (316mV) / 47K Ohms

**Output Sensitivity (Level/Impedance) EQ Flat, 0dBV=1Vrms, LOAD=47K Ohms:**

**MASTER OUTPUT:** 0dBV (1V) / 1K Ohm  $\pm$ 2dB  
**BALANCED:** 0dB (1V) / 600 Ohm  $\pm$ 2dB (Single to GND)  
**REC OUTPUT:** -8dB (398mV) / 1K Ohm  $\pm$ 2dB  
**LIGHT CONTROL OUTPUT:** -9dB (355mV) / 7.5K Ohm  $\pm$ 2dB  
**PHONES (LOAD=32 OHMS):** -3dB (0.7V) / 33 Ohms  $\pm$ 2dB (CUE/PGM)

**Maximum Output (Load = 47K, Input 0dB):**

**MASTER OUTPUT:** MORE THAN 8dB (2.5V)  
**REC OUTPUT:** MORE THAN 0dB (1V)  
**PHONES (LOAD=33 Ohms):** MORE THAN 4dB (1.58V) at HP LEVEL THD=1%

**CHANNEL BALANCE: (EQ Flat, Load=47K Ohms):** Within 3dB

**Frequency Response (EQ Flat, Load=47K Ohms):**

**LINE:** 20Hz - 20KHz, +2/-3dB  
**PHONO:** 20Hz - 20KHz, +2/-3dB at Input Level -55dB  
**AUX:** 20Hz - 20KHz, +2/-3dB  
**MICROPHONE:** 20Hz - 20KHz, +2/-3dB

**S/N Ratio (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**LINE/AUX:** LESS THAN -75dB at MIC VR Minimum  
**PHONO:** LESS THAN -70dB at MIC VR Minimum  
**MIC:** LESS THAN -66dB

**THD - Total Harmonic Distortion (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**MASTER OUTPUT:** LESS THAN 0.02% at MIC VR Minimum  
**PHONO: (LOAD = 32 OHMS):** LESS THAN 0.05% at MIC VR Minimum

**CROSSTALK (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**LINE 1 & 2:** MORE THAN 75dB @ 1KHz between L & R Channels  
**AUX 1 & 2:** MORE THAN 70dB @ 1KHz between L & R Channels

**Channel Equalizer (Load=47K Ohms):**

**BASS:** +10  $\pm$ 2dB / Less Than -25dB at 70Hz  
**MID:** +10  $\pm$ 2dB / Less Than -25dB at 1KHz

**TREBLE:** +10  $\pm$ 2dB / Less Than -25dB at 13KHz

**Microphone Equalizer (Load=47K Ohms):**

**BASS:** +10,  $\pm$ 2dB/ Less Than -25dB at 70Hz

**TREBLE:** +10,  $\pm$ 2dB/ Less Than -25dB at 13KHz

**Attenuation of Talkover (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

-15  $\pm$ 1.5dB

**USB PLAYER SECTION (Signal Format: MP3, 44.1K 16bit, MIDI SW ON)**

**Output Level (EQ Flat, 0dB=1Vrms, Load=47K Ohms):**

**MASTER OUTPUT:** +10  $\pm$ 2dB (TCD782 TRK2)

**THD (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**MASTER OUTPUT:** LESS THAN 0.02% (TCD782 TRK2, MASTER VR OUT=0dB)

**S/N Ratio (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**MASTER OUTPUT:** MORE THAN 85dB (TCD782 TRK2, 8)

**Crosstalk (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**MASTER OUTPUT:** MORE THAN 85dB (TCD782 TRK9, 11 @1KHz between L & R Channel)

MORE THAN 85dB (TCD782 TRK2 @1KHz between Channels)

**Frequency Response (EQ Flat, Load=47K Ohms):**

**MASTER OUTPUT:** 17Hz-16KHz  $\pm$ 1.5dB (TCD781 TRK1, 4, 16)

**Recording & Playback (Line 1KHz, -10dB Input, 44.1K Sample Rate 16bit):**

**Output Level (EQ Flat, 0dB=1Vrms, Load=47K Ohms):**

**MASTER OUTPUT:** 0dB  $\pm$ 2dB

**THD (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**MASTER OUTPUT:** LESS THAN 0.03% (w/20KHz LPF, A-Weighted)

**S/N Ratio (EQ Flat, w/20KHz LPF, A-Weighted, Load=47K Ohms):**

**MASTER OUTPUT:** MORE THAN 75dB (w/20KHz LPF, A-Weighted)



**Follow Us On:**



**[facebook.com/americandj](https://facebook.com/americandj)  
[twitter.com/americandj](https://twitter.com/americandj)  
[youtube.com/adjlighting](https://youtube.com/adjlighting)**

©American Audio® World Headquarters:  
6122 S. Easter Ave Los Angeles, CA 90040 USA  
Tel: 323-582-3322 Fax: 323-582-3311  
Web: [www.AmericanAudio.us](http://www.AmericanAudio.us) E-mail: [info@americanaudio.us](mailto:info@americanaudio.us)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>