

American DJ® User Instructions

Progressor™



CAUTION!

Read instructions before installing or plugging unit in.



SPECIFICATIONS: MODEL - Progressor™

Weight: 24 lbs.
Size: 16"H x 11"W x 14.5"L
Lamp: 120V 300W
Fuse: 7A
Supply Voltage: 120V/60Hz
Working Position: Any Safe position
Duty Cycle: 10 min., on, 10 min. off
Colors: Multiple Colored Lens

Optional: ZB-ADJ300 120V 300W 150 hr. Long Life lamp also available

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

OPERATING INSTRUCTIONS:

Unit is ready to be hung or set on flat surface. Unit will react to bass sound of music via its internal microphone **and not lightly tapping on the case**. Adjust the sensitivity knob on the unit to music sensitivity. Unit will Master/ Slave by setting dip switch on back of unit and connecting via XLR Cables. All Dip switches off is Master, #1 on is for Slave. *These settings must be done before plugging in to power because dip switch settings can not change once unit is on.* If no sound is detected by unit for 3 seconds lights will turn off. Be sure sensitivity is up, do not obstruct cooling vents and keep in a well ventilated area. For best results, fog or special effects smoke must be used in order to see the beams of light. The 1/4" phone plug on the control is not for audio input, it is for a blackout control, if you connect audio into this it will burnout the circuit board.

CAUTION: Front part of fixture will get extremely hot if operated for long periods. For optimum performance, use a 10 min ON 10 min OFF duty cycle. Let unit cool before handling or replacing lamp. Caution! Never open unit when in use. Always disconnect main power before servicing or replacing lamp. Remember to always replace with same lamp and fuses.

Lamp replacement: Remove door on top cover of unit and disconnect socket from rear of lamp. Remove and replace lamps.

For service contact your American DJ Dealer.

Affordable Quality Lighting Products from *American DJ®* Los Angeles, CA. 90058 USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>