

AA-ML

Optional Mic/Line Input Module For AA Series Model AA120M

The AA-ML is an accessory input module for the AA120M. When inserted into the AA120M it can used as an additional Line or Mic input. It features a level control, RCA summing jacks for line level signals, Phoenix style input for mic level signals, defeatable 18V phantom power supply, remote VCA level control, and a speech filter with high pass 300Hz @ 6dB (only functional in mic position).

Installation

- 1. Disconnect the amp from the AC power source.
- 2. Remove cover from Input 6.
- 3. Select Input 6 Dipswitch #5 setting. Refer to the AA120M owner's manual on page 8 for information on proper setting. For the AA-ML, we suggest the Mix Bus position.
- 4. Decide on the function of the module.
 - a. For Line input, place jumpers on the AA-ML to the "AUX" pins (see drawing below). Set mic phantom pins to "OFF" and speech filter pins to "OFF".
 - b. For Mic input, place jumpers on the AA-ML to the "Mic" pins (see drawing below). Decide if you need phantom power for the mic and set the jumper accordingly. Decide if you need speech filter and set the jumper accordingly. Note: Speech filter only affects mic input.
- 5. Insert module into card slot. Secure with two screws.
- 6. Adjust module output level to Input 6. You will need to calibrate the module level, input 6 level, and master level for proper operation.
- 7. Remote Level Operation can be accomplished by using the AAVC-10K accessory. Connect the 2 wires of the AAVC-10K to the Phoenix connector on the amp labeled VCA. *Note: There is no polarity to the wiring.*
- 8. Refer to the owner's manual of the amplifier and the AAVC-10K instructions for proper settings.

Specifications:

Microphone Input: 600Ω Balanced

Sensitivity: 3mV

Line Input: 10KΩ Unbalanced

Sensitivity: 300mV

Microphone/Line Switch: (PCB Jumper)

Mic Input Phantom Power: +18(PCB Jumper)

Mic Low-Cut Filter: -10dB at 100Hz (PCB Jumper)

Output Level Control: Front Panel Screwdriver Adjust

Remote Volume Control Mic and Line: $10 \text{K}\Omega$

Terminations: Mic Input = Phoenix terminals, Remote Volume = Phoenix terminals, Line/AUX = Dual RCA Summing Jacks

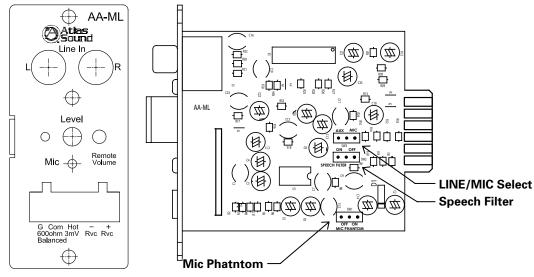


Illustration 1: Jumper Locations



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com