



INDEX

A

access control **1-2**
access levels **3-2**
ACT LED **2-2, 2-3**
Add ISDN Information Elements dialog box **3-51, 3-53, 3-56**
Add peer dialog box **3-18**
address information **3-7**
Addressing tab **3-6, 3-7**
Add User dialog box **3-2**
administrator access level **3-2**
Administrator interface **2-27**
advanced commands **3-40 to 3-41**
Advanced Commands dialog box **3-41**
Advanced dialog box **3-44, 3-47, 3-48, 3-49, 3-50**
advanced settings **3-33**
AES See encryption
alert indications **3-26**
ALRM LED **2-2, 2-3**
audio codecs **1-4, 3-21**
 enable **3-23**
audio messages available **6-2**
Audio Message Utility procedures
 exit **6-5**
 install and launch utility **6-2**
 play message **6-3**
 record message **6-3**
 replace message **6-4**
 upload message **6-4**
 use Express Setup **6-6**
 view message details **6-5**
audio transcoding **1-4, 3-13, 3-21, 3-23, 3-31, 3-61**

auto-boot **2-10**
auto dial **3-34**
autoswitching power supply **2-26**

B

bandwidth **3-31, 3-42, 3-49, 3-60**
call overhead **1-13**
resource allocation **1-14**
 supported **1-4**
basic settings **3-15**
Basics tab **3-3, 3-4, 3-5, 3-6**
board basic settings **3-6**
bonding
 calls **1-6**
 synchronization **3-44**
boot configuration menu **2-10**

C

cables
 DCE **2-15**
 DTE **2-15**
 EIA449/RS366-DCE **2-20**
 EIA449/RS366-DTE **2-17**
 EIA530/RS366-DCE **2-21**
 EIA530/RS366-DTE **2-17**
 EIA530/RS366-DTE-LOS **2-18**
 EIA530A/RS366-DTE **2-18**
 KIV7/RS366-DTE **2-19**
 V.35/RS366-DCE **2-20**
 V.35/RS366-DTE **2-16**
 call bandwidth overhead **1-13**

call bearer rate **3-33**
 call details **3-61 to 3-62**
 call handling
 capabilities **1-5**
 PRI gateway capacity **1-13**
 Calls tab **3-60, 3-62**
 CD LED **2-2**
 Change Time dialog box **3-5**
 Choose file dialog box **3-64**
 conceal caller ID **1-3, 3-33, 3-34**
 configuration procedures
 add interface users **3-2**
 add service **3-43**
 change address settings **3-7**
 change Administrator interface web server port **3-8**
 configure advanced commands **3-41**
 configure advanced settings **3-33**
 configure basic port settings **3-45**
 configure basic settings **3-15**
 configure bonding synchronization **3-44**
 configure downspeeding **3-24**
 configure DTMF settings **3-39**
 configure encoding and decoding protocols **3-23**
 configure encryption settings **3-32**
 configure fractional channels **3-47**
 configure framing **3-47**
 configure incoming call routing methods **3-58**
 configure IVR **3-20**
 configure line coding **3-47**
 configure NSF settings **3-57**
 configure outgoing call delimiters **3-21**
 configure peer- to-peer connectivity **3-17**
 configure port call policies **3-58**
 configure port physical line properties **3-46**
 configure port supported services **3-59**
 configure QoS settings **3-26**
 configure security **3-8**
 configure signaling type **3-47**
 delete interface users **3-3**

delete ISDN information elements **3-58**
 delete services **3-44**
 detect DTMF **3-39**
 disconnect calls **3-62**
 edit interface users **3-2**
 edit service **3-43**
 import configuration files **3-64**
 refresh call information **3-60**
 refresh information **3-14**
 refresh System section **3-11**
 register with gatekeeper **3-15**
 reserve resources **3-31**
 restore board basic settings **3-6**
 save configuration settings **3-64**
 select events for SNMP traps **3-26**
 set chassis temperature **3-10**
 set location **3-6**
 set time and date **3-5**
 update license **3-4**

connectors

Ethernet **2-2**
 PORT **2-3**
 PRI line **2-3**
 serial **2-2**

D

data collaboration **1-2, 3-22, 3-30**
 enable T.120 **3-23**
 DB-60 **2-3, 3-48**
 DB-9 **1-6, 2-2**
 DCE **3-48**
 D-Ch LED **2-3**
 decoding **3-23**
 default bit rate **3-34**
 default extension **1-2, 3-59, 4-5**
 default services **3-42**
 delimiters
 outgoing calls **3-21**

second number **3-21, 4-2**

DES See encryption

Details dialog box **3-13**

diagnostics **1-2**

dialing

indirectly through an operator **4-6**

into IP **4-3**

out from IP **4-1**

through IVR **4-6**

dialing examples **4-1 to 4-6**

dial plan **1-2**

DID **1-2, 3-35, 3-59, 4-4**

direct dialing **1-2**

Discovered Gatekeepers dialog box **3-16**

downspeeding **1-3, 3-23, 3-28, 3-40**

DTE **3-48**

DTMF **1-3, 3-28, 3-29, 3-37**

convert signals **3-38**

detection **3-38**

tone assignments **3-37**

dual video **1-3, 3-36, 3-61, 3-62**

E

E1/T1 **1-9, 1-14, 3-46, 3-47**

Edit ISDN Information Elements dialog box **3-51, 3-56**

Edit peer dialog box **3-18**

Edit User dialog box **3-2**

EIA-530 **2-15**

EIA-530/EIA-530A **3-48**

encoding **3-23**

encryption **3-31**

H.235 **1-3, 3-32**

interoperability **1-6**

serial gateway **1-11**

via satellite **1-11**

Ethernet

10/100Base-T **1-6**

connector **2-2**

Ethernet LED **2-2**

Event Log tab **3-62**

Express Setup **6-5**

external program access **3-8**

F

fast start **1-3, 3-35**

feature summary

general features **1-2**

FECC **3-23**

File Download dialog box **3-64**

first-time installation **2-27**

fractional channels **3-47**

Fractional dialog box **3-47**

framing **3-47**

front panel **2-2**

FTP **3-8**

G

gatekeeper

registering **3-15**

GK LED **2-2**

H

H.239 **1-3, 3-36**

H.243 **1-3**

H.323

call disconnect reason **3-19, 3-41**

fast start **1-3, 3-35**

version 1 **3-16**

version 2 or later **3-16**

hot swap **1-3**

I

ICMP **3-8**
importing files **3-64**
incoming call routing methods **3-58, 4-3**
initial configuration **2-10**
installation procedures
 access Administrator interface **2-27**
 change default password **2-13**
 connect a serial cable **2-15**
 connect gateway to LAN **2-14**
 connect to a PC **2-11**
 connect to power supply **2-26**
 insert gateway in chassis **2-8**
 insert RTM in chassis **2-7**
 install online help files **2-26**
 mount chassis on a 19-inch rack **2-5**
 register online help **2-28**
 set IP address **2-12**
installation requirements **2-4**
interoperability **1-2**
IP address assign **2-11**
IP network connection **1-4, 1-6**
ISDN
 connection failure **1-3**
 rollover **1-3**
IVR **1-2, 3-20, 3-35**
 corrupt files **3-28, 3-29**
 internal capacity **1-6**
 operator **4-5**
 routing **3-59, 4-5**

L

LAN **2-14**
 10/100Base-T **1-6**
leased lines
 serial gateway **1-12**
LED indicators **2-2, 2-3**

troubleshooting **5-2**
LED Monitoring tab **3-3**
license
 update **3-4**
Licensing and Registration dialog box **3-4**
line coding **3-47**
line quality **1-6**
location **3-6**

M

maintenance mode **3-63**
Maintenance tab **3-63**
MCU **1-12, 3-36**
media + signaling combinations **1-6**
media protocols **1-6**
MSN **1-2, 4-4**
multimedia conferencing **1-7**
multipoint conferencing **1-8**

N

Netscape Navigator **2-28**
network jitter tolerance field **3-35**
network load balancing **1-2**
Network Specific Facility (NSF) **1-3, 3-57**
NSF Configuration dialog box **3-52, 3-57**

O

online help **2-26, 2-28**
operator access level **3-2**

P

package contents **2-4**
password
 default login user **2-13**

- peer-to-peer
 connectivity **1-4, 1-14, 3-15, 3-17**
 disconnect **3-19, 3-41**
 hunting module **3-19**
 peer hunting mode **3-17**
- physical description
 DCE cable **2-19**
 gateway module **2-2**
 Rear Transition Module (RTM) **2-3**
- pin layout
 DB-25 **2-24, 2-25**
 DB-37 **2-23**
 M-34 **2-22**
 serial gateway cable connectors **2-22**
 serial gateway signaling cable connector **2-25**
- pin-out configuration
 serial gateway data interface cable **2-21**
 serial gateway signaling interface cable **2-24**
- point-to-point conferencing **1-8**
- PORT connectors **2-3**
- ports
 physical line properties **3-46**
 PRI **3-46**
 settings **3-45**
 supported **1-4**
 supported services **3-59**
- Port Specific tab **3-44**
- Port tabs **3-45**
- power supply **2-26**
- presentation restriction **3-33, 3-34, 3-36**
- PRI
 call handling capacity **1-13**
 connecting gateway directly to central office switch **1-10**
 connecting gateway to a PBX **1-10**
 interface features **1-6**
 ISDN connections **1-9**
 ports **3-46**
- PRI LINE connector **2-3**
- PRI Port tab **3-51**
-
- Q**
- Q.931 **1-2, 3-33, 3-34, 3-35, 3-52, 3-57**
 Quality of Service (QoS) **1-2, 3-24**
-
- R**
- rack mounting **2-5**
 read-only access level **3-2**
 Rear Transition Module (RTM) **2-3**
 refresh **3-11, 3-14**
 requirements **2-11**
 installation **2-4**
 resources **3-31**
 RJ-45 **2-2, 2-3**
 rollover **1-3, 3-28, 3-36**
 routing **1-2, 3-58, 4-3**
 RS-232
 DTE 9-pin D-type connection **1-6**
 RS-366 **3-48**
 RS-449 **2-15, 3-48**
 RST button **2-2**
 RTM panel components **2-3**
-
- S**
- saving configuration settings **3-64**
 second number delimiter **3-21, 4-2**
 security **3-8**
 Security tab **3-8**
 serial control port **1-6**
 serial lines **2-15**
 serial port connector **2-2**
 services **3-42, 3-59**
 default **3-42**
 prefix **3-42, 3-59, 4-1**

user defined **3-42**
Services tab **3-33, 3-42, 3-43**
Settings tab **3-14, 3-15, 3-17, 3-20, 3-21, 3-22, 3-23, 3-26, 3-30, 3-32, 3-33, 3-39, 3-43, 3-44**
 signaling protocols **1-6, 3-46, 3-48**
 signaling type **3-47**
SNMP **3-8**
 management **1-2**
 trap events **3-26, 3-27, 3-29**
 trap servers **1-3**
 trap severity enumerations **3-30**
 software upgrade utility procedures
 install and launch **7-1**
 use utility **7-2**
Statistics tab **3-62**
Status tab **3-13, 3-14**
 stripping **3-56**
 sub-addressing **3-35, 4-4**
SWAP RDY LED **2-2**
 switch information **1-6**

T

T.120 **3-22, 3-30**
 data collaboration **1-2**
 enable **3-35**
TCS4 **1-2, 3-21, 3-59, 4-3, 4-4**
 temperature **3-10**
 time and date **3-5**
 top slot **2-6**
 troubleshooting
 echo cancellation **5-9**
 Ethernet port settings **5-8**
 Ethernet port speed **5-11**
 factory defaults **5-8, 5-10**
 global user name and password **5-8, 5-9**
 IP address problems **5-1**
 LED indication problems **5-2**
 making calls **5-4**

networking information **5-8**
 receiving calls **5-5**
 remote monitoring **5-7**
 T.120 data collaboration **5-10**
 web server port setting **5-10**
 troubleshooting procedures
 access device commands through serial port **5-8**
 assign IP address to a new gateway **5-2**
 change global user name and password **5-9**
 configure speed of Ethernet port **5-11**
 configure web server port **5-10**
 monitor gateway functions from remote site **5-7**
 restore factory default settings **5-10**
 set echo cancellation **5-9**
 set T.120 data collaboration capability **5-10**
Type of Number (TON) fields **3-56**
Type of Service (TOS) **3-25**

U

upgrade software **7-1**
 user-defined services **3-42**
Users tab **3-2, 3-3**

V

V.35 **2-15, 3-48**
Version Details dialog box **3-5**
 video conferencing protocols **1-4**
 video protocols **1-4**
 enable H.263, H.263+, H.264 **3-23**
 video resolutions **1-4**
 viewing
 audio message details **6-5**
 B channel status **3-13**
 call details **3-60**
 call information **3-60**
 general information **3-3**

LED information **3-3**
reported alarm events **3-62**
service details **3-42**
services on each port **3-59**
software version details **3-5**
System section **3-9**
system-specific information **3-62**

W

web-based management **1-2**
web files **3-28, 3-29**
web server **3-8**
Web tab **2-28, 3-8**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>