

unauthorized use or repair, neglect, misuse, abuse, failure to follow instructions for care and maintenance, fire, flood and Acts of God.

If your problem is not covered by this warranty, call our Technical Support Department at (800) 54-HOW-TO for general repair information and charges if applicable. You may also contact us through our website at www.vectormfg.com.

STATE LAW RIGHTS: This warranty gives you specific legal rights. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the exclusions or limitations stated herein may not apply. This warranty gives the purchaser specific legal rights; other rights, which vary from state to state, may apply.

TO REQUEST WARRANTY SERVICE FOR THIS PRODUCT: Contact Technical Support by telephone, fax or mail (see below). We suggest that you keep the original packaging in case you need to ship the unit. When returning a product, include your name, address, phone number, dated sales receipt (or copy) and a description of the reason for return and product serial number. After repairing or replacing the unit, we will make every effort to return it to you within four weeks.

WARRANTY ACTIVATION: Please complete Warranty Activation Card and mail to Vector Products, Inc.. Enter "WLB26B" as Model and "Bright Bar™" as Product Type. All Vector products must be registered within 30 days of purchase to activate this warranty. Mail the completed registration form, along with a copy of the original sales receipt, to:

- BLACK & DECKER
4409 W. Wanda, McAllen, TX 78503
- TOLL FREE: (800) 54-HOW-TO • FAX: (956) 630-0492 •

WARRANTY IS NON-TRANSFERABLE.

RD072006

© 2006 VECTOR PRODUCTS, INC.
MADE IN CHINA

4

BLACK & DECKER®

Bright Bar™

**USER'S MANUAL
& WARRANTY INFORMATION**



Thank you for choosing Black & Decker!
Go to www.BlackandDecker.com/NewOwner
to register your new product

IMPORTANT SAFETY INFORMATION, SAVE THESE INSTRUCTIONS

THIS MANUAL CONTAINS IMPORTANT INFORMATION REGARDING THE OPERATION AND WARRANTY OF THIS PRODUCT. PLEASE READ CAREFULLY BEFORE USE AND RETAIN FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNINGS

Dispose of used batteries properly. Do not dispose of batteries in fire. This may result in an explosion.

Charge or power this unit ONLY with the originally supplied Class 2 transformer. Consult manufacturer for replacement.

Batteries can explode or leak, and can cause injury or fire. To reduce this risk:

- Carefully follow all instructions and warnings on the package.
- Do not dispose of batteries in fire.
- Keep batteries out of reach of children.

Never look directly into the light or shine the light into another person's eyes.

⚠ CAUTIONS

- DO NOT expose this unit to extremely high temperatures.
- This unit is moisture-resistant, NOT waterproof. Do not submerge in liquids of any kind.

Read This User's Manual Before Using This Unit.

SAVE THESE INSTRUCTIONS

INTRODUCTION

Thank you for purchasing the **Black & Decker® Bright Bar™**. Please read this manual carefully before use to ensure optimum performance and avoid damage to the unit.

FEATURES

- 26 high-intensity LED bright bar illuminates a wide area
- Corded or cordless operation
- Built-in rechargeable Ni-MH battery (with supplied 120 volt AC Charging/Power Adapter)
- Hi/Low settings extend runtime
- High impact, weather- and shatter-resistant ABS housing
- 360° Swivel Hanging Hook for hands-free use
- Seven hours continuous runtime on LOW setting, four hours continuous runtime on HIGH setting, on a single charge
- Rubber Base allows unit to sit on flat surfaces

OPERATING THE UNIT

Position the unit as desired. Press the HIGH/OFF/LOW Switch on the side of the unit.

The up position turns the unit ON in HIGH setting.

The down position turns the unit ON in LOW setting.

The center position turns the unit OFF.

OPERATING THE UNIT CORDED

Insert the Adapter's DC Connector of the AC/DC Charging/Power Adapter into the 12 Volt DC Charging Port. Insert the plug end into a (powered) standard North American 120 Volt 60Hz outlet. Operate the unit as outlined in the previous section.



RECHARGING THE UNIT

Insert the Adapter's DC Connector of the AC/DC Charging/Power Adapter into the 12 Volt DC Charging Port. Insert the plug end into a (powered) standard North American 120 Volt 60Hz outlet. The red Charging Indicator LED will light to indicate the unit is charging.

Notes: *Do not charge for longer than 8 hours. Charge or power this unit ONLY with the originally supplied Class 2 transformer. Consult manufacturer for replacement.*

Battery Disposal

This unit contains an Ni-MH battery and should be disposed of properly. For more information on recycling batteries, call toll-free (800) 822-8837.



⚠ WARNINGS

- **Do not dispose of the battery in fire. This may result in an explosion.**
- **Before disposing of the battery, protect exposed terminals with heavy-duty electrical tape to prevent shorting, which can result in injury or fire.**
- **Do not expose the battery to fire or intense heat as it may explode.**

TWO YEAR LIMITED WARRANTY PROGRAM

This limited warranty program is the only one that applies to this product, and it sets forth all the responsibilities of Vector Products, Inc., regarding this product. There is no other warranty, other than those described herein. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty.

This Vector Products, Inc. product is warranted, to the original purchaser only, to be free of defects in materials and workmanship for two years from the date of purchase without additional charge. The warranty does not extend to subsequent purchasers or users. Manufacturer will not be responsible for any amount of damage in excess of the retail purchase price of the product under any circumstances. Incidental and consequential damages are specifically excluded from coverage under this warranty.

This product is not intended for commercial use. This warranty does not apply to damage to units from misuse or incorrect installation/connection. Misuse includes wiring or connecting to improper polarity power sources.

RETURN/REPAIR POLICY: Defective products may be returned to manufacturer. Any defective product that is returned to manufacturer within 30 days of the date of purchase will be replaced free of charge. If such a product is returned more than 30 days but less than two years from the purchase date, manufacturer will repair the unit or, at its option, replace it, free of charge.

If the unit is repaired, new or reconditioned replacement parts may be used, at manufacturer's option. A unit may be replaced with a new or reconditioned unit of the same or comparable design. The repaired or replaced unit will then be warranted under the terms of the remainder of the warranty period. The customer is responsible for the shipping charges on all returned items. During the warranty period, manufacturer will be responsible for the return shipping charges to the customer in the United States.

LIMITATIONS: This warranty does not cover accessories, such as charging adapters, bulbs, fuses and batteries, damage or defects resulting from normal wear and tear (including chips, scratches, abrasions, discoloration or fading due to usage or exposure to sunlight), accidents, damage during shipping to our service facility, alterations,

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>