

Dinion^{XF} – LTC 0620 & LTC 0495 series Day/Night cameras



Security Systems

EN | Installation Instructions
15-bit digital day/night
camera

FR | Manuel d'installation
Caméra numérique jour/nuit
15 bits

DE | Installationshandbuch
15-Bit digitale Tag-/Nacht-
Kamera

ES | Manual de instalación
Cámara día/noche digital
de 15 bits

NL | Installatiehandleiding
15-bits digitale dag/nacht-
camera

IT | Manuale di installazione
Telecamera giorno/notte
digitale 15 bit

PT | Manual de Instalação
Câmara digital dia/noite
de 15 bits

ZH | 安装说明
15 位数码日夜两用型摄像机

BOSCH

SAFETY PRECAUTIONS



Danger

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk to persons.



Warning

The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Caution

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

Important Safeguards

1. Read these instructions.
2. Keep these instructions.
3. Comply with all warnings.
4. Follow all instructions.
5. Do not use this equipment near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other equipment (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. Both the wide blade and the third prong are provided for your safety. If the supplied plug does not fit into your outlet, consult an electrician for advice.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the equipment.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this equipment during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the equipment has been damaged in any way, such as when power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the equipment, the equipment has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. An all-pole mains switch with a contact separation of at least 3mm in each pole shall be incorporated in the electrical installation of the building.



Warning

To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Note

Any change or modification of the equipment not expressly approved by Bosch could void the user's authority to operate the equipment. For additional information or to speak to a representative, please contact the Bosch Security Systems location nearest to you or visit our web site at www.boschsecuritysystems.com

Introduction

The Dinion^{XF} Day/Night is a high-performance smart surveillance color camera. It incorporates 15-bit digital signal processing for outstanding picture performance under all lighting conditions. The Dinion^{XF} Day/Night is easy to install and ready to use, and offers the best solution for demanding scene conditions. Features include:

- Day/Night camera with mechanically switching IR filter
- Three pre-programmed operation modes
- Noise elimination, true color reproduction
- Adaptive dynamic range optimization
- Bilinix™ bi-directional coaxial communications
- Genlock including sub-carrier locking
- Enhanced video motion detection

Type number overview

| Type number | LTC 0620/11 | LTC 0620/21 | LTC 0620/51 | LTC 0620/61 |
|----------------|------------------|----------------|----------------|----------------|
| Standard | PAL | NTSC | PAL | NTSC |
| Supply voltage | 24 VAC or 12 VDC | | 230 VAC 50Hz | 110 VAC 60Hz |
| CCD type | 1/2" | | | |

| Type number | LTC 0495/11 | LTC 0495/21 | LTC 0495/51 | LTC 0495/61 |
|----------------|------------------|----------------|----------------|----------------|
| Standard | PAL | NTSC | PAL | NTSC |
| Supply voltage | 24 VAC or 12 VDC | | 230 VAC 50Hz | 110 VAC 60Hz |
| CCD type | 1/3" | | | |



Caution

Ensure that your power supply matches the rated voltage of your camera before installing.

Unpacking

Unpack carefully and handle the equipment with care. The packaging contains:

- DinionXF Day/Night camera
- CS to C lens mount adapter
- CCD protection cap
- Spare lens connector (male)
- These instructions


Note

If equipment appears to have been damaged during shipment, repack it in the original packaging and notify the shipping agent or supplier.


Connections

Power

Low voltage versions

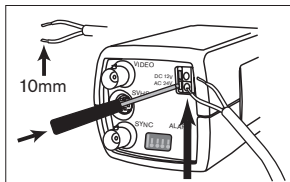



High voltage versions

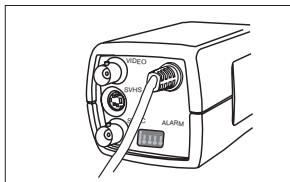



For low voltage cameras:

- push in the tabs to open the quick-connectors (these connections are not polarity sensitive).
- use AWG16 to 22 stranded wire or AWG16 to 26 solid wire; cut back 10mm (0.4") of insulation.



Composite video

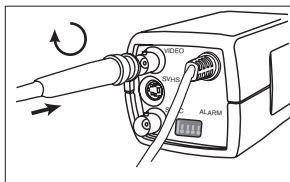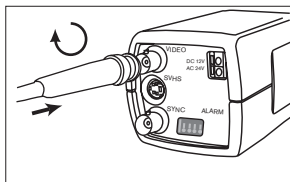


Sync

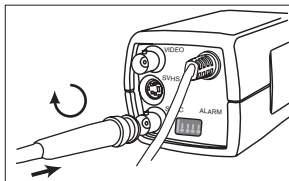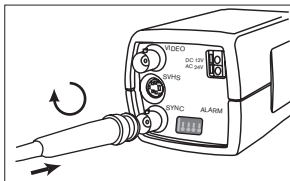

Y/C

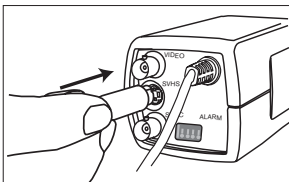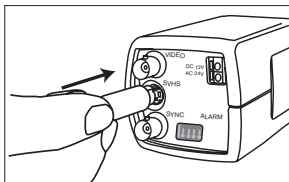


| Pin | Y/C socket |
|-----|------------|
| 1 | GND Y |
| 2 | GND C |
| 3 | Y |
| 4 | C |

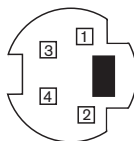

Alarm connector

| Pin | Alarm socket |
|-----|---------------------|
| 1 | Alarm in Ground |
| 2 | Alarm in |
| 3 | Relay out contact 1 |
| 4 | Relay out contact 2 |

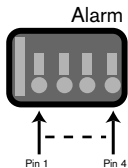

- Max. wire diameter AWG 22-28 for both stranded and solid
- Default relay position n.o. (normally open), no alarm
- Alarm output relay switching capability: Max voltage 30VAC or +40VDC. Max 0.5 A continuous, 10VA.
- Alarm in: TTL logic, +5V nominal, +40VDC max, DC coupled with 22k Ω pull-up to +3.3V
- Alarm in: configurable as active low or active high
- Max. 42V allowed between camera ground and each of the relay pins.



Lens mounting

The camera accepts CS-mount lenses. C-mount lenses can be mounted using the lens adapter ring. DC-iris lenses are recommended for the best picture performance. The camera automatically detects the type of lens used and optimizes performance accordingly. A spare male lens connector is provided.




Caution

To avoid damaging the CCD sensor when using a C-mount lens, make sure the supplied lens adapter ring is mounted onto the camera before mounting the lens. Lenses weighing more than 0.5 kg (1.1 lbs) must be separately supported.

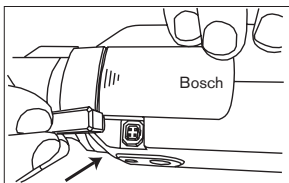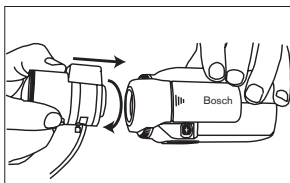

| Pin | Video iris lens | DC iris lens |
|-----|-------------------------------------|--------------|
| 1 | Supply (11.5V \pm 0.5, 50mA max.) | Damp - |
| 2 | Not used | Damp + |
| 3 | Video signal 1Vpp 1kOhm | Drive + |
| 4 | Ground | Drive - |

 

Note

If a short circuit is detected on the lens connector, the on-screen display (OSD) failure message LENS SHORT CIRCUIT is shown. The lens circuit is automatically disabled to avoid internal damage. Remove the lens connector and check the pin connections.

Back focus adjustment



To optimize picture sharpness in both bright and low-level lighting, adjust the back focus. Use the camera's unique **Lens Wizard** (see **Advanced Set-up**). This ensures that the object of interest always remains in focus even when focusing at the maximum lens opening.

When back focusing vari-focus lenses, adjust to obtain a sharp picture in both wide-angle and tele positions for both far and near focus.


When back focusing zoom lenses, ensure the object of interest remains in focus throughout the entire zoom range of the lens.

To adjust back focus:

1. Open the slide door at the side of the camera
2. Unlock the back focus locking button.

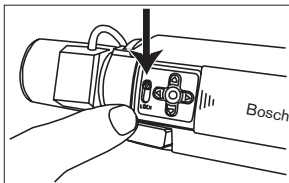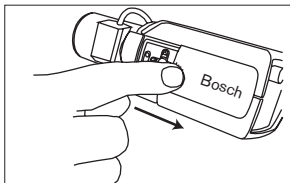


3. Turn the back focus adjustment as required.

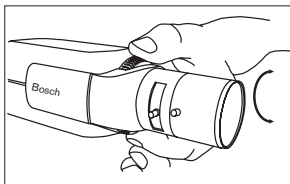

4. Lock the back focus locking button.

Mounting the camera

The camera can be mounted from the top or bottom. The bottom mounting is isolated from ground. With outdoor scenes, a DC-iris lens is recommended.

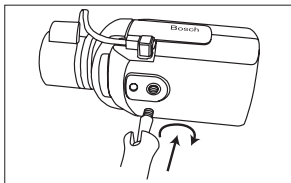

Caution

Do not point the camera/lens into direct sunlight.

Day/Night switching

The Dinion^{XF} Day/Night Camera is equipped with a motorized IR filter. The IR filter can be removed in low-light or IR illuminated applications. If Auto switching mode is selected, the camera automatically switches the filter depending on the observed light level. The switching level is programmable. In Auto switching mode the camera prioritizes motion (the camera gives sharp images without motion blur as long as the light level permits) or color (the camera gives color pictures as long as the light level permits). The camera recognizes IR illuminated scenes to prevent unwanted switching to color mode.

There are four different methods of switching:

- via the alarm input,
- via BilinxTM communication,
- as part of the programmable mode profile, or
- automatically, based on the observed light levels.

Advanced Set-up

The Dinion^{XF} Day/Night normally provides an optimal picture without the need for further adjustments. However, advanced set-up options are available for getting the best results from the camera under special circumstances. There are two main menus; a **Mode** menu and an **Installer** menu.

The camera has three pre-programmed operating modes that can be selected in the **Mode** menu. These modes are pre-programmed by default but you can adjust them according to your preferences. The **Mode** menu allows you to select and set-up the picture enhancement functions for each mode. If you are not happy with your changes, you can always recall the default values for the mode.



The camera also has an **Installer** menu in which the installation settings can be set.

The **Mode** and **Installer** menus have functions that can be selected directly or submenus for more detailed set-up.

Accessing and navigating menus

Five keys, located behind the side panel, are used for navigating through the various menus.


To access the set-up menus, press the menu/select key (center).

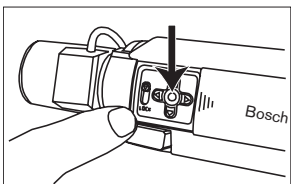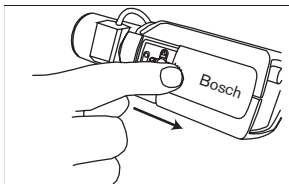


The main menu appears on the OSD. Use the arrow keys for navigation.

When the BilinxTM communications link is active, the buttons on the camera are disabled. You can also set up BilinxTM so that the camera buttons remain disabled even when BilinxTM is not actively controlling the camera. This prevents unauthorized change of the camera settings.


Menu Structure

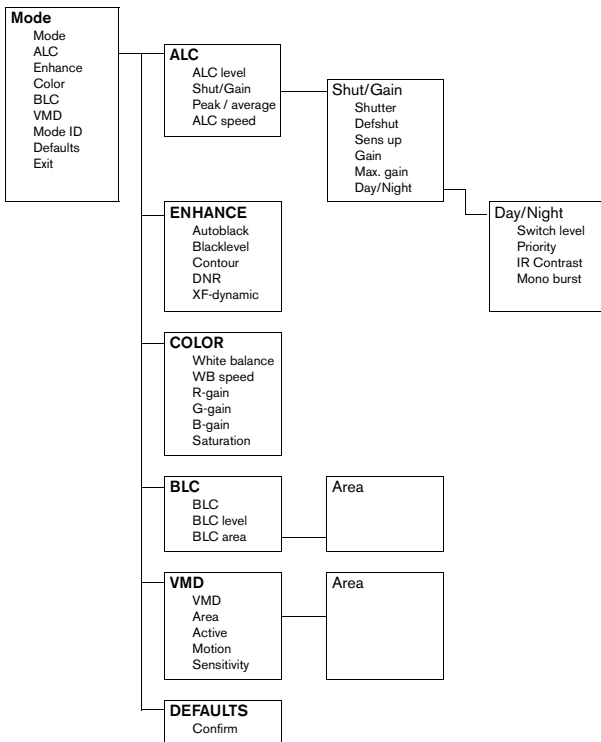

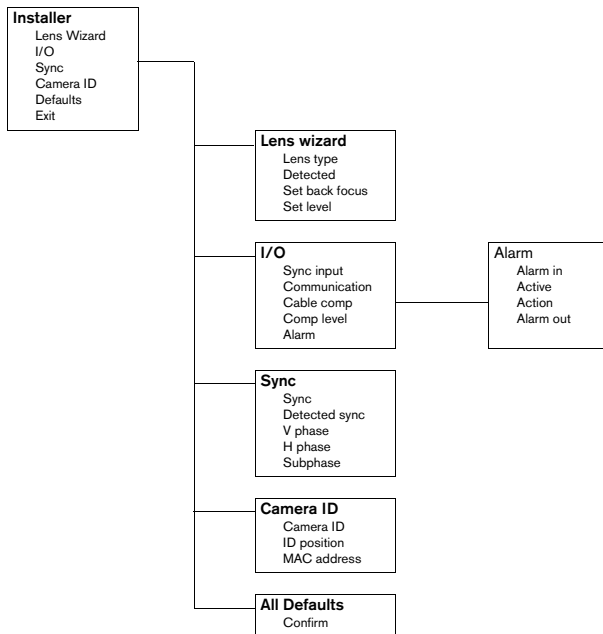

Hints for menu navigation

How to use the 5 keys

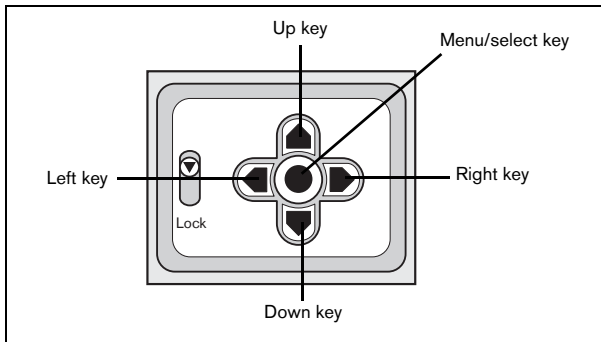

- Press the menu/select key to access the menus or to move to the next or previous menu.
- Press the menu/select key for approximately 1.5 seconds to open the **Installer** menu.
- Use the up or down keys to scroll up or down through a menu.
- Use the left or right keys to move through options or to set parameters.
- When in a menu, quickly pressing the menu/select key twice restores the selected item to its factory default.
- To close all menus at once from any menu, select the **Exit** item and hold down the menu/select key until the menu display disappears.

Mode menu

| Function | Selection | Description |
|----------|---------------------------------|--|
| MODE | 1, 2, 3 | Select operating mode |
| ALC | Select submenu | Select to access the video level control menu |
| ENHANCE | Select submenu | Select to access the picture enhancement menu |
| COLOR | Select submenu | Select to access the color control menu |
| BLC | ON, OFF, Select submenu | <ul style="list-style-type: none"> • To enable Back Light Compensation (BLC) operation set to ON • Select to access the BLC menu |
| VMD | OFF, SIL, OSD Select submenu | <ul style="list-style-type: none"> • To enable Video Motion Detection (VMD) operation set to SIL (silent) or OSD (monitor alarm generates on-screen message) • Select to access the VMD menu |
| MODE ID | 10 character string | Editable name for the selected mode |
| DEFAULTS | Select submenu | Return all settings for the selected mode to factory defaults |
| EXIT | | Exit the menu |

ALC submenu

| Function | Selection | Description |
|--------------|--------------------|---|
| ALC LEVEL | -15 - 0 - +15 | Adjusts the video output level |
| SHUTGAIN | Select submenu | Select to access the Shutter and Gain control menu |
| PEAK AVERAGE | -15 - 0 - +15 | Adjust the balance between peak and average video control |
| ALC SPEED | Slow, Medium, Fast | Adjust the speed of the video level control loop. |
| EXIT | | Return to MODE menu |

ALC --> Shutter/Gain submenu

| Function | Selection | Description |
|-----------|--|---|
| SHUTTER | AES, FL, FIXED | <ul style="list-style-type: none"> • AES - auto-shutter - the camera automatically sets the optimum shutter speed for manual iris lenses • FL - flickerless mode avoids interference from light sources (recommended for use with video iris or DC iris lenses only) • FIXED - allows a user defined shutter speed |
| DEFSHUT | 1/60 (1/50), 1/100, 1/120, 1/250, 1/500, 1/1000, 1/2000, 1/5000, 1/10K | Only available if SHUTTER is AES. The camera tries to maintain the selected shutter speed as long as the light level of the scene permits. |
| FIX SHUT | 1/60 (1/50), 1/100, 1/120, 1/250, 1/500, 1/1000, 1/2000, 1/5000, 1/10K | Only available if SHUTTER is FIXED. Selects shutter speed. |
| SENSUP | OFF, 2x, 3x, ...,10x | Selects the factor by which the sensitivity of the camera is increased. |
| GAIN | AGC, FIXED | <ul style="list-style-type: none"> • In AGC mode the camera automatically sets the gain to the lowest possible value needed to maintain a good picture • In FIXED mode the gain is set at a predefined not scene dependent value |
| MAXGAIN | 0, 1, ... 26 | Available in AGC mode only. Selects the maximum value the gain can have during AGC operation. |
| FIXGAIN | 0, 1, ... 26 | Available in FIXED gain operation only. Selects the gain setting. |
| DAY/NIGHT | Select submenu | Select to access the day/night control menu |
| EXIT | | Return to the ALC menu |

Note

If SENS UP is active, some noise or spots may appear in the picture. This is normal camera behavior. SENS UP may cause some motion blur on moving objects.

If the camera is in monochrome mode, all color related menu items are disabled and cannot be accessed.

Day/Night submenu

| Function | Selection | Description |
|----------------|-------------------------|--|
| DAY/NIGHT | COLOR, MONO, AUTO | <ul style="list-style-type: none"> • In COLOR mode the camera will always give a color image. • In MONO mode the IR filter is removed, giving full IR sensitivity in a monochrome image. • In AUTO mode the camera switches the filter depending on the scene illumination level. |
| LEVEL | -15 - 0 - +15 | To set the video level at which the camera switches to monochrome operation in AUTO DAY/NIGHT mode. |
| PRIORITY | COLOR, MOTION | In AUTO mode: <ul style="list-style-type: none"> • COLOR: the camera gives a color image as long as the light level permits. • MOTION: the camera avoids motion blur as long as the light level permits. |
| IR CONTRAST | NORMAL, ENHANCED | <ul style="list-style-type: none"> • In ENHANCED mode the camera will optimize contrast in applications with high IR illumination levels. • In NORMAL mode the camera will optimize contrast in mono application with visible light illumination. |
| MONO BURST | ON, OFF | <ul style="list-style-type: none"> • If selected OFF The Color Burst in the video signal is switched OFF in monochrome mode of the camera. • If selected ON the Color Burst remains active even in Monochrome mode of the camera. |
| EXIT | | Return to Shutter/Gain submenu. |

Enhance submenu

| Function | Selection | Description |
|---------------------------------------|------------------------|--|
| AUTO BLACK | ON, OFF | Autoblock ON automatically increases the visibility of details |
| BLK LEVEL | -50, ... 0, ...+50 | Adjusts the black level between 0 and approx 110mV. Zero position of slider corresponds to the factory default black level |
| CONTOUR | -15 - 0 - +15 | Adjusts the sharpness of the picture. 0 corresponds to the default position. |
| DNR (dynamic noise reduction) | AUTO, OFF | In AUTO mode the camera automatically reduces the noise in the picture. This may cause some motion blur on moving objects. |
| XF-DYN (dynamic range enhancement) | OFF, LOW, MID, HIGH | In XF-DYN mode the camera automatically optimizes the contrast in the picture. |
| EXIT | | Return to Mode menu |

Color submenu

| Function | Selection | Description |
|----------------|-----------------------|--|
| WHITE BALANCE | ATW, MANUAL, AWB HOLD | <ul style="list-style-type: none"> • ATW: Auto tracking white balance allows the camera to constantly adjust for optimal color reproduction. • AWB HOLD: Puts the ATW on hold and saves the color settings. • In MANUAL mode the Red, Green and Blue gain can be manually set to a desired position |
| WB SPEED | Slow, Medium, Fast | Adjust the speed of the white balance control loop. |
| RED gain | -5 - 0 - +5 | • ATW mode and AWB hold mode: adjusts the Red gain to optimize the white point. |
| BLUE gain | -5 - 0 - +5 | • ATW mode and AWB hold mode: adjusts the B gain to optimize around the white point. |
| RED GREEN BLUE | -50 - 0 - +50 | Controls all the colors individually for manual white balance only. |
| SAT | +15, ... 0, ... +5 | Adjusts the color saturation. -15 will lead to a monochrome image |
| EXIT | | Return to Mode menu |

Back Light Compensation (BLC) submenu

| Function | Selection | Description |
|----------|----------------|--|
| BLC | ON, OFF | When ON, the video level is optimized for the selected area of the image. Parts outside this area may be underexposed or overexposed (this is normal). |
| BLC LVL | -15,..0,..+15 | BLC LEVEL adjust the balance between the selected BLC area and its surrounding. |
| AREA | Select submenu | Select to access the Back Light Compensation area menu (see selecting an area). |
| EXIT | | Return to Mode menu |

Selecting an area

To set-up an area for BLC (or VMD), access the area menu by selecting the AREA option from the BLC (or VMD) menu. Upon entering the AREA

menu, the current area is displayed with the upper left corner flashing. The flashing corner of the image can be moved with the Up, Down, Left, Right arrow keys. Pressing the Select key moves the flashing cursor to the opposite corner, which can now be moved. Pressing Select again freezes the area and exits the area menu.

Video Motion Detection (VMD) submenu

| Function | Selection | Description |
|----------|---------------------------------|---|
| VMD | OFF, SIL, OSD | When VMD is enabled and the camera can generate SIL (silent) or OSD (monitor alarm generates on-screen message) motion alarms. |
| AREA | 1, 2, 3, 4, Select submenu | <ul style="list-style-type: none"> It is possible to set 4 motion sensitive areas (per MODE). Press SELECT to enter the area set-up menu. |
| ACTIVE | ON, OFF | Every area can be enabled individually by selecting YES. |
| MOTION | Press SELECT to reset indicator | Indicates the peak of measured motion in the selected area |
| SENS | | Use the LEFT/RIGHT keys to set the SENSitivity for motion to the desired level. Motion above this level triggers alarm. |
| EXIT | | Return to Mode menu |

Note

If VMD areas overlap, motion is only detected in the area with the lowest sequence number.

Defaults submenu

| Function | Selection | Description |
|------------------|-----------|---|
| MODE DEFAULTS | | Select to restore the factory defaults. A confirmation screen appears. Allow 5 seconds for the camera to optimize the picture after a mode reset. |
| EXIT | | Return to Mode menu |

Installer Settings

Install menu

| Function | Selection | Description |
|-------------|----------------|---|
| LENS WIZARD | Select submenu | Select to optimize camera lens combination |
| I/O | Select submenu | Select to access the I/O functions |
| SYNC | Select submenu | Select to access the synchronization functions |
| CAMERA ID | Select submenu | Select to access ID menu |
| DEFAULTS | Select submenu | Return all settings for all modes to factory defaults |
| EXIT | | Exit the menu |

Install lens wizard submenu

| Function | Selection | Description |
|--------------------|-----------------------------|--|
| LENS TYPE | AUTO, MANUAL, DCIRIS, VIDEO | In AUTO mode the camera auto detects the type of lens used or force the camera into a mode. |
| DETECTED | | If the LENS TYPE detection is in AUTO, the detected lens type will be shown. |
| SET BACK FOCUS NOW | | Select to force lens to its maximum opening. After focusing the lens the object of interest remains in focus in bright and low light conditions. |
| SET LVL | | (Video iris lenses only). The level detector indicator must be set to the center by adjusting the level potentiometer on the lens, to obtain the best picture performance. |
| EXIT | | Return to the INSTALL menu |

Adjustment procedure DC-iris Lens:

1. Unlock the back focus locking button.
2. Access the Lens Wizard menu.
3. SET BACK FOCUS NOW is highlighted in the menu.
4. Turn the back focus adjustment as required.
5. Lock the back focus locking button.
6. Exit the menu.

Adjustment procedure Manual-iris Lens:

1. Unlock the back focus locking button.
2. Adjust the lens to the maximum lens opening.
3. Turn the back focus adjustment as required.
4. Lock the back focus locking button.

Adjustment procedure Video-iris Lens:

1. Unlock the back focus locking button.
2. Access the Lens Wizard menu.
3. SET BACK FOCUS NOW is highlighted in the menu.
4. Turn the back focus adjustment as required.
5. Lock the back focus locking button.
6. Select SET LVL in the menu; the LEVEL bar appears.
7. Point the camera at the scene it will be mostly viewing.
8. Adjust the level potentiometer located on the lens until the LEVEL bar is in the central position.
9. Exit the menu.

Note

The best performance with video iris lenses is obtained when the peak/average potentiometer of the lens is set to either full average or full peak matching the position of the peak/average balance in the MODE x ALC menu.

Install I/O submenu

| Function | Selection | Description |
|------------|-----------------------------------|--|
| SYNC IN | 75 Ohm, HIGH | Select 75 Ohm if the external sync input is not terminated elsewhere. |
| COMM | ON, OFF | If OFF, Bilinx communication is disabled. |
| CABLE COMP | OFF, DEFAULT, RG59, COAX12, COAX6 | Cable compensation is used to avoid the need for amplifiers in long distance coax connections up to 1000m (3000ft). For optimum results select the coaxial cable type used or if unknown, DEFAULT. |
| COMP LEVEL | 0, 1, .. +15 | Sets the level of cable compensation. |
| ALARM | Select submenu | |
| EXIT | | Return to the INSTALL menu |

Install I/O --> Alarm submenu

| Function | Selection | Description |
|-----------|-------------------------------------|--|
| ACTIVE | NONE, HIGH, LOW | Selects active_HIGH or active_LOW for the alarm input connector. Select NONE to disable alarm switching. |
| ACTION | NONE, MONO, MODE1, MODE2, MODE3 | Selects the operating mode of the camera upon switching the alarm input. |
| ALARM OUT | VMD, REMOTE, DAY/NIGHT, FILTER MOVE | <ul style="list-style-type: none"> • Select VMD to close the output relay upon VMD alarms. • Select REMOTE to make the output relay available to remote communication devices. • Day/night: the alarm output relay closes if the camera operates in monochrome mode. • Filter move: the alarm output relay closes before the filter starts moving (in either direction) and opens when the video level has stabilized (2 - 3 seconds). |
| EXIT | | Return to the I/O menu |

Install sync submenu

| Function | Selection | Description |
|---------------|---------------------------------------|---|
| SYNC | INTERNAL, LINE LOCK, HV LOCK, GENLOCK | Select INTERNAL for free running camera operation, select LINE LOCK to lock to the power supply frequency, select HV LOCK to lock to the signal supplied to the external sync input, select GENLOCK to lock the subcarrier as well. |
| DETECTED SYNC | | Shows the actual sync mode used by the camera. |
| VPHASE | 0, 2, ... 358 | Adjusts the vertical phase offset (when in LINE LOCK mode and a valid power supply frequency is detected). |
| HPHASE | -25, ..., 0, ... +125 | Adjust the horizontal phase offset (when in EXT lock mode and a valid input signal is detected) |
| SUB PHASE | 0, 2, ... 358 | Adjusts the sub-carrier phase offset (when in EXT LOCK mode and a valid sub-carrier is detected). |
| EXIT | | Return to the INSTALL menu |

Note

VPHASE, HPHASE and SUB-PHASE cannot be accessed if there is no valid locking signal.

Install ID submenu

| Function | Selection | Description |
|-----------|---------------|---|
| CAMERA ID | | Enter a 16 character camera name string. Use LEFT/RIGHT to change position in the string, use UP/DOWN to select the character. Use SELECT to exit the string edit screen. |
| ID POS | OFF, TOP, BOT | Select TOP to display the camera ID in the upper left corner; select BOT for the lower left corner. The ID string is not displayed when the OSD menus are open. |
| EXIT | | Return to the INSTALL menu |

Defaults submenu

| Function | Selection | Description |
|--------------|-----------|---|
| ALL DEFAULTS | | Select to restore the factory defaults. A confirmation screen appears. Allow 5 seconds for the camera to optimize the picture after a mode reset. |
| EXIT | | Return to Mode menu |

Camera Control Communication

This camera is equipped with a coaxial communications transceiver. In combination with VP-CFGSFT, the camera can be adjusted from the head-end side of the coaxial cable. All menus can be accessed remotely giving full control of the camera. With this communication it is also possible to disable the local keys on the camera.

To avoid loss of communication on an installed camera, the COMMUNICATION ON/OFF selection is NOT available while using remote control. This function can only be accessed with the camera buttons.

Technical specification

1/2" CCD versions

| Type number | LTC 0620/11 | LTC 0620/21 | LTC 0620/51 | LTC 0620/61 |
|----------------------|---|----------------|--|----------------|
| Standard | PAL | NTSC | PAL | NTSC |
| Active pixels | 752x582 | 768x492 | 752x582 | 768x492 |
| Rated supply voltage | 24 VAC or 12 VDC 12-28 VAC (50/60 Hz) 11-36 VDC | | 230 VAC 50Hz, (/50) 110 VAC 60Hz, (/60) Range: 100-240 VAC ±10% 50/60Hz | |
| Min illumination | < 0.18 lux < 0.024 lux (in monochrome mode) | | | |

1/3" CCD versions

| Type number | LTC 0495/11 | LTC 0495/21 | LTC 0495/51 | LTC 0495/61 |
|----------------------|---|----------------|--|----------------|
| Standard | PAL | NTSC | PAL | NTSC |
| Active pixels | 752x582 | 768x492 | 752x582 | 768x492 |
| Rated supply voltage | 24 VAC or 12 VDC 12-28 VAC (50/60 Hz) 11-36 VDC | | 230 VAC 50Hz, (/50) 110 VAC 60Hz, (/60) Range: 100-240 VAC ±10% 50/60Hz | |
| Min illumination | < 0.24 lux < 0.038 lux (in monochrome mode) | | | |

All versions

| | |
|-----------------|--|
| Imager | Interline CCD |
| Resolution | 540 TVL |
| SNR | > 50 dB |
| Video output | 1 Vpp, 75 Ohm |
| Y/C output | Y: 1 Vpp C: 0.3 Vpp |
| Synchronization | Internal, HV-lock, Genlock or Line Lock selectable |
| Shutter | AES (1/60 (1/50) to 1/100000), Flickerless, Fixed selectable |

All versions

| | |
|-----------------------|--|
| Day/Night | Color, Mono, Auto |
| Sens Up | Adjustable from OFF to 10x |
| Auto black | On, Off selectable (maximum level selectable up to 28dB) |
| AGC | AGC on or off (0 dB) selectable |
| XF-DYN | Automatic dynamic range enhancement level selectable |
| DNR | Automatic noise filtering ON/OFF selectable |
| Contour | Sharpness enhancement level selectable |
| BLC | BLC On or Off selectable, with programmable area |
| White balance | Automatic 2500 - 9000K (with AWB hold mode and manual mode) |
| Color saturation | Adjustable from monochrome (0%) to 133% color |
| Lens Mount | CS compatible, C-mount compatible with supplied adapter ring |
| ALC lens | Video or DC iris auto detect |
| Power consumption | < 5 W |
| Dimensions | 58 x 66 x 122 mm (HxWxL) without lens |
| Weight | 450g without lens |
| Tripod Mount | Bottom (isolated) and Top 1/4" 20 UNC |
| Operating temperature | -20° to 50° C |
| Controls | OSD with softkey operation |

Accessories

Power transformers

- TC1334 120VAC, 60Hz - 24VAC, 30VA
- TC120PS 120VAC, 60Hz - 15VDC, 9VA
- TC220PSX-24 220-240VAC, 50/60Hz - 24VAC, 30VA
- TC220PS 220-240VAC, 50/60Hz - 15VDC, 9VA

Interface box:

- VP-CFGSFT BilinxTM communication interface box and software

Recommended lenses

Varifocal lenses:

- LTC 3264/30 1/2" DC-iris, 4.5-10mm F1.6-360
- LTC 3274/40 1/2" DC-iris, 7.5-75mm F2.2-360
- LTC 3364/21 1/3" DC-iris, 2.8-6mm F1.4-300 - IR
- LTC 3364/31 1/3" DC-iris, 3.5-8mm F1.4-300 - IR
- LTC 3364/40 1/3" DC-iris, 2.8-12mm F1.4-360
- LTC 3374/20 1/3" DC-iris, 5-50mm F1.4-185

Zoom lenses:

- LTC 3283/20 1/2" Video iris, 8-48mm F1.4-360
- LTC 3384/21 1/3" DC-iris, 6-60mm F1.4-360

Bosch Sicherheitssysteme GmbH
Ludwig-Bölkow-Allee
85521 Ottobrunn
Germany
www.bosch-sicherheitssysteme.de

Bosch Security Systems B.V.
P.O. Box 80002
5600 JB Eindhoven
The Netherlands
www.boschsecuritysystems.com

© 2004 Bosch Security Systems B.V.
Subject to change. Printed in Portugal.
3122 165 23061

BOSCH

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>