


Check Writer
Electronic Checking System

**USER'S GUIDE
FOR
CW-600/1000**

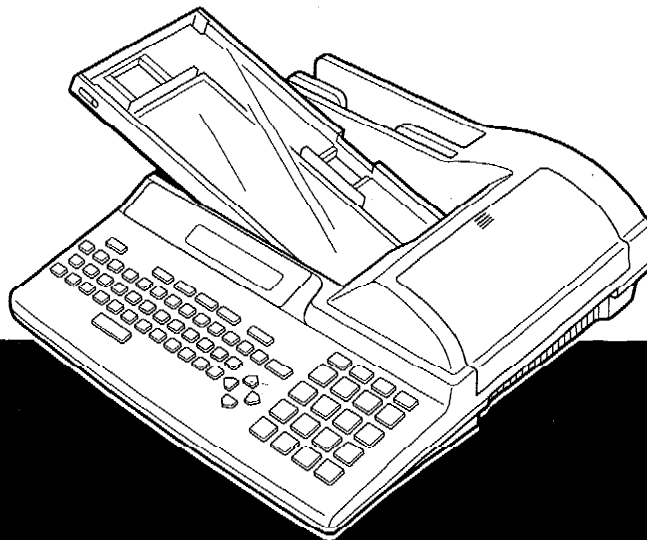

brother®

Congratulations!

Thank you for choosing Brother's CheckWriter! This machine is designed to deliver years of reliable operation. Please read this manual carefully and keep it in a safe place for future reference. We recommend that you write the unit's model number and serial number in the blank spaces below. These numbers can be found on the back side of the CheckWriter.

| | |
|------------|-------------|
| MODEL No.: | SERIAL No.: |
|------------|-------------|

FCC NOTICE


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been certified to comply with FCC standards, which are applied to the U.S.A. only.

Changes or modifications not expressly approved by Brother International Corp. could void the user's authority to operate the equipment.

Warning:

The  symbol in front of titles are used to draw the user's attention to avoid any risk of injury, death or damage to his property.

Contents

| | |
|--|----|
| Chapter 1 Understanding Your Machine | 1 |
| Machine Diagrams | 2 |
| Features..... | 2 |
| Keyboard..... | 2 |
| Print unit..... | 3 |
| Paper cassette | 3 |
| What Your CheckWriter Can Do for You | 4 |
| Account Tracking..... | 4 |
| Printing Functions | 4 |
| Transaction Management | 4 |
| Financial Calculations (CW-1000 only)..... | 5 |
| Calculator..... | 5 |
| Database..... | 5 |
| Important Keys | 6 |
| Up/Down Cursor Keys | 6 |
| Left/Right Cursor Keys | 6 |
| Cancel Key | 6 |
| Function Keys | 6 |
| Correction Keys | 6 |
| Precautions | 7 |
| | |
| Chapter 2 Before You Start: Preparing Your Machine | 9 |
| Installing the Battery | 10 |
| Installing the Ink-Jet Cartridge | 12 |
| Loading the Paper Cassette | 15 |
| Setting Up Report or Check Paper | 15 |
| To Avoid Problems while Printing | 16 |
| | |
| Chapter 3 Printing Your First Check: A Practice Session | 17 |
| Printing Your First Check: A Practice Session | 18 |
| 1- Reset the CheckWriter..... | 18 |
| 2- Set up Account I Information. | 19 |
| 3- Set Up the Date and Time. | 20 |
| 4- Set Up Payee Names..... | 20 |
| 5- Make a Deposit..... | 22 |
| 6- Issue a Check, and Print it..... | 23 |
| 7- Reset the CheckWriter Again. | 25 |

| | |
|--|----|
| Chapter 4 Personalizing Your CheckWriter: Setup | 27 |
| What Needs to be Done | 28 |
| Selecting an Item to Set Up | 29 |
| Entering Your Payees | 30 |
| Setting Up Your Account | 33 |
| If You Forget Your Password | 34 |
| Deciding Categories | 35 |
| Setting Your Print Format | 36 |
| Print Position | 36 |
| Print Contrast | 38 |
| Font | 38 |
| Adjusting the LCD (display) Contrast | 39 |
| Setting the Date and Time | 40 |
| Setting the Automatic Power Off Feature | 41 |
| Memory Maintenance | 42 |
| Checking the Memory | 42 |
| Clearing the Memory | 43 |
| Resetting the System | 44 |
| | |
| Chapter 5 Handling Your Transactions | 45 |
| Entering Your Starting Balance | 46 |
| When you get your bank statement | 46 |
| Choosing a Transaction Type | 48 |
| Payments | 49 |
| Entering Checks | 50 |
| One-shot Checks | 54 |
| Printing Checks | 54 |
| Other Payments | 57 |
| Deposits | 60 |
| Reconciling with Your Bank Statement | 63 |
| Background | 63 |
| Reconciling Checks | 64 |
| Reconciling Other Transactions | 66 |
| Voiding Checks | 68 |
| Deleting Old Records | 70 |
| Finding a Past Transaction | 71 |
| Background | 71 |
| Finding a Check | 72 |
| Finding Other Payments | 77 |
| Finding a Deposit | 79 |

| | |
|---|------------|
| Chapter 6 Printing and Other Functions | 81 |
| Choosing an Operation | 82 |
| Printing Reports..... | 83 |
| Background..... | 83 |
| Complete Transaction Summary | 84 |
| Check History..... | 85 |
| Other Payments | 90 |
| Deposit History..... | 93 |
| Setup Report..... | 96 |
| Payee Telephone Numbers | 99 |
| Payee Names and Addresses | 100 |
| Printing Mailing Labels | 101 |
| Feeding Mailing (Address) Labels | 101 |
| To Print: | 101 |
| Financial Calculations(CW-1000 only)..... | 104 |
| Monthly Loan Payment Amounts | 104 |
| Investment Interest Simulation..... | 105 |
| | |
| Chapter 7 Using the Calculator..... | 107 |
| Turning the Calculator On/Off | 108 |
| Operating the Calculator | 108 |
| About Calculator Precision..... | 108 |
| Display Overflow | 109 |
| Additive Memory | 109 |
| | |
| Appendix..... | 111 |
| Error Messages..... | 112 |
| Troubleshooting | 114 |
| Paper Jam..... | 115 |
| Periodic Cleaning of Your Machine | 116 |
| Cleaning the Print Head..... | 116 |
| Cleaning the Platen..... | 116 |
| Specifications | 117 |
| Paper Specifications | 118 |
| Optional Accessories | 119 |
| Index | 120 |
| ACCESSORY ORDER FORM | |

About This Manual

Although the CheckWriter is easy to use, we suggest that you read this manual carefully before starting. The manual consists of the following basic section:

Understanding Your Machine

Shows you where various things are located on your unit, overviews some of the machine's capabilities and gives some important precautions.

Before You Start: Preparing Your Machine

Explains some physical machine preparation required before using the unit.

Printing Your First Check: A Practice Session

Leads you through the printing of a check, to help you learn basic operation and to verify that the unit is working property.

The next sections walk you through the detailed setup of your personal information, and give you detailed explanations of all the CheckWriter's features.

Personalizing Your CheckWriter: Setup

Handling Your Transactions

Printing & Other Functions

Using the Calculator

You should read the brief "Before You Start" section and prepare your machine before using the unit. If this is your first time using the machine, we suggest you work through the exercises in "Printing Your First Check".

When you are ready to start using the CheckWriter for your actual checking activities, review the "Personalizing Your CheckWriter" section carefully. When you have detailed questions about specific operations and features, the remaining sections will provide the answers.

Good luck! We hope you enjoy using your CheckWriter.

Chapter 1

Understanding Your Machine

1


Understanding Your Machine

Machine Diagrams

Features


1

Understanding Your Machine

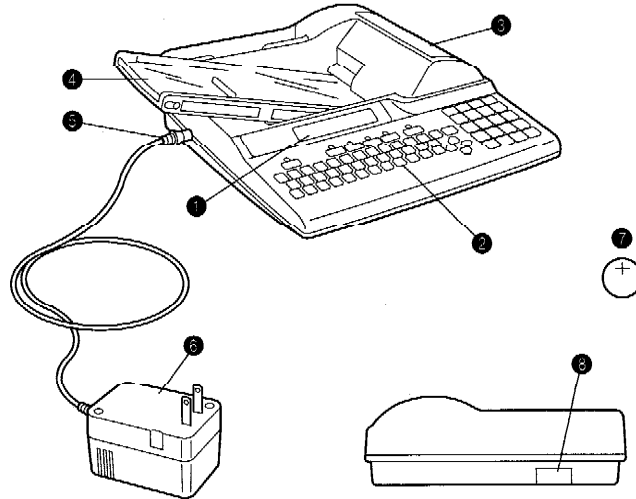

- ① **LCD display** Displays data and messages
- ② **Keyboard** Character and function keys, numeric keypad.
- ③ **Print unit compartment** Contains the printing head/ink-jet cartridge.
- ④ **Paper cassette** Accepts checks and special report-size paper. Must be removed when feeding mailing labels.
- ⑤ **AC adapter connector** Connect the AC adapter cord here.
- ⑥ **AC adapter** Plug into an AC outlet and connect to the AC adapter connector.
- ⑦ **Lithium battery (CR2032)** Protects the memory when the power is off.
- ⑧ **Lithium battery compartment** Insert the memory backup lithium battery here.


Keyboard

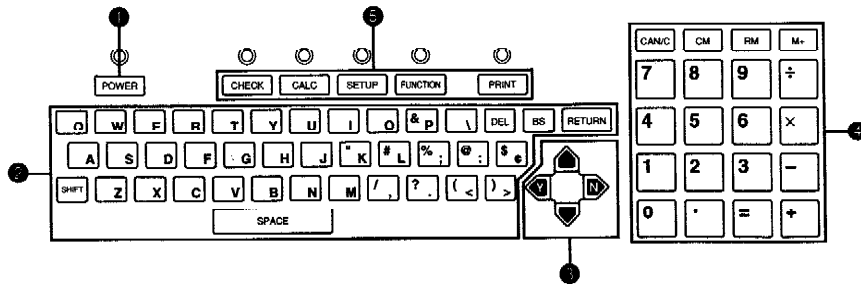

2


- ① **Power switch** Pressing once turns the power on. Pressing again turns it off.
- ② **Character keys** Used to input data. Keys with two indications can be shifted.
- ③ **Cursor keys** Used to move from one display to the next/previous one, or to move laterally on a data input field.
- ④ **Numeric keypad** Used to enter numbers and to perform arithmetic in the Calculator mode.
- ⑤ **Function keys** Used to select the main modes of the Check-Writer. The LED above the key lights while the mode is activated.

Print unit

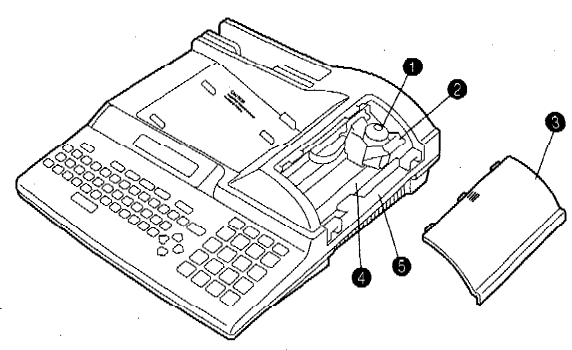

- ① **Print head/ink cartridge** Can print about 500,000 characters (light mode) or 160,000 characters (normal mode). The print head is integrated to the ink-jet cartridge.
- ② **Cartridge lever** Used to lock/release the cartridge.
- ③ **Print unit compartment cover** Protects the print unit. Open to change the cartridge, clean the head or extract jammed paper.
- ④ **Platen** Clean the platen when it is stained with ink.
- ⑤ **Paper exit slot** Printed paper is ejected from this slot.

Paper cassette

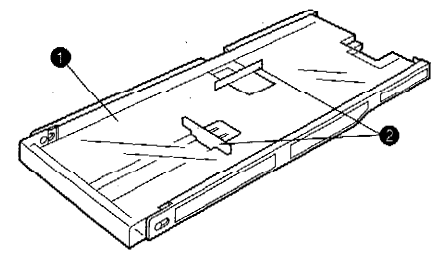

- ① **Paper cassette cover** Open this cover to set paper.
- ② **Paper guides** Adjust the guides to match paper size.

What Your CheckWriter Can Do for You

Account Tracking

The CheckWriter allows you to track the balance of up to two bank accounts. The access to the account data can be protected by one or two different passwords.

The CheckWriter maintains two different balances: a running balance and a reconciled balance.

Running balance: The running balance is updated each time you enter a transaction. The running balance is temporary. After you enter a transaction, you can still edit the amount of the check or even void the check.

Reconciled balance: After you issue a check, the beneficiary gets paid and the bank sends you a statement. You use the bank statement to reconcile the check, that is, to confirm that the transaction actually took place. This operation updates the real, reconciled balance on your account.

Printing Functions

The built-in ink-jet printer allows for quiet, clear printing of checks, transaction summaries, several kinds of lists, and mailing labels.

Both personal and business size checks can be printed.

When printing a check, the CheckWriter automatically and accurately generates the amount in words for you.

Transaction Management

Up to 1000 transactions (CW-1000) or 600 transactions (CW-600) can be retained in memory. The transactions include payments by checks or other means, withdrawals and deposits.

Your CheckWriter makes it easy to search for any past transaction or to print transaction summaries.

Searching: The search function allows you to quickly scan your data for records that match a given criterion. For example, you can search for all checks used for the category HOBBY, or for all checks that have been reconciled. The result of the search can be either displayed sequentially or printed as a list on special report-size paper.

Printing reports: Several kinds of reports (transaction summary) can be automatically printed. Reports can be sorted by transaction, type, chronological order, payee, category, etc.

Financial Calculations (CW-1000 only)

The CheckWriter can automatically calculate the monthly repayments of a loan or the growth of capital invested. The result can be printed.

Calculator

A calculator function, available at any moment (except when you are typing data) allows you to quickly carry out simple arithmetic.

Database

The CheckWriter is designed to minimize the amount of typing when you register a transaction. When you register a check, for example, the check number and the current date automatically appear on the screen. You have to retype only if you want to change the preset data. Also, you do not have to type the name of the payee (beneficiary) or the category in which the expense fits. These are selected from a preset list of payees and categories.

List of payees: You can enter up to 80 (CW-1000) or 60 (CW-600) payee names.

List of categories: TheCheckWriter comes with a preset list of common categories and provides space in memory for additional, user-editable categories.

Important Notice

Brother International Corp. strongly recommends that you keep a separate written record of all your important data, so that you will have a permanent record in the event of any unexpected memory loss.

Data may be lost or altered in virtually any electronic memory product under certain circumstances.


Brother International Corp. assumes no responsibility for data lost or otherwise rendered unusable for any reason, including without limitation, defect, repair, improper use, battery replacement, use after the battery life has expired, or any other reason.

Brother International Corp. assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use, loss or misuse of this product.



Important Keys

Up/Down Cursor Keys

These keys are used to move to the previous or next item of a menu. When the symbol

▲ appears at the right of the screen, you know you can use ; when the symbol

▼ appears, you know you can use . After moving to the previous item using

, you can edit the data entered for that item and press  to enter it.





1

Left/Right Cursor Keys

When you are typing data, these keys move the cursor to a new location within the input field. After moving the cursor, you can retype. Everything you retype overwrites the old data.



These keys are also used to select between Y (yes) or N (no) on confirmation prompts.

Cancel Key



This key is used to move back one level in a menu hierarchy. For example, when you press  to start using a check function, you can select items such as PAYMENT, DEPOSIT, RECON, etc. After selecting PAYMENT, move one level down in the menu hierarchy and select items such as CHECK, ATM, etc. Pressing  moves back to the previous level and allows you to select DEPOSIT, RECON, etc. If you have typed or selected some data before pressing , you will be asked for confirmation. In the Calculator mode,  is used to clear.

Function Keys

The function keys are used to select a mode. When a mode is selected, the LED of the function key lights. Press the same key to exit the mode (a message will ask you to type Y to confirm that you want to exit, or N if you change your mind). If you have entered data in that mode, but have not yet confirmed the entry, you will be asked for confirmation.

You can press  while using another mode. The LED of that key will light together with the LED of the mode you were using. Press the  key to exit the Calculator mode and return to the mode you were using.

Correction Keys

These keys are used to delete text.  deletes the character to the left of the cursor and  deletes the character at the cursor position.

6


Precautions

Although your CheckWriter is ruggedly constructed, it should not be exposed to extreme conditions. To ensure many years of safe and reliable operation, please follow these recommendations:

⚠ Warning:

- ① *To reduce the risk of electric shock, do not attempt to disassemble the unit. There are no user-serviceable parts inside. Some components inside the unit use high voltages that can be of sufficient magnitude to constitute a risk of electric shock to persons. Any servicing should be referred to qualified service personnel.*
- ② *In case of malfunction, overheating, or other problems, immediately disconnect the AC adapter and consult your dealer.*
- ③ *Do not use an AC adapter other than the AC adapter supplied with the unit.*
- ④ *Do not tug on the power cord. To disconnect, be sure to always grasp the plug itself.*
- ⑤ *Avoid dropping the unit.*
- ⑥ *Avoid direct exposure to sunlight and other sources of heat.*
- ⑦ *Avoid spills. If any liquid enters the unit, immediately disconnect the AC adapter and consult your dealer.*
- ⑧ *Avoid locations subject to excessive moisture or dust.*
- ⑩ *Disconnect the AC adapter during thunderstorms.*
- ⑪ *Do not place heavy objects on the keyboard.*

⚠ Caution:

- ① *Be sure to use the  key to switch the power off. Switching the power off by disconnecting the AC adapter or the DC in jack can cause data loss. Never switch the power off while printing.*
- ② *To avoid interference, do not place the unit too close to a radio receiver or television.*
- ③ *Clean with a soft, dry cloth only. Avoid using chemicals, solvents and detergents.*

1

Understanding Your Machine

Chapter 2


Before You Start: Preparing Your Machine

2

Before You Start: Preparing Your Machine

Installing the Battery

The small lithium battery that comes with the unit should be inserted into the compartment on the bottom of the machine. This battery retains memory and powers the clock functions when the power switch is turned off. The battery will last for about one year.

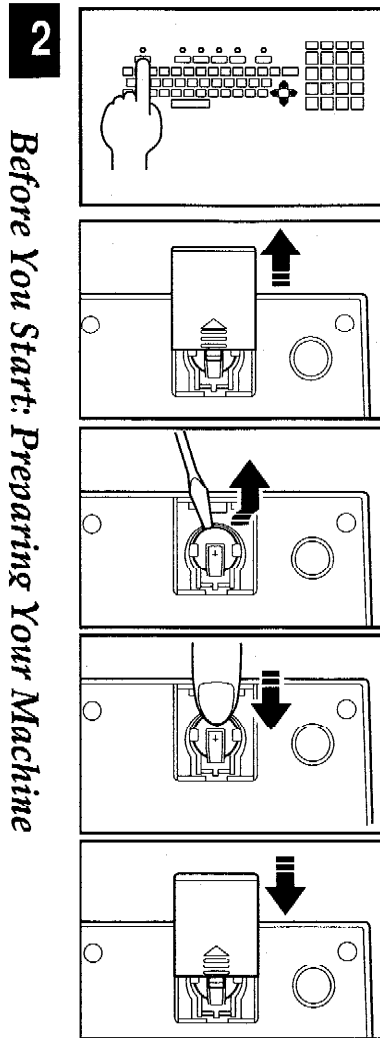

- 1** Plug the AC adapter box into the wall outlet and plug the adapter's round connector into the CheckWriter.
- 2** Press **POWER** to switch the power on.
- 3** Open the battery compartment cover located on the back, left-hand side of the machine.
- 4** If you are removing an old battery, use a pencil or a small screwdriver to extract it.
- 5** Insert the new battery with the positive terminal (+) facing outside. Slide the battery into the holder and push it in.
- 6** Close the cover.

The battery will last for about one year. When the lithium battery becomes low, the power LED will flash on and off every half second and the following message will alternate with the current display:

-- WARNING !! --
BATTERY NEAR EMPTY

When this message appears, you should immediately change the lithium battery. If you do not do so, there is a risk that your data will be deleted from the memory. Purchase a new battery of the same type (CR2032). Make sure that the power is on, and remove the old lithium battery. Insert the new battery as explained on the previous page.

-- ALARM !! --
BATTERY EMPTY

If this message appears, proceed urgently as explained above. After replacing the lithium battery, turn the power off, then on again and confirm that the battery warning or alarm message does not appear.

Warning:

- 1 *Some danger of explosion exists if the lithium battery is incorrectly replaced. Replace only with a battery of the same type (CR2032) or equivalent.*
- 2 *Keep lithium batteries away from children.*
- 3 *Never throw a lithium battery in fire. Be sure to dispose of used lithium batteries according to the manufacturer's instructions and local requirements.*

Caution:


- 1 *This battery is not for using your unit without the AC power adapter.*
- 2 *When installing a new lithium battery, make sure that the power is on. Installing a new lithium battery while the power is off may cause malfunction when you turn the power on. Making sure that the power is on when you replace the lithium battery also prevents data in the memory from being erased.*
- 3 *If the machine is left unattended for a long period, the lithium battery will discharge, and there is a risk of data loss. To prevent this, change the lithium battery at least once a year.*

Installing the Ink-Jet Cartridge

Your machine uses a replaceable ink-jet cartridge that contains both the print head and ink. Be sure to read the precautions below and follow the procedure described next to install / replace the cartridge.


2

Before You Start: Preparing Your Machine

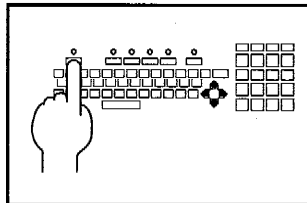


- 1** If the power is on, turn it off by pressing


POWER.

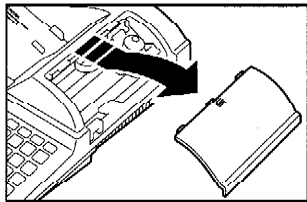

- 2** Remove the print unit compartment cover on the right side of the CheckWriter.

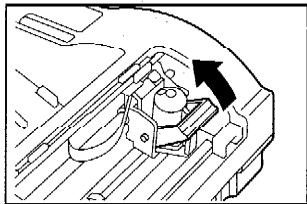


- 3** Push the cartridge lever upward until it clicks.

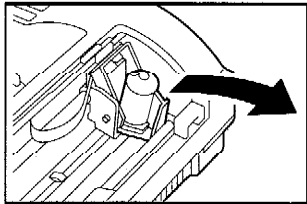


- 4** Remove the old ink-jet cartridge. Discard the cartridge immediately.


To avoid getting ink on your hands, hold the cartridge correctly using the plastic area designed for handling.

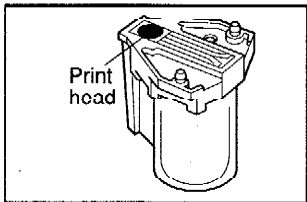


- 5** Tear open the ink-jet cartridge package and extract the new cartridge and the new felt pad. Read the instruction sheet. Follow the directions on the instruction sheet to prepare the cartridge for installation into the machine.

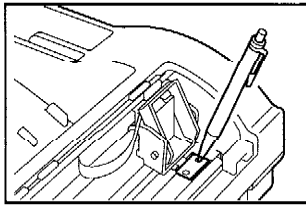


- 6 Use a pencil or a paper clip to remove the old felt pad and insert the new one.

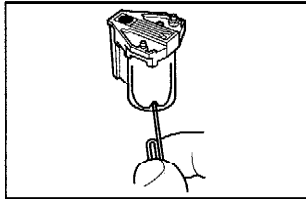


- 7 To prime the cartridge, push the bladder with a paper clip until ink fully coats the silver plate.

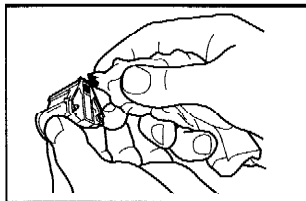


- 8 Allow the ink to be absorbed back into the cartridge and wipe excess with dry tissue.

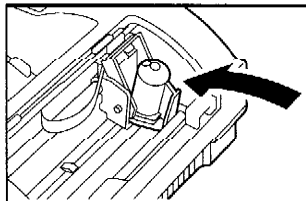

- 9 Slip the new cartridge into place. There are two notches on the head. Use them to align the cartridge correctly.

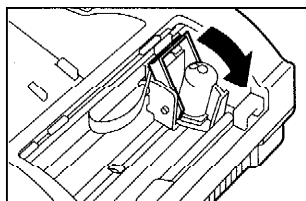

- 10 Pull the cartridge lever downward until it clicks and locks.
You will not be able to print if the cartridge lever is not correctly locked.

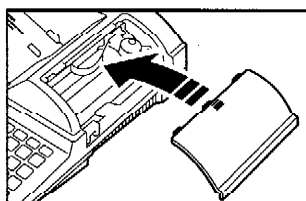

- 11 Replace the print unit compartment cover.

2

Before You Start: Preparing Your Machine

⚠ Warning:

Keep used and new cartridges out of reach of children.

⚠ Caution:

- ① *To prevent a cartridge from drying out, never open its sealed pack until you are ready to install the cartridge.*
- ② *Install the cartridge immediately after opening its package. If you set it aside for an extended period, the head of the cartridge may dry up.*
- ③ *The head of the cartridge contains wet ink. Never touch the head of the cartridge, and never let it touch any other surface.*
- ④ *To prevent leakage from the print head, do not shake the cartridge after it has been removed from its pack.*
- ⑤ *We recommend that you use cartridges within one year of installation to assure high print quality.*
- ⑥ *Do not expose cartridges to direct sunlight. Use them at temperatures between 5 and 35°C (41 ~ 95°F). Store them in their original package at temperatures between -10 and 35°C (14 ~ 95°F).*
- ⑦ *Use only the recommended type of ink-jet cartridge (IN-60)*


Loading the Paper Cassette

The paper cassette accepts blank checks and special report-size paper. Mailing labels must be fed manually.


Setting Up Report or Check Paper

The cover of the paper cassette has vertical and horizontal rulers to help you set up the printing position for the different items of a check.


Two paper guides inside the paper cassette can be adjusted to match the paper size.

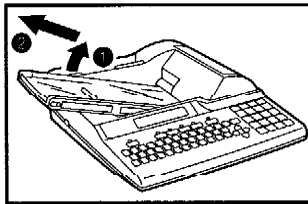


- 1 First lift the paper cassette up, then pull it out as illustrated.

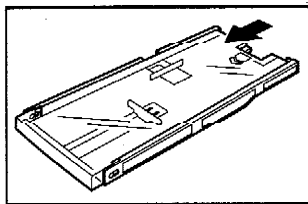

- 2 Slide the paper cassette cover as illustrated to unlock it.

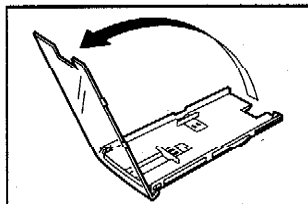


- 3 Lift the paper cassette cover until it stops.

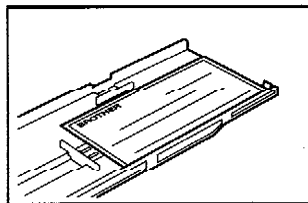


- 4 Insert checks or report paper sheets. Do not exceed 25 sheets.
Important: Checks must be stacked in the order of their numbers, the smaller number on top.

2


Before You Start: Preparing Your Machine

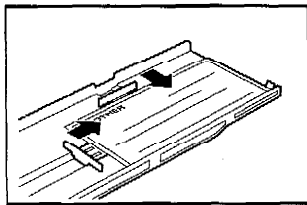


- 5 Adjust the paper guide to match the size of the paper.

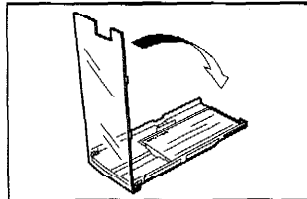


- 6 Close the cover.

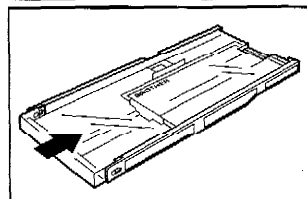

- 7 Slide the cover as shown to lock it.

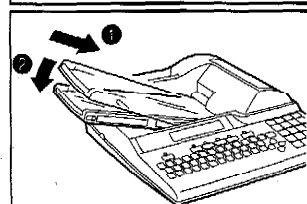

- 8 Push the cassette back into the unit until it stops.

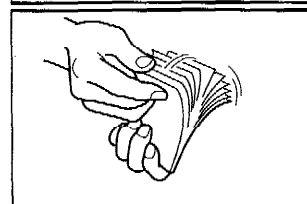

Note:

Make sure to fan the checks or report forms before loading them in the paper cassette. Fanning will help feed those papers smoothly into the CheckWriter.

To Avoid Problems while Printing

- 1 Do not mix paper sheets of different sizes or types in the cassette.
- 2 Use only paper of size, thickness and quality recommended on page 118.
- 3 Do not insert damaged sheets.
- 4 Never insert more than 25 sheets in the cassette.
- 5 Keep away objects that could obstruct the paper exit slot.
- 6 Take away the paper sheets one by one after they exit the unit.
- 7 Never remove the cassette while printing.

Chapter 3

Printing Your First Check: A Practice Session

3

Printing Your First Check: A Practice Session

Printing Your First Check: A Practice Session

During this tutorial section, follow the process step by step. It is a starting tutorial to help familiarize you with the CheckWriter.

Together, we will perform the following operations:

- 1- Reset the CheckWriter.
- 2- Set up Account I Information (Account name, password).
- 3- Set up the date and time.
- 4- Set up payee names.
- 5- Make a deposit.
- 6- Issue a check, and print it.
- 7- Reset the CheckWriter again.

3

When done, you will have received an overview of several operations and will have confirmed that your CheckWriter is functioning properly.

1- Reset the CheckWriter.

- 1 Hold down the **SHIFT** and **CAN/C** keys and press **POWER** to switch the power on. One of these screens appears:

```
= CW-1000 =  
RESET ALL?(Y/N)
```

```
= CW-600 =  
RESET ALL?(Y/N)
```


- 2 Type Y and press **RETURN**. One of these screens appears:

```
= CW-1000 =  
RESETTING
```

```
= CW-600 =  
RESETTING
```

Printing Your First Check: A Practice Session

2- Set up Account I Information.

- 1 Press the **SETUP** function key.
- 2 Make sure the cursor is blinking on **ACCOUNT I** and press **RETURN**.
- 3 Scroll down using the down arrow key  to the 2nd selection of the menu, which is **2:ACCOUNT**.
- 4 Press **RETURN**.
- 5 Type the name of the account. Example: **FIRST**.
- 6 Press **RETURN** to display the password input screen.
- 7 Type the password. Example: **PASS1**.
- 8 Press **RETURN** to display the reconciled balance input screen. It is preset at **\$0.00**.
- 9 Keep the balance as it is and press **RETURN**. The confirmation screen appears for you to confirm that all information you have entered is correct.
- 10 Type **Y** and press **RETURN** to confirm. Now, you are back to the **[SETUP]** area. Next we will set up the Date and Time.

```
[SETUP]
ACCOUNT: I / II
```

```
[SETUP]
1:PAYEE ▼
```

```
[SETUP]
2:ACCOUNT ▲ ▼
```

```
[ACCOUNT (I)]
NAME:█
```

```
[ACCOUNT (I)]
NAME:FIRST█
```

```
[ACCOUNT (I)]
PASSWORD:█
```

```
[ACCOUNT (I)]
PASSWORD:PASS1█
```

```
BALANCE(RECON.): I
$0.00
```

```
[ACCOUNT (I)]
CONFIRMED? (Y/N)
```

```
[SETUP]
2:ACCOUNT ▲ ▼
```

3

Printing Your First Check: A Practice Session

3- Set Up the Date and Time.

- 1 During the SETUP mode, scroll down using the down arrow key (▼) to the 6th selection (6:CALENDAR).

```
[SETUP]
6:CALENDAR
```

- 2 Press RETURN to display the date input screen.

```
[CALENDAR]
DATE:06/15/95[MON]
```

Type in today's date.

Example: type 06 for the month
type 15 for the day
type 95 for the year

Press RETURN.

- 3 Use ▼ and ▲ to select the day of the week (e.g. "THU").

```
[CALENDAR]
DATE:06/15/95[THU]
```

- 4 Press RETURN to display the time input screen.

```
[CALENDAR]
TIME:09:15 [AM/PM]
```

Type in the time.

Example: type 09 for the hour
type 15 for the minutes

Press RETURN.

- 5 Use ◀ and ▶ to select AM or PM and press RETURN. You are now back to the [SETUP] area. Next we will set up payee names.

```
[SETUP]
6:CALENDAR
```

4- Set Up Payee Names.

- 1 During the SETUP mode, scroll up using the up arrow key (▲) to the first selection (1:PAYEE).

```
[SETUP]
1:PAYEE
```

- 2 Press RETURN to display the payee number. Do not change the number "00".

```
[PAYEE]
No. :00
```

- 3 Press **RETURN** to start entering the data for the first payee.

[PAYEE(00)]
NAME: █

- 4 Type in the following information, and press **RETURN** after typing each piece of data:

NAME: JOSEPH BROWN
TITLE: MANAGER
COMPANY: ABC COMPANY
ADDRESS1: 127 MOUNTAIN AVENUE
ADDRESS2: (blank, just press **RETURN**)
CITY: ANYCITY
STATE: CA
ZIP: 04004
TEL No.: 333-555-3202

[PAYEE(00)]
NAME: JOSEPH BROWN█

[PAYEE(00)]
TITLE: MANAGER█

•
•
•

- 5 When you press **RETURN** after typing the telephone number, this confirmation screen appears:

[PAYEE(00)]
CONFIRMED? (Y/N)

- 6 Type Y and press **RETURN** to confirm. The CheckWriter automatically displays the number for the next payee.

[PAYEE]
No. : 01

- 7 Press **RETURN** to start entering the data for the second payee.

[PAYEE(01)]
NAME: █

- 8 Type in the following information, and press **RETURN** after typing each piece of data:

NAME: NANCY CARTER
TITLE: ATTORNEY AT LAW
COMPANY: CARTER & CARTER
ADDRESS1: 600 PARK STREET
ADDRESS2: (blank, just press **RETURN**)
CITY: NEWTOWN
STATE: N.J.
ZIP: 01001
TEL No.: 444-555-3203

[PAYEE(01)]
NAME: NANCY CARTER█

[PAYEE(01)]
TITLE: RNEY AT LAW█

•
•
•

3

Printing Your First Check: A Practice Session

- 9 When you press **RETURN** after typing the telephone number, this confirmation screen appears:
- 10 Type Y and press **RETURN** to confirm. The CheckWriter automatically displays the number for the next payee.
- 11 Press **SETUP** to exit the SETUP mode. This screen now appears:
- 12 Type Y and press **RETURN**. You are now returned to the screen showing the date and time.

```
[PAYEE(01)]
CONFIRMED? (Y/N)
```

```
[PAYEE]
No. :02
```

```
-- EXIT? --
(Y/N)
```

```
JUNE 15,1995 [TIU]
09:58:45 PM
```

3

Note that the time might be different depending upon how long it took to input the information.

5- Make a Deposit.

- 1 Press the **CHECK** mode key. The Check-Writer asks you to type your password:
- 2 Type your password (in this example, your password is "PASS1").
- 3 Press **RETURN**. The name of the account is displayed:
- 4 Press the **CHECK** mode key again.
- 5 Scroll down using the down arrow key **▼** to the 2nd selection of the menu, which is "2.DEPOSIT", and press **RETURN**. The date appears automatically:
- 6 Press **RETURN** to confirm the date. The amount input screen appears:
- 7 We want to deposit \$5,000.00. Type 5000.

```
ENTER PASSWORD
■■■■■■■■
```

```
ENTER PASSWORD
*****■■■
```

```
ACCOUNT[I]
FIRST
```

```
1.PAYMENT
2.DEPOSIT ▼
```

```
[DEPOSIT/DATE]:
06/15/95
```

```
[DEPOSIT/AMOUNT]:
$■
```

```
[DEPOSIT/AMOUNT]:
$5,000■
```

- 8 Press **RETURN** to display the confirmation screen:
- 9 Type Y and press **RETURN** to confirm. The next screen shows the balance:
- 10 Press **RETURN**. The [DEPOSIT/MEMO] screen appears. Type MY FIRST DEPOSIT.
- 11 Press **RETURN** to enter the comment. All the data for the deposit had been entered and the CheckWriter asks you to confirm.
- 12 Type Y and press **RETURN** to confirm.
- 13 Press **CAN/C** to return to the CHECK menu.

SURE?(Y/N)
\$5,000.00

REMAINING BALANCE
\$5,000.00

[DEPOSIT/MEMO]:
MY FIRST DEPOSIT

06/15/95 \$5,000.00
CONFIRMED? (Y/N)

[DEPOSIT/DATE]:
06/15/95

2.DEPOSIT ▲
3.RECON ▼

6- Issue a Check, and Print it.

- 1 With the CHECK menu displayed, scroll up using the up arrow key **▲** to the first selection (1:PAYMENT).
- 2 Press **RETURN** to display the PAYMENT screen.
- 3 Press **RETURN** to select 1:CHECK. The Check No. screen appears:
- 4 Type 100 for the check number and press **RETURN**. The payee list screen appears:
- 5 Press **RETURN** to select JOSEPH BROWN. The date screen appears:
- 6 Press **RETURN**. The TAX RELATED screen appears for tax deduction categorization:

1.PAYMENT ▼
2.DEPOSIT

[PAYMENT]
1:CHECK (CK) ▼

[CK/CHECK No.]:
0000

[CK/PAYEE]: ▲▼
JOSEPH BROWN

[CK/DATE]:
06/15/95

[CK/TAX RELATED]:
Y / N

7 The cursor is blinking at N, meaning NO. Press **RETURN**. The CATEGORY screen appears:

```
[CK/CATEGORY]:  ▲▼
                  AUTO(FUEL)
```

8 Scroll down using the down arrow key **▼** to EXPENSE (OTHER).

```
[CK/CATEGORY]:  ▲▼
                  EXPENSE (OTHER)
```

9 Press **RETURN** to display the AMOUNT screen:

```
[CK/AMOUNT]:
                $
```

10 Type 1500.

```
[CK/AMOUNT]:
                $1,500
```

11 Press **RETURN**. (Since the amount is higher than \$1,000, a confirmation screen appears.)

```
SURE? (Y/N)
                $1,500.00
```

12 Type Y and press **RETURN** to display the balance.

```
REMAINING BALANCE
                $3,500.00
```

13 Press **RETURN**. The MEMO screen appears:

```
[CK/MEMO]:
                █
```

14 Type MY FIRST CHECK.

```
[CK/MEMO]:
                MY FIRST CHECK█
```

15 Press **RETURN**.

```
#00100 $1,500.00
CONFIRMED? (Y/N)
```

16 Type Y and press **RETURN** to confirm. The PRINT OUT screen appears asking you if you wish to print the check:

```
#00100 $1,500.00
PRINT OUT? (Y/N)
```

Before you press Y, make sure that you have loaded some checks in the paper cassette. The CheckWriter will not print if the cassette is empty.

- 17 After loading some checks, type Y and press **RETURN**. During printing, **PRINTING** appears on screen. Then when printing is done, the screen appears as follows:

```
#00100
PRINT COMPLETED
```

- 18 Press **CHECK** to exit the check mode. Type Y and press **RETURN** to confirm that you want to exit.

```
-- EXIT? --
(Y/N)
```

- 19 Press **CAN/C** to return to the Date/Time screen.

```
ACCOUNT[I]
FIRST
```

```
JUNE 15,1995 [THU]
10:12:45 PM
```

3

7- Reset the CheckWriter Again.

After you have successfully completed this exercise, reset the CheckWriter as you did in part 1.

All the information related to this exercise will be deleted except for the date and time. You may enter the correct date and time as you set up your own account information.

3

Printing Your First Check: A Practice Session

26

Chapter 4

Personalizing Your CheckWriter: Setup

4

Personalizing Your CheckWriter: Setup

27

What Needs to be Done

The following steps must be done before your first real session with your CheckWriter. Other setup options exist, but can be done at any time.

- 1** After turning the power on, check that the date and time are correct.
If necessary, set the date and time.
See "Setting the Date and Time" on page 40.
- 2** Set up at least one account.
See "Setting Up Your Account" on page 33.
- 3** Set up your personal list(s) of payees (or at least one payee).
See "Entering Your Payees" on page 30.
- 4** Set up the print positions for the checks for your accounts.
See "Setting Your Print Format" on page 36.

4

Personalizing Your CheckWriter: Setup

Selecting an Item to Set Up

The following items can be set up:

- PAYEE.....a list of the beneficiaries of your payments
- ACCOUNT.....the data for up to 2 accounts
- CATEGORYa list of categories for your payments
- PRINT FORMAT.....print specifications for checks
- LCD CONTRAST.....the contrast of the display
- CALENDARto set up the date and time
- AUTO POWER OFF....to enable/disable the auto power off function
- MEMORYto check the remaining amount of space in memory
- MEMORY CLEARto clear data on the selected account

Note: to exit the SETUP mode, press **SETUP**.

- ① Press **SETUP**, select an account and press **RETURN**.



 
 
 
 
 
 
Type your password (if a password has been set) and press **RETURN** again.

- ② Use ▼ and ▲ to display the desired item.



You can also type the number for the operation (1 for PAYEE, 2 for ACCOUNT, etc.) to scan faster.

- ③ Press **RETURN** when the cursor is located on the desired operation.



Entering Your Payees

The list of payees can include a total of 80 entries (CW-1000) or 60 entries (CW-600). When writing a check, the list allows you to select the name of a payee instead of having to retype it again and again. When your CheckWriter is brand new, the list is empty. You do not need to enter all the data for 80 or 60 payees at once, but at least one payee must be in the list before he or she can be the beneficiary of a payment.

Each entry of the payee list contains the following items:

- Nothe payee number (generated automatically)
- NAMEthe payee full name
- TITLEthe payee title
- COMPANYthe payee company
- ADDRESS1the payee address
- ADDRESS2the second part of the address, if necessary
- CITYthe city
- STATEthe state
- ZIPthe zip code
- TEL No.the telephone number

4

Personalizing Your CheckWriter: Setup

- 1 Press **SETUP**, select **PAYEE** and press **RETURN**.

| |
|--------------------|
| [PAYEE] No. :00 |
|--------------------|

Refer to "Selecting an Item to Set Up" on page 29.

The registration numbers must be in sequence, starting with 00, up to 79 (CW-1000) or 59 (CW-600). When you enter the first payee data for an account, you can start by using 00. When you have entered a few names, you will be able to use registration numbers from 00 to the number you have reached. The next registration number will be used for entering a new name; numbers between 00 and the number you have reached are used for editing data of an already registered payee (changing the address, for example).

- 2 The number that appears is the registration number for a new payee. If you want to enter a new payee, press **RETURN**. If you want to edit an existing payee, type the payee's number and press **RETURN**.

30

The first display "PAYEE LIST FULL" appears when you have already registered 80 or 60 payees. Press **CAN/C** to exit. Since you can register a maximum of 80 or 60 payees, the only way you can register a new payee is overwriting the data of a registered payee.

```
=PAYEE LIST FULL=
PRESS ANY KEY
```

```
[PAYEE(xx)]
NAME: █
```

The second display appears when there is still room for an additional payee.

- 3** If the payee is a company, type the company name and press **RETURN**.

```
[PAYEE(xx)]
TITLE: █
```

If the payee is an individual, type the name of the payee and press **RETURN**.

The name can include a total of 20 characters. The display will automatically scroll, if necessary. You can type a single space in the name (the space will not advance the cursor).

- 4** If the payee is a company, press **RETURN** without typing anything.

```
[PAYEE(xx)]
COMPANY: █
```

If the payee is an individual, type the title of the payee and press **RETURN**.

The title can include a total of 20 characters. The display will automatically scroll, if necessary.

- 5** If the payee is a company, press **RETURN** without typing anything.

```
[PAYEE(xx)]
ADDRESS1: █
```

If the payee is an individual, input the company of the payee and press **RETURN**.

The name of the payee's company can include a total of 20 characters. The display will automatically scroll, if necessary.

- 6** Type the address of the payee and press **RETURN**.

```
[PAYEE(xx)]
ADDRESS2: █
```

The address of the payee can include a total of 20 characters. If the address is longer, split it into two parts (the second part will be entered below). The display will automatically scroll, if necessary.

4

4

Personalizing Your Check Writer: Setup

- 7 Type the second part of the address, if necessary, and press **RETURN**. Press **RETURN** without typing anything if the address fits in the 20 characters of ADDRESS1.

[PAYEE(xx)]
CITY:█

The second part of the address can include a total of 20 characters. The display will automatically scroll, if necessary.

- 8 Type the name of the city and press **RETURN**.

[PAYEE(xx)]
STATE:█

The city name can include a total of 20 characters. The display will automatically scroll, if necessary.

- 9 Type the abbreviation for the state and press **RETURN**.

[PAYEE(xx)]
ZIP:█

The abbreviation for the state can include a total of 5 characters.

- 10 Type the zip code and press **RETURN**.

[PAYEE(xx)]
TFI No: █

The zip code can include a total of 10 characters.

- 11 Type the telephone number and press **RETURN**.

[PAYEE(xx)]
CONFIRMED? (Y/N)

The telephone number can include a total of 20 characters.

- 12 Type Y and press **RETURN** to register the data. Type N and press **RETURN** to abandon the data.

[PAYEE]
No. :█x

- 13 To exit, press **CAN/C**.

[SETUP]
1:PAYEE ▼

Setting Up Your Account

Your CheckWriter can manage two different bank accounts. Each bank account can be protected by a different password. If you protect a bank account with a password, only you and other persons who know that password will have access to the information. If you do not protect a bank account with a password, anyone will be able to read and modify the information.

To set up an account, you must enter the following data:

- NAMEa name for the account
- PASSWORD.....a password for the account
- BALANCE (RECON.) ..the reconciled balance on the account
(originally set to \$0.00; keep it as is)

- ① Press **SETUP** and select **ACCOUNT**.
Refer to "Selecting an Item to Set Up" on page 29.

[ACCOUNT (I)]
NAME: █

4

The first row of the above display indicates which account you are setting up.

- ② Type a name for the account and press **RETURN**.

[ACCOUNT (I)]
PASSWORD: █

The account name can include a total of 20 characters. The display will automatically scroll, if necessary.

- ③ If you want to protect the account, type a password and press **RETURN**.
If a password is not necessary, press **RETURN** without typing anything.

BALANCE (RECON.): I
\$0.00

The password can include a total of 8 characters.

- ④ The reconciled balance has been set to \$0.00. Keep it as is and press **RETURN**.

[ACCOUNT (I)]
CONFIRMED? (Y/N)

Personalizing Your CheckWriter: Setup

5 Type Y and press **RETURN** to register the data.

Type N and press **RETURN** to abandon the data.

```
[SETUP] ▲
2:ACCOUNT ▼
```

```
[ACCOUNT (I)]
NAME: █
```

The first display appears when you confirm.

The second display appears when you abandon the data.

If You Forget Your Password

The CheckWriter has been designed to ensure complete secrecy of your data. There is no way to get access to data without knowing the password. If you forget your own password, the only thing you can do is reinitialize the account.

To do this, press **SETUP** and select the account you want to reinitialize. When you are asked to enter the password, press **SHIFT** + **CM**. This clears the old password **and all the data for that account**. (This function is available only when the password entry screen of the Setup mode is displayed.)

Note:

Even though no one can read your information without knowing the password, anyone who has read this manual will be able to destroy the data. So, it is a good idea to restrict access to this manual.

Deciding Categories

Your CheckWriter comes with 50 preset categories and additional room for 20 user-defined categories.

The preset categories are:

| | | | |
|----------------|-------------------|-------------------------|----------------------|
| A | E | INVESTMENT (EXPENSE) T | |
| AUTO (FUEL) | EDUCATION | INVESTMENT (INCOME) TAX | |
| AUTO (LOAN) | ENTERTAINMENT | M | TAX (FEDERAL) |
| AUTO (SERVICE) | EXPENSE (OTHER) | MEDICAL EXPENSE | TAX (FICA) |
| B | G | MISCELLANEOUS | TAX (OTHER) |
| BANK CHARGE | GIFTS (GIVEN) | MORTGAGE | TAX (PROPERTY) |
| BONUS | GIFTS (RECEIVED) | O | TAX (STATE) |
| C | GROCERIES | OTHER | TELEPHONE |
| CABLE TV | H | R | TRAVEL |
| CHARITY | HOME REPAIR | RECREATION | U |
| CHILD CARE | HOUSEHOLD | RENTAL | UTILITIES |
| CHRISTMAS | I | REPAIRS | UTILITIES (GAS/ELEC) |
| CLOTHING | INCOME (DIVIDEND) | S | UTILITIES (WATER) |
| COMMISSION | INCOME (INTEREST) | SALARY | V |
| CREDIT CARD | INCOME (OTHER) | SUBSCRIPTION | VACATION |
| D | INSURANCE | SUPPLIES | |
| DINING | INTEREST PAID | | |

- 1 Press **SETUP** and select **CATEGORY**. Refer to "Selecting an Item to Set Up" on page 29.

[CATEGORY]
01:HOBBY ▼

- 2 Use **▼** and **▲** to display the desired category number.

[CATEGORY]
10: █ ▼

Available numbers are from 01 through 20. If a category for the selected number has already been defined, it is displayed. If the category is still empty, you can type it in.

- 3 Type a name for the selected category number and press **RETURN**. The next category number appears.

[CATEGORY]
11: █ ▼

The category name can include a total of 10 characters.

- 4 You can repeat the above steps to enter other categories or press **CAN/C** to exit.

[SETUP]
3: CATEGORY ▼


Setting Your Print Format

Check formats do vary from bank to bank. If the preset print format does not match your check forms, you must enter the correct starting position of each item to be changed.

To set up a complete check printing format, you must enter data for the following items:

- PRINT POSITION.....the starting position of each item to be printed on the check
- PRINT CONTRASTthe printing density (light or normal)
- FONTstandard or italic characters

- 1** Press **SETUP** and select **PRINT FORMAT**.

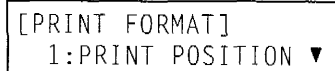


[PRINT FORMAT]
1:PRINT POSITION ▼

→ page 36

Refer to “Selecting an Item to Set Up” on page 29.

- 2** Use **▼** and **▲** to display the desired item.

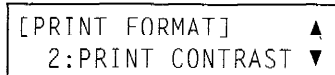

[PRINT FORMAT] ▲
2:PRINT CONTRAST ▼

→ page 38

- 3** Press **RETURN**.



[PRINT FORMAT] ▲
3:FONT


→ page 38

Print Position

You can change the print position of the following items:

- DATEthe position for the date
- PAYEE.....the position for the payee name
- AMOUNTthe position for the amount (numerals)
- SPELLOUTthe position for the amount (in words)
- MEMOthe position for the comment

A print position is defined by two coordinates (X and Y) as shown in the illustration below. The origin is at the lower-left corner of the cassette. To enter the coordinates for the position of an item, place an actual check in the cassette and use the marks on the paper guide to identify the printing position. The guide is marked in 1/16 inch units.

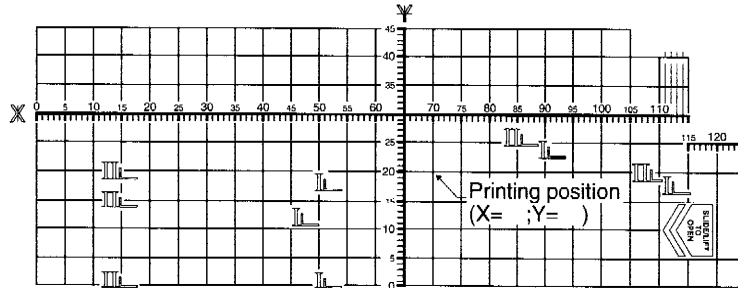

- 1 Select PRINT POSITION (see page 36).

```
[PRINT POSITION]
DATE: X=091/Y=023
```

- 2 Find the printing position of the date on the check and type in the readings for X and Y. Press **RETURN** to enter.

```
[PRINT POSITION]
PAYEE: X=051/Y=017
```

- 3 Repeat step 2 for the position of the other items.

```
[PRINT POSITION]
AMOUNT: X=013/Y=017
```

```
[PRINT POSITION]
SPELLOUT: X=047/Y=011
```

```
[PRINT POSITION]
MEMO: X=051/Y=000
```

```
[PRINT POSITION]
CONFIRMED? (Y/N)
```

- 4 Type Y and press **RETURN** to confirm, or type N and press **RETURN** to abandon.

```
[PRINT FORMAT]
1:PRINT POSITION ▾
```

```
[PRINT POSITION]
DATE: X=091/Y=023
```

The first display appears when you confirm.

The second display appears when you abandon the data.

4

Personalizing Your Check Writer: Setup

Print Contrast

You have a choice between:

- NORMALfor higher density printing
- LIGHTfor lower density printing

1 Select **PRINT CONTRAST** (see page 36).

| |
|------------------------------------|
| [PRINT CONTRAST] NORMAL / LIGHT |
|------------------------------------|

2 Use  and  to select **NORMAL** or **LIGHT** and press .

| |
|--------------------------------------|
| [PRINT FORMAT] 1:PRINT POSITION ▼ |
|--------------------------------------|

NORMAL is the preset selection.

This setting applies to all the printed items of the checks and reports.

4 Font

You have a choice between:

- STANDARDfor regular characters
- ITALICfor italic characters

1 Select **PRINT FONT** (see page 36).

| |
|-----------------------------------|
| [PRINT FONT] STANDARD / ITALIC |
|-----------------------------------|

2 Use  and  to select **STANDARD** or **ITALIC** and press .

| |
|--------------------------------------|
| [PRINT FORMAT] 1:PRINT POSITION ▼ |
|--------------------------------------|

This setting applies only to the printed items of the checks. Reports and mailing labels cannot be printed in italic.

Adjusting the LCD (display) Contrast

The preset contrast of the display should make it easy enough to read. If you want to try other settings, proceed as follows.

- 1 Press **SETUP** and select LCD CONTRAST.

Refer to "Selecting an Item to Set Up" on page 29.

- 2 Use **◀** to decrease the contrast, and **▶** to increase it.

[LCD CONTRAST]
- ◀◀ ███▶▶ +

[LCD CONTRAST]
- ███▶▶▶▶ +

[LCD CONTRAST]
- ◀ ███▶▶▶ +

[LCD CONTRAST]
- ◀◀ ███▶▶ +

[LCD CONTRAST]
- ◀◀◀ ███▶ +

[LCD CONTRAST]
- ◀◀◀◀ ███ +

Five contrast settings are available.

- 3 Press **RETURN**.

[SETUP]
5: LCD CONTRAST ▲▼

4

Personalizing Your Check Writer: Setup

Setting the Date and Time

If the time or date shown on the display just after the power is turned on is not correct, set the calendar as follows.

- 1 Press **SETUP** and select **CALENDAR**. Refer to "Selecting an Item to Set Up" on page 29.

```
[CALENDAR]
DATE:07/15/95[MON]
```

- 2 Type the month (e.g. "08").

```
[CALENDAR]
DATE:08/15/95[TUE]
```

- 3 Type the day (e.g. "28").

```
[CALENDAR]
DATE:08/28/95[TUE]
```

- 4 Press **RETURN** to keep the year unchanged.

```
[CALENDAR]
DATE:08/28/95[TUE]
```

- 5 Use **▼** and **▲** to select the day of week (e.g. "MON") and press **RETURN**.

```
[CALENDAR]
TIME:09:15 [AM/PM]
```

- 6 Type the hour (e.g. "08").

```
[CALENDAR]
TIME:08:15 [AM/PM]
```

- 7 Type the minute (e.g. "30") and press **RETURN**.

```
[CALENDAR]
TIME:08:30 [AM/PM]
```

- 8 Use **◀** and **▶** to select AM or PM and press **RETURN**.

```
[SETUP]
6: CALENDAR
```

4 Personalizing Your Check Writer: Setup

Setting the Automatic Power Off Feature

The auto power off feature automatically switches the power off when the machine is left unattended for more than 10 minutes (no key input). You can enable or disable this feature.

- 1 Press **SETUP** and select **AUTO POWER OFF**.

[AUTO POWER OFF]
Disable/Enable

Refer to "Selecting an Item to Set Up" on page 29.

The preset selection is "Disabled".

- 2 Select the desired option and press **RETURN**.

[SETUP]
7:AUTO POWER OFF

4

Memory Maintenance

Checking the Memory

The following feature allows you to check the remaining free space in the memory.

- 1** Press **SETUP** and select **MEMORY**.
Refer to "Selecting an Item to Set Up" on page 29.

```
[MEMORY] ■■■■ _____  
( 350/1000 TOTAL)
```

```
[MEMORY] ■■■■■■ _____  
( 350/600 TOTAL)
```

```
[MEMORY] ■■■■■■■■ _____  
(1000/1000 TOTAL)
```

```
[MEMORY] ■■■■■■■■ _____  
( 600/600 TOTAL)
```

4

Personalizing Your CheckWriter. Setup

Each ■ on the upper row of the display corresponds to about 10% of used memory. The second row indicates the number of records used for payment or deposit among a total available of 1000 (CW-1000) or 600 (CW-600).

Display 3 (CW-1000) or display 4 (CW-600) appears when the memory is full. When this happens, you have to delete old records to make room for new ones. See "Deleting Old Records" on page 70.

- 2** Press **RETURN** to exit.

```
[SETUP] ▲  
8:MEMORY ▼
```


Clearing the Memory

The functions described below allow you to clear data for the selected account. Actual deletion is delayed until you switch the power off and on again.

If you clear ALL DATA, the following will be destroyed:

- Account name
- Balance (running/reconciled)
- Payment data
- Deposit data
- Payee data
- Password

If you clear PAYMENT/DEPOSIT, the following will be destroyed:

- Balance (running/reconciled)
- All payment data
- All deposit data

- 1 Press **SETUP**, select an account number, then select **MEMORY CLEAR**. Refer to "Selecting an Item to Set Up" on page 29.
- 2 Use **▼** and **▲** to display the desired operation (**ALL DATA** or **PAYMENT/DEPOSIT**) and press **RETURN**.
- 3 If you select **ALL DATA**:
- 4 Type **Y** and press **RETURN** to clear or type **N** and press **RETURN** to cancel.

[MEMORY CLEAR]
1:ALL DATA ▼

[MEMORY CLEAR]
2:PAYMENT/DEPOSIT ▲

CLEAR ALL DATA
OF ACCOUNT[I]? (Y/N)

CLEARED ALL DATA
OF ACCOUNT[I]

[MEMORY CLEAR]
1:ALL DATA ▼

The first display appears when you clear. Press any key to move to the second display.

The second display appears immediately when you cancel.

- 5 If you select **PAYMENT/DEPOSIT**:

PAYMENT & DEPOSIT
CLEAR ALL? (Y/N)

4

Personalizing Your Check Writer: Setup

- 6 Type Y and press **RETURN** to clear or type N and press **RETURN** to cancel.

```
CLEARED ALL DATA
OF PAYMENT&DEPOSIT
```

```
[MEMORY CLEAR]
1:ALL DATA ▼
```

The first display appears when you clear. Press any key to move to the second display.

The second display appears immediately when you cancel.

- 7 Press **RETURN** to exit.

Resetting the System

To reset the machine to the original state it was when you purchased it, proceed as follows:

4

- 1 Make sure the power is off.

- 2 Press **SHIFT** + **CAN/C** and keep these keys down while pressing **POWER** to switch the power on.

```
= CW-1000 =
RESET ALL?(Y/N)
```

- 3 Type Y and press **RETURN** to reset all or press **RETURN** to cancel.

```
= CW-1000 =
RESETTING
```

The above display appears while the system is resetting.

The first line of the displays shows the model name (CW-1000 or CW-600)

- 4 The Date and Time will appear after the memory check message.

```
MEMORY CHECK..
```

Resetting the system is necessary when the machine is transferred to another person, in order to clear all the data of the previous owner, or when a flat lithium has caused a data loss.

Note:

If you leave your CheckWriter for more than 10 minutes without the lithium battery, and with the power turned off, then after turning the power on, this message appears:

```
PLEASE
SYSTEM RESET
```

Reset your CheckWriter as explained above.

Chapter 5

Handling Your Transactions

5

Handling Your Transactions

45

Entering Your Starting Balance

Before you start using the CheckWriter, you will need to properly set up your account. This makes sure that your CheckWriter is always in agreement with your bank statement.

Please read and follow these steps carefully:

- 1 During the "Setup" of either Account I or II, your Balance (Recon.) is set to \$0.00. Keep it as is and press the **RETURN** key.
- 2 Your first transaction must be a deposit. The amount of the deposit should be the same amount as your true current running balance. This current running balance is the amount currently recorded in your checkbook. You are now ready to use your CheckWriter on a regular basis.

5 When you get your bank statement

When you start reconciling, some transactions will not have been entered in the CheckWriter, and should be ignored. (These include any deposits, withdrawals or checks made after your previous statement, but before you started using the CheckWriter).

Using the CheckWriter, reconcile only the transactions you have entered. The balance shown on your bank statement and your CheckWriter should be the same.

If the two balances do not match, you may have made a mistake before you started using the CheckWriter. Common mistakes include forgetting to enter transactions, not reconciling service charges, transposing numbers and mis-calculating. Check your previous transactions and previous balances using the calculator function.

You can also make an adjustment by depositing or withdrawing an amount so that the bank statement and your reconciled balance match.

Example Your own checkbook shows running balance: \$9,000.00
Enter Reconciled balance: \$0.00
Make first deposit: \$9,000.00

Transactions should proceed as follows:

| | | Reconciled |
|--------------|------------|------------|
| (1- Deposit | \$9,000.00 | Yes) |
| 2- Deposit | \$1,000.00 | Yes |
| 3- Check 100 | \$2,000.00 | Yes |
| 4- Check 101 | \$1,000.00 | Yes |
| 5- Check 102 | \$1,000.00 | Yes |

| | |
|-------------------------|------------|
| Bank Statement balance: | \$6,000.00 |
| Reconciled balance: | \$6,000.00 |
| Running balance: | \$6,000.00 |

Note: Your reconciled balance will not match the running balance most of the time. This is because some checks may have been cashed, while others were not.

On the other hand, if you are opening a new bank checking account and want that account to be handled by the CheckWriter, follow these steps:

- 1 During the "Setup" of either Account I or II, your Balance (Recon.) is set to \$0.00. Keep it as is and press the **RETURN** key.
- 2 Make a deposit in the CheckWriter for the same amount you deposited when you started the bank checking account.
- 3 Now start making checks using the CheckWriter.

Choosing a Transaction Type

The following functions are available:

- PAYMENTfor registering a payment
- DEPOSITfor registering a deposit
- RECON.....for reconciling the amount in a transaction with the statement from the bank
- VOID.....for voiding a check
- DELETE.....for deleting a transaction
- FINDto search for data

You can enter a total of 1000 transactions (CW-1000) or 600 transactions (CW-600)

5

Handling Your Transactions

1 Switch the power on.

2 Press **CHECK**. Type the password for the account you want to use and press

| | |
|------------|-------|
| ACCOUNT[I] | FIRST |
|------------|-------|

RETURN.

3 Press **CHECK** again.

| | |
|------------|---|
| 1. PAYMENT | ▼ |
| 2. DEPOSIT | ▼ |

→ page 49

4 Use ▼ and ▲ to display the desired operation.

| | |
|------------|---|
| 2. DEPOSIT | ▲ |
| 3. RECON | ▼ |

→ page 60

You can also type the number for the operation (1 for PAYMENT, 2 for DEPOSIT, etc.) to scan faster.

| | |
|----------|---|
| 3. RECON | ▲ |
| 4. VOID | ▼ |

→ page 63

5 Press **RETURN** when the cursor is located on the desired operation.

| | |
|-----------|---|
| 1. VOID | ▲ |
| 5. DELETE | ▼ |

→ page 68

Note: To enter the Check mode, press **CHECK** after typing the password and pressing **RETURN**. To exit the Check mode, press **CHECK** and type Y.

| | |
|-----------|---|
| 5. DELETE | ▲ |
| 6. FIND | ▼ |

→ page 70

| | |
|---------|---|
| 6. FIND | ▲ |
|---------|---|

→ page 71

Payments

Five types of payment are available:

- CHECKfor a payment by check
- ATMfor a payment in cash at a cash machine
- BANK FEEfor payment of a bank fee
- WITHDRAWfor cash withdrawal
- OTHERSfor any other transaction not listed above

1 Select **PAYMENT** type:
Refer to "Choosing a Transaction Type" on page 48.

[PAYMENT]
1:CHECK (CK) ▼
→ page 50

2 Use and to select the desired payment type.
You can also enter the number for the payment type (1 for CHECK, 2 for ATM, etc.) to scan faster.

[PAYMENT]
2:ATM ▼
→ page 57

3 Press when the cursor is located on the desired kind of payment.

[PAYMENT]
3:BANK FEE (FEE) ▼
→ page 57

[PAYMENT]
4:WITHDRAW ▼
→ page 57

[PAYMENT]
5:OTHERS ▼
→ page 57

5

Handling Your Transactions

Entering Checks

When registering a payment by check, you have to enter data for the following items:

- CHECK No.the number of the check
- PAYEE.....the beneficiary of the check
- DATEthe date that will appear on the check
- TAX.....whether the payment is tax deductible or not
- CATEGORYthe category of the goods or service purchased
- AMOUNTthe amount of money
- MEMOan optional comment

- ① **Select CHECK.**
Refer to "Payments" on page 49.

```

= PAYEE LIST
NO DATA =
    
```

```

[CK/CHECK No.]:
# 12345
    
```

*The first display appears if your list of payees is empty. In this case, press **CAN/C** to exit, and enter the data for at least one payee. See "Entering Your Payees" on page 30.*

If your payee list is not empty, the check number input screen appears.

- ② **If necessary, type another number.**

```

[CK/CHECK No.]:
# 12345
    
```

A check number can include up to five digits.

If you are issuing a new check, you must make sure that the number you enter here matches the number that is printed on the check you are going to use. The preset check number is the number of the last check registered +1. Correct it if necessary.

If you want to edit a check that has already been registered, just enter the number of that check.

- ③ **Press **RETURN** to confirm the check number.**

```

[CK/PAYEE]:      ▲▼
                ABC SHOP
    
```



- ④ **Use **▼** and **▲** to display the desired payee name. You can also type the first letter of the payee name to scan faster.**

```


[CK/PAYEE]:      ▲▼
                DEF MART
    
```







 
```

[CK/PAYEE]:      ▲▼
                GHI STORE
    
```


Pressing  at the beginning of the list moves to the last payee; pressing  at the end of the list moves to the first payee.

If your list of payees does not include the desired name, quit the CHECK function and use the SETUP function to add the name to the payee list. See "Entering Your Payees" on page 30.


You can also press  when the above screen is displayed to enter a "one-shot check". See "One-shot Checks" on page 54.

If you mistakenly select a wrong payee and press  to enter it, you can move back to the above step by pressing . The payee name that you have entered will be displayed (without the   symbols). Press  to cancel the payee selection (the   will reappear) and select the correct payee as explained above.

- 5 Press  to confirm the payee name.

| |
|------------------------|
| [CK/DATE]: 08/03/95 |
|------------------------|

The preset date is the current date for a new check number. For a check you are editing, the date displayed here is the date you entered for that check.

- 6 If necessary, type another date. Press  to confirm the date.

| |
|--|
| [CK/TAX RELATED]: Y /  |
|--|

- 7 Use  and  to select Yes (taxable) or No (non taxable).

| |
|--|
| [CK/TAX RELATED]: Y /  |
|--|



- 8 Press  to confirm.

| |
|--|
| [CK/CATEGORY]:   AUTO(FUEL) |
|--|



- 9 Use  and  to display the desired category.




 



| |
|---|
| [CK/CATEGORY]:   AUTO(SERVICE) |
|---|

You can also type the first letter of the category to scan faster.

| |
|--|
| [CK/CATEGORY]:   CLOTHING |
|--|

The list of categories includes 50 preset categories and 20 user-defined categories. Refer to "Deciding Categories" on page 35 if the desired category is not yet in your list.


Pressing  at the beginning of the list moves to the last category; pressing  at the end of the list moves to the first category.

If you mistakenly select a wrong category, and press  to enter it, you can move back to the above step by pressing . The category that you have entered will be displayed (without the   symbols). Press  to cancel the category selection (the   will reappear) and select the correct category as explained above.

- 10 Press  to confirm the category.

| |
|--|
| [CK/AMOUNT]: \$  |
|--|


- 11 Type the amount and press .

| |
|--|
| SURE? (Y/N) \$  y,yyy.yy |
|--|

| |
|--|
| REMAINING BALANCE \$  y,yyy.yy |
|--|

The amount must not exceed \$99,999.99.

The first screen (confirmation) appears when the amount is larger than \$1,000.

In this case, type Y to confirm or N to cancel and press . If you type Y, the display showing the balance will appear. If you type N, you are back to step 11 and you can correct the amount.


If the amount is smaller than \$1,000, the second screen (balance) appears immediately.

For a new payment, the updated balance is the old one minus the amount entered.

For an edited payment with a modified amount, the updated balance reflects the change.

- 12 Press  when the balance is displayed.

| |
|-----------------------------------|
| = WARNING ! = NEGATIVE BALANCE |
|-----------------------------------|

| |
|---|
| [CK/MEMO]:  |
|---|

The first screen (warning) appears when the balance is negative. In this case, press any key to move to the second display. If no key is pressed during the next 5 seconds, the memo input screen will automatically appear.

If the balance is positive, the second screen (memo input) appears immediately.

- 13 If you wish, type a comment.

[CK/MEMO]:
A SHORT COMMENT

The comment (a maximum of 16 characters) will be printed on the check.

- 14 Press RETURN to confirm the comment.

#xxxx \$yy.yyy.yy
CONFIRMED? (Y/N)

- 15 Type Y and press RETURN to confirm, or type N and press RETURN to cancel.

#xxxx \$yy.yyy.yy
PRINT OUT? (Y/N)

[CK/CHECK No.]:
2345

If you confirm, the data is stored into the memory and the first display appears.

If you cancel, all the data for the check is deleted and the second display appears.

- 16 Type Y and press RETURN to confirm that you want to print, or type N and press RETURN to cancel.

[CK/CHECK No.]:
2345

If you confirm, the CheckWriter will ask you to insert blank checks in the paper cassette before starting printing. See "Printing Checks" on page 54. A message will tell you when printing is complete. Pressing RETURN will display the balance. Pressing RETURN again will display the first screen above.

The display above appears immediately if you cancel. All the data of the current check will appear.

- 17 To exit the check entry mode, press CHECK at any time.

-- EXIT? --
(Y/N)

Instead of CHECK you can also press CAN/C to exit. You will be back to the payment menu on page 49.

- 18 Type Y and press RETURN to confirm, or press RETURN to cancel.

ACCOUNT[I]
FIRST

If you confirm, all the data you have entered, but not saved will be deleted. Data you have saved in step 15 will stay in the memory.

If you cancel, you will be back to the screen that was displayed when you pressed **CHECK**.

One-shot Checks

One-shot checks are used for payees that you do not want to include in your payee list (for example, when you know you will never use the same payee name again, or when your list of payees is full).

You can enter a maximum of 100 one-shot checks for both accounts.

Proceed as when entering a normal check, except for the payee selection.

Instead of selecting a payee from the list (step 4), press **SETUP**, type the payee name and press **RETURN** to enter the name.

You can also press **SETUP** instead of **RETURN** to return to the payee list and select a name.

The payee names entered for one-shot checks are kept in memory. However, they will not be displayed in the payee list that appears when entering a new check. Such payee names are kept in memory only for the purpose of printing reports or searching for data. If you select EXIT at the end of a one-shot check entry, the payee name you typed will not be kept in memory.

Printing Checks

You can print a single check just after entering it or editing its data.

You can also press **PRINT** at the initial screen to print a range of check numbers. Before you print a check, make sure that you have set up the check format for the type of checks used in the selected account. If you do not set up the format correctly, the different items of the check may print at wrong locations. See "Setting Your Print Format" on page 36.

Also make sure to that the check with the correct number is in the paper cassette. In particular, when you print a range of checks, the checks are printed in ascending order. Be sure that the checks are stacked in ascending order, the lower number at the top of the stack.

Note: To enter the Print mode, press **PRINT** after typing the password and pressing **RETURN**. To exit the Print mode, press **PRINT** and type Y.

- 1 Press **PRINT** at the initial screen to start printing a range of check numbers.

| |
|--------------|
| [CHECK No.]: |
| # █ ~ # |

- 2 Type the first number of the range and press **RETURN**.
Type the last number of the range and press **RETURN**.

```
#xxxxx~ #xxxxx
CHECKS IN?(Y/N)

#12389 NO DATA
PRESS ANY KEY

#1238 VOIDED
PRESS ANY KEY

#1238 RECONCILED
PRESS ANY KEY

#1238 PRINTED
PRINT AGAIN?(Y/N)
```

If the first display appears, skip to step 5.
 One of the next three displays appear when a check in the range does not contain data, or has been voided or reconciled. Such a check cannot be printed. Press any key to return to step 1.
 The last display appears when a check in the range has already been printed. Press **RETURN** to skip that check, or select Y and press **RETURN** to print it again.

- 3 You can also print a single check after entering the data for a new check, or editing the data for an existing check. You are asked whether you want to print the check or not (see step 15 on page 53).
- 4 Type Y and press **RETURN** if you want to print.
- 5 Confirm the check number(s). If there is a mistake, type N and press **RETURN** to return to the previous display.
 Confirm that you have enough blank checks of the right kind in the paper cassette. Load more checks if necessary.
 Type Y and press **RETURN**.

```
#xxxxx $yy.yyy.yy
-- PRINT? (Y/N)

#xxxxx
-CHECKS IN? (Y/N)

[CHECK No.]:
#xxxxx~#xxxxx

PRINTING ... #xxxxx
[PRINT]KEY->STOP

#xxxxx~ #xxxxx
PRINT COMPLETED
```

The first display appears when you cancel. You are back to step 3.

The second display appears when printing starts. The number of the check being printed is displayed at the upper-right corner.

The last display appears when printing is completed. When that display appears, press any key to return to the account balance display.

- 6 To interrupt printing, press **PRINT**.

```
PRINTING ... #xxxxx
STOP PRINTING? (Y/N)
```

- 7 Press **RETURN** to return to the previous display, or type Y and press **RETURN** to interrupt.

```
PRINTING ... #xxxxx
[PRINT]KEY->STOP
```

```
-- EXIT? --
(Y/N)
```

The first display appears when you cancel the interruption. You are back to step 5.

The second display appears when you confirm the interruption.

- 8 Type Y and press **RETURN** to exit, or type N and press **RETURN** to cancel printing.

```
PRINTING ... #xxxxx
[PRINT]KEY->STOP
```

```
REMAINING BALANCE
$xx,xxx.xx
```

The first display appears if you resume printing. You are back to step 5.

The second display appears if you cancel.

- 9 If the cassette becomes empty while printing, this message will appear. Insert blank checks in the cassette and press any key to move to the second display.

```
= CASSETTE EMPTY! =
INSERT CHECKS
```

```
#xxxxx ~#xxxxx
CONTINUE? (Y/N)
```

The second display will automatically replace the first one if you do not press any key during 5 seconds.

- 10 Press **RETURN** to resume printing and return to step 5 or type N and press **RETURN** to exit.

Other Payments

Follow the steps below when registering a payment other than a payment by check (ATM, BANK FEE, WITHDRAW, OTHERS). Since the procedure is basically the same for all these modes of payment, only the ATM payment will be explained in detail.

When registering such a payment, you have to enter data for the following items:

- DATEthe date of the payment
- AMOUNTthe amount of money
- MEMOan optional comment

- 1 Select ATM.
Refer to "Payments" on page 49.

| |
|-------------------------|
| [ATM/DATE]: 08/03/95 |
|-------------------------|

The preset date is always the current date.

- 2 If necessary, type another date.

| |
|-------------------------|
| [ATM/DATE]: 08/04/95 |
|-------------------------|

- 3 Press **RETURN** to confirm the date.

| |
|--------------------------------------|
| =SAME DATA EXIST! NEW DATA? (Y/N) |
|--------------------------------------|

| |
|---------------------|
| [ATM/AMOUNT]: \$ |
|---------------------|

*The first display appears if you already have registered one or more ATM payments under the same date. You can either enter new data (Y) or edit existing data (N). If you type Y and press **RETURN**, the second display will appear and you can start entering data. Skip to step 5.*

If no other ATM payment has been registered under the specified date, the second display appears. Skip to step 5.

- 4 When you type N and press **RETURN** to edit the existing data:

| |
|-------------------------------|
| [ATM/AMOUNT]: \$X,XXX.XX ▶ |
|-------------------------------|

| |
|--------------------------------|
| [ATM/AMOUNT]: \$Y,YYY.YY ◀▶ |
|--------------------------------|

If there is more than one ATM payment, you will see a ▶ symbol at the right of the display. This means that you can use ◀ and ▶ to select the ATM payment you want to edit.

5

Handling Your Transactions

- 5 Type the amount and press **RETURN**.

```
SURE? (Y/N)
$yy,yyy.yy
```

```
REMAINING BALANCE
$yy,yyy.yy
```

The amount must not exceed \$99,999.99.

*The first screen (confirmation) appears when the amount is larger than \$1,000. In this case, type Y to confirm or N to cancel and press **RETURN**. If you type Y, the display showing the balance will appear. If you type N, you are back to step 5 and you can correct the amount.*

For a new payment, the updated balance is the old one minus the amount entered.

For an edited payment with a modified amount, the updated balance reflects the change.

- 5 6 Press **RETURN** when the balance is displayed.

```
= WARNING ! =
NEGATIVE BALANCE
```

```
[ATM/MEMO]:
█
```

The first display (warning) appears when the balance is negative. In this case, press any key to move to the second display (memo). If no key is pressed during the next 5 seconds, the second display will automatically appear.

If the balance is positive, the second display (memo) appears immediately.

- 7 If you wish, type a comment.

```
[ATM/MEMO]:
A SHORT COMMENT█
```

The comment can include a maximum of 16 characters. For a new payment, the input field is empty. For a payment you are editing, the old comment appears and you can edit it.

- 8 Press **RETURN** to confirm the comment.

```
08/04/95 $yy,yyy.yy
CONFIRMED? (Y/N)
```


- 9 Make sure that the date and amount are correct.

[ATM/DATE]:
08/01/95

Type Y and press **RETURN** to confirm, or type N and press **RETURN** to cancel.

If you confirm, the data is stored into the memory.

If you cancel, all the data for the payment is deleted.

- 10 To exit the data entry mode, press **CHECK** at any time.

-- EXIT? --
(Y/N)

*Instead of **CHECK** you can also press **CAN/C** to exit. You will be back to the payment menu on page 49.*

- 11 Type Y and press **RETURN** to confirm, or press **RETURN** to cancel.

ACCOUNT[I]
FIRST

If you confirm, all the data you have entered and saved will be deleted. Data you have saved in step 9 will stay in the memory.

*If you cancel, you will be back to the screen that was displayed when you pressed **CHECK**.*

Deposits

Follow the steps below when registering a deposit.

When registering a deposit, you have to enter data for the following items:

- DATEthe date that will appear for the payment
- AMOUNTthe amount of money
- MEMOan optional comment

- 1** Select DEPOSIT.
Refer to "Choosing a Transaction Type" on page 48.

[DEPOSIT/DATE]:
08/03/95

- 2** If necessary, type another date.

[DEPOSIT/DATE]:
08/04/95

- 3** Press **RETURN** to confirm the date.

= SAME DATA EXIST =
NEW DATA? (Y/N)

[DEPOSIT/AMOUNT]:
\$

*The first display appears if you already have registered one or more deposits under the same date. You can either enter new data (Y) or edit existing data (N). If you type Y and press **RETURN**, the second display will appear and you can start entering data. Skip to step **5**.*

*If no other deposit has been registered under the specified date, the second display appears. Skip to step **5**.*

- 4** Type N and press **RETURN** to edit the existing data.

[DEPOSIT/AMOUNT]: ▶
\$x,xxx.xx

[DEPOSIT/AMOUNT]: ◀◀
\$y,yyy.yy

If there is more than one deposit, you will see a ► symbol at the right of the display. You can use ◀ and ▶ to select the deposit you want to edit.

- 5 Type the amount and press **RETURN**.

```
SURE? (Y/N)
$yy,yyy.yy
```

```
REMAINING BALANCE
$yy,yyy.yy
```

The amount must be smaller than \$99,999.99.

The first screen (confirmation) appears when the amount is larger than \$1,000. In this case, type Y to confirm or N to cancel and press **RETURN**. If you type Y, the display showing the balance will appear. If you type N, you are back to step 5 and you can correct the amount.

For a new deposit, the updated balance is the old one plus the amount entered.

For an edited deposit with a modified amount, the updated balance reflects the change.

- 6 Press **RETURN** when the balance is displayed.

```
= WARNING ! =
NEGATIVE BALANCE
```

```
[DEPOSIT/MEMO]:
█
```

The first display appears when the balance is negative. In this case, press any key to move to the second display. If no key is pressed during the next 5 seconds, the second display will automatically appear.

If the balance is positive, the second display appears immediately.

- 7 If you wish, type a comment.

```
[DEPOSIT/MEMO]:
A SHORT COMMENT█
```

The comment can include a maximum of 16 characters. For a new deposit, the input field is empty. For a deposit you are editing, the old comment appears and you can edit it.

- 8 Press **RETURN** to confirm the comment.

```
08/04/95 $yy,yyy.yy
CONFIRMED? (Y/N)
```

- 9 Make sure that the date and amount are correct.

| |
|-----------------------------|
| [DEPOSIT/DATE]: 08/04/95 |
|-----------------------------|

Type Y and press **RETURN** to confirm, or type N and press **RETURN** to cancel.

If you confirm, the data is stored into the memory.

If you cancel, all the data for the deposit is deleted.

- 10 To exit the check entry mode, press **CHECK** at any time.

| |
|----------------------|
| -- EXIT? -- (Y/N) |
|----------------------|

*Instead of **CHECK** you can also press **CAN/C** to exit. You will be back to the check menu on page 48*

- 11 Type Y and press **RETURN** to confirm, or press **RETURN** to cancel.

| |
|---------------------|
| ACCOUNT[I] FIRST |
|---------------------|

*If you cancel, you will be back to the screen that was displayed when you pressed **CHECK** or **CAN/C**.*

If you confirm, all the data you have entered, but not saved, will be deleted. Data you have saved in step 9 will stay in the memory.

*If you cancel, you will be back to the screen that was displayed when you pressed **CHECK**.*

Reconciling with Your Bank Statement

 
Background

The CheckWriter maintains two different balances for each account: running balance and reconciled balance. The running balance is temporary. It shows up, for example, after you enter the data for a check. When the check is paid to the beneficiary, the bank sends you a statement. You can compare the amount on the bank statement with the amount in your CheckWriter. If the amounts match, mark the check as reconciled. This updates the reconciled balance on the account.


You can reconcile these kinds of transactions:

- CHECKfor a payment by check
- ATMfor a payment in cash at a cash machine
- BANK FEEfor payment of a bank fee
- WITHDRAWfor cash withdrawal
- OTHERS (PAYMENT) .for any other payment not listed above
- DEPOSITfor a deposit

1 Select RECON.
Refer to “Choosing a Transaction Type” on page 48.



 
2 Use and to select the desired transaction.



You can also type the number for the payment type (1 for CHECK, 2 for ATM, etc.) to scan faster.



 3 Press when the cursor is located on the desired transaction.



Reconciling Checks

- 1 Select CHECK.
Refer to "Reconciling with Your Bank Statement" on page 63.

```
[CK/CHECK No.]:
      12345
```

- 2 Type the number of the check you want to reconcile.

```
[CK/CHECK No.]:
      12385
```

A check number can include up to five digits.

- 3 Press **RETURN** to confirm the check number.

```
#1238 NO DATA
      PRESS ANY KEY
```

```
# 1238 VOIDED
      PRESS ANY KEY
```

```
# 1238 RECONCILED
      - ACCEPT (Y/N)
```

```
# 12385 $yy.yyy.yy
      RECONCILE? (Y/N)
```

The first or second display appears when you enter a number that is not registered or the number of a check that has been voided. Press any key to return to the previous step.

*The third display appears when the check has already been reconciled. Type Y and press **RETURN** to accept the reconciliation, or type N and press **RETURN** to cancel it.*

The fourth display appears when the check number exists and the check is not reconciled yet.

- 4 Type Y and press **RETURN** to confirm, or type N and press **RETURN** to cancel.

```
RECONCILED BALANCE
      $yy.yyy.yy
```

If you confirm, the check is reconciled and the reconciled balance appears.

If you cancel, you are back to step 1 and the reconciled balance is not updated.

- 5 Press **RETURN** to move back to step 1.

```
= WARNING ! =  
NEGATIVE BALANCE
```

The warning display appears when the balance is negative. In such a case, press any key to move back to step 1. If no key is pressed during the next 5 seconds, the display shown in step 1 will automatically appear.

- 6 To exit the check reconcile mode, press **CHECK** at any time.

```
-- EXIT? --  
(Y/N)
```

Instead of **CHECK** you can also press **CAN/C** to exit. You will be back to the check menu on page 48

- 7 Type Y and press **RETURN** to confirm, or press **RETURN** to cancel.

```
ACCOUNT[I]  
FIRST
```

If you cancel, you will be back to the screen that was displayed when you pressed **CHECK**.

Reconciling Other Transactions

Follow the steps below when reconciling a transaction other than a payment by check (ATM, BANK FEE, WITHDRAW, OTHERS (PAYMENT), DEPOSIT). Since the procedure is basically the same for all these transactions, only the reconciliation of ATM payment will be explained in detail.

- 1 Select ATM.
Refer to "Reconciling with Your Bank Statement" on page 63.

```
[ATM/DATE]:
  08/03/95
```

- 2 Type the date for the transaction you want to reconcile.

```
[ATM/DATE]:
  08/03/95
```

- 3 Press **RETURN** to confirm the date.

```
08/04/95 NO DATA
PRESS ANY KEY
```

```
ALREADY RECONCILED
- ACCEPT (Y/N)
```

```
$YY,YYY.YY
RECONCILE? (Y/N)
```

The first display appears when you enter a date for which no transaction is registered. Press any key to return to the previous step.

The second display appears when the transaction has already been reconciled.

*Type Y and press **RETURN** to accept the reconciliation, or type N and press **RETURN** to cancel it.*

The third display appears when at least one transaction has been registered for the date, but is not reconciled yet. If there is more than one transaction on the same date, a ► symbol will appear at the right of the display. This means that you can use ◀ and ▶ to select the ATM payment you want to reconcile.

- 4 Type Y and press **RETURN** to confirm, or type N and press **RETURN** to cancel.

```
RECONCILED BALANCE
$YY,YYY.YY
```


If you confirm, the reconciled balance appears and the transaction is reconciled.

If you cancel, you are back to step ① and the reconciled balance is not updated.

- ⑤ Press **RETURN** to move back to step ①.

```
= WARNING ! =  
NEGATIVE BALANCE
```

The warning display appears when the balance is negative. In such a case, press any key to move back to step ①. If no key is pressed during the next 5 seconds, the display shown in step ① will automatically appear.

- ⑥ To exit the transaction reconcile mode, press **CHECK** at any time.

```
-- EXIT? --  
                (Y/N)
```

Instead of **CHECK** you can also press **CAN/C** to exit. You will be back to the check menu on page 48.

- ⑦ Type Y and press **RETURN** to confirm, or press **RETURN** to cancel.

```
ACCOUNT[I]  
FIRST
```

If you cancel, you will be back to the screen that was displayed when you pressed **CHECK**.

5

Handling Your Transactions

Voiding Checks

The VOID function is used to cancel a check before it is paid. This function cannot cancel a reconciled check.

- 1** Select VOID.
Refer to "Choosing a Transaction Type" on page 48.

```
[CK/CHECK No.]:  
#2345
```

- 2** Type the number of the check you want to void.

```
[CK/CHECK No.]:  
# 123#5
```

A check number can include up to five digits.

- 3** Press **RETURN** to confirm the check number.

```
#12385 NO DATA  
PRESS ANY KEY
```

```
# 12385 VOIDED  
- ACCEPT? (Y/N)
```

```
# 1238 $yy,yyy.yy  
VOID? (Y/#)
```

The first display appears when you enter a number that is not registered. Press any key to return to the previous step.

*The second display appears when the check has already been voided. Type Y and press **RETURN** to keep the check voided, or type N and press **RETURN** when a check has been mistakenly voided.*

The third display appears when the check number corresponds to a check that has not been voided.

- 4** Type Y and press **RETURN** to confirm, or type N and press **RETURN** to cancel.

```
REMAINING BALANCE  
$y.yyy.yy
```

If you confirm, the running balance appears.

*If you cancel, you are back to step **1** and the balance is not updated.*

5

Handling Your Transactions

- 5 Press **RETURN** to move back to step 1.

```
= WARNING ! =  
NEGATIVE BALANCE
```

The warning display appears when the balance is negative. In such a case, press any key to move back to step 1. If no key is pressed during the next 5 seconds, the display shown in step 1 will automatically appear.

- 6 To exit the check voiding mode, press **CHECK** at any time.

```
-- EXIT? --  
          (Y/N)
```

Instead of **CHECK** you can also press **CAN/C** to exit. You will be back to the check menu on page 48.

- 7 Type Y and press **RETURN** to confirm, or press **RETURN** to cancel.

```
ACCOUNT[I]  
FIRST
```

If you cancel, you will be back to the screen that was displayed when you pressed **CHECK**.




Finding a Past Transaction

Background

The FIND function allows you to search for data.

You can search for:

- PAYMENTany transactions that decreased the balance on your account
- DEPOSITany transactions that increased the balance on your account

- 1 Select FIND.
Refer to "Choosing a Transaction Type" on page 48.
- 2 Use  and  to select PAYMENT or DEPOSIT and press .


[FIND] 
PAYMENT/DEPOSIT


[FIND(PAYMENT)]
CHECK 
→ page 72

[FIND (PAYMENT)] 
ATM 
→ page 77

[FIND (PAYMENT)] 
BANK FEE 
→ page 77

[FIND (PAYMENT)] 
WITHDRAW 
→ page 77

[FIND (PAYMENT)] 
OTHERS 
→ page 77

[FIND(DEPOSIT)]
DATE 
→ page 79

5

Handling Your Transactions

The first five displays are available when you select PAYMENT.

The last display appears when you select DEPOSIT.

Finding a Check

You can search by either one of the following criteria:

- PAYEE.....the beneficiary of the check
- DATEa range of dates
- CATEGORYthe category of the goods or services purchased
- CHECK No.a range of check numbers
- AMOUNTa range of amounts
- VOIDwhether the check has been voided
- RECON.....whether the check has been reconciled
- TAX RELATEDwhether the check is tax related

1 Select **PAYMENT**.
Refer to “Finding a Past Transaction” on page 71.

| | |
|-----------------|---|
| [FIND(PAYMENT)] | |
| 1:CHECK | ▼ |

2 Press **RETURN**.

| | |
|---------------|---|
| [FIND(CHECK)] | |
| 1:PAYEE | ▼ |

5 **3** Use **▼** and **▲** to display the desired item.

| | |
|---------------|---|
| [FIND(CHECK)] | ▲ |
| 2:DATE | ▼ |

You can also type the number for the operation (1 for PAYEE, 2 for DATE, etc.) to scan faster.

| | |
|---------------|---|
| [FIND(CHECK)] | ▲ |
| 3:CATEGORY | ▼ |

| | |
|---------------|---|
| [FIND(CHECK)] | ▲ |
| 4:CHECK No. | ▼ |

| | |
|---------------|---|
| [FIND(CHECK)] | ▲ |
| 5:AMOUNT | ▼ |

| | |
|---------------|---|
| [FIND(CHECK)] | ▲ |
| 6:VOID | ▼ |

| | |
|---------------|---|
| [FIND(CHECK)] | ▲ |
| 7:RECON | ▼ |

| | |
|---------------|---|
| [FIND(CHECK)] | ▲ |
| 8:TAX RELATED | |

- 4 To search by payees, press **RETURN** when the cursor is on PAYEE. Use **▼** and **▲** to display the desired payee name. You can also type the first letter of the payee name to scan faster.

```
[CK/PAYEE]: ▲▼
                ABC SHOP
```

```
[CK/PAYEE]: ▲▼
                DEF MART
```

- 5 Press **RETURN** to confirm the payee name.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 6 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

```
[FIND(CHECK)]
  DISPLAY/PRINT
```

The above display allows you to specify whether the check(s) that match the search criteria (payee and dates) are going to be displayed or printed.

- 7 To search by dates, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on DATE.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 8 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

```
[FIND(CHECK)]
  DISPLAY/PRINT
```

The preset range is the entire date range of your checks. Pressing **RETURN** on one of the dates without retyping will enter that date. You can keep the preset range as is, retype one of the date, or retype both dates.

If you do not change the preset range, any check will match the criteria.

To search for checks with a specific date rather than a range of dates, set the start and end dates to the same value.

- 9 To search by categories, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on CATEGORY. Use **▼** and **▲** to display the desired category. You can also type the first letter of the category to scan faster.

```
[CK/CATEGORY]: ▲▼
                AUTO(FUEL)
```

```
[CK/CATEGORY]: ▲▼
                AUTO(LOAN)
```

- 10 Press **RETURN** to confirm the category.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 11 Type a start date and press **RETURN**.
 Type an end date and press **RETURN**.

[FIND(CHECK)]
 █ DISPLAY/PRINT
- 12 Press **RETURN** to confirm the date range.

[FIND(CHECK)]
 █ DISPLAY/PRINT
- 13 To search by check numbers, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on CHECK No.

[CK/CHECK No.]:
 #█nnnn~ #nnnn
- 14 Type a start number and press **RETURN**.
 Type an end number and press **RETURN**.

[FIND(CHECK)]
 █ DISPLAY/PRINT

The preset range is the entire range of your check numbers. Pressing **RETURN** on one of the numbers without retyping will enter that number.

If you do not change the preset range, any check will match the criteria.

To search for checks with a specific number rather than a range of numbers, set the start and end numbers to the same value.

- 15 To search by amounts, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on AMOUNT.

[CK/AMOUNT]:
 \$█x.xxx.xx~xx.xxx.xx

The preset range is the entire range of your check amounts. Pressing **RETURN** on one of the amounts without retyping will enter that number.

If you do not change the preset range, any check will match the criteria.

To search for checks with a specific amount rather than a range of amounts, set the start and end amounts to the same value.

- 16 Type a start amount and press **RETURN**.
 Type an end amount and press **RETURN**.

[CK/DATE]:
 █m/dd/yy ~ mm/dd/yy
- 17 Type a start date and press **RETURN**.
 Type an end date and press **RETURN**.

[FIND(CHECK)]
 █ DISPLAY/PRINT
- 18 To search for voided/not voided checks, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on VOID.

[CK/VOID]:
 █VOIDED /UNVOIDED

19 Use **◀** and **▶** to select VOIDED or UNVOIDED and press **RETURN**.

[CK/DATE]:
mm/dd/yy ~ mm/dd/yy

20 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

[FIND(CHECK)]
DISPLAY/PRINT

21 To search for reconciled/not reconciled checks, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on RECON.

[CK/RECON]:
RECON /NOT RECON

22 Use **◀** and **▶** to select RECON or NOT RECON and press **RETURN**.

[CK/DATE]:
mm/dd/yy ~ mm/dd/yy

23 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

[FIND(CHECK)]
DISPLAY/PRINT

24 To search for tax related/not tax related checks, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on TAX RELATED.

[CK/TAX RELATED]:
Y/N

25 Use **◀** and **▶** to select Y or N and press **RETURN**.

[CK/DATE]:
mm/dd/yy ~ mm/dd/yy

26 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

[FIND(CHECK)]
DISPLAY/PRINT

The above display appears after you enter one of the available search criteria.

Select DISPLAY to display the checks that match the search criteria.

Select PRINT to print the complete list of the checks that match the search criteria. For details about printing, see "Printing Reports" on page 83.

27 Use **◀** and **▶** to select DISPLAY and press **RETURN**.

CK/No. DATE ▶
nnnnn mm/dd/yy

- 28 Use  and  to display other data for the same check.

| |
|--------------------------|
| ◀ PAYEE ▶ |
| pppppppppppppppppppppppp |

| |
|-------------------------|
| ◀ CATEGORY ▶ |
| ccccccccccccccccccccccc |

| | |
|-------------|--------|
| ◀ AMOUNT | RECON. |
| \$xx,xxx.xx | * |

| |
|---------------|
| ◀ TAX RELATED |
| YES |

If a check has been voided, VOID is displayed instead of the payee name.

If a check has been reconciled, an asterisk appears under RECON.

The search criteria is always displayed first. For example, if you search by category, the category will be the first item displayed.

- 5 29 Use  and  to scan the list of the checks found.

| | | |
|--------|----------|---|
| CK/No. | DATE | ▶ |
| nnnnn | mm/dd/yy | |

You can also press  to return to the destination selection display.

Finding Other Payments

Follow the steps below when searching for payments other than payments by check (ATM, BANK FEE, WITHDRAW, OTHERS). Since the procedure is basically the same for all these types of payment, only the ATM payment will be explained in detail.

You can search by either one of the following criteria:

- DATEa range of dates
- AMOUNTa range of amounts
- RECON.....whether the payment has been reconciled

1 Select **PAYMENT**. Refer to "Finding a Past Transaction" on page 71.

[FIND(PAYMENT)]
1: CHECK ▼

2 Press **▼** **RETURN** to select **ATM**.

[FIND(ATM)]
1: DATE ▼

3 Use **▼** and **▲** to display the desired item.

You can also type the number for the operation (1 for DATE, 2 for AMOUNT, etc.) to scan faster.

[FIND(ATM)]
2: AMOUNT ▼

[FIND(ATM)]
3: RECON ▲

4 To search by dates, press **RETURN** when the cursor is on **DATE**.

[ATM/DATE]:
mm/dd/yy ~ mm/dd/yy

5 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

[FIND(ATM)]
DISPLAY/PRINT

*The preset range is the entire date range of your ATM payments. Pressing **RETURN** on one of the dates without retyping will enter that date.*

If you do not change the preset range, any ATM payment will match the criteria.

To search for ATM payments with a specific date rather than a range of dates, set the start and end dates to the same value.

6 To search by amounts, proceed as in steps **3** and **4**, but press **RETURN** when the cursor is on **AMOUNT**.

[ATM/AMOUNT]:
\$X,XXX.XX~XX,XXX.XX

- 7 Type a start amount and press **RETURN**.
Type an end amount and press **RETURN**.

| |
|-----------------------------------|
| [CK/DATE]: mm/dd/yy ~ mm/dd/yy |
|-----------------------------------|

The preset range is the entire range of your ATM amounts. Pressing **RETURN** on one of the amounts without retyping will enter that number.

If you do not change the preset range, any ATM payment will match the criteria.

To search for ATM payments with a specific amount rather than a range of amounts, set the start and end amounts to the same value.

- 8 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

| |
|--------------------------------|
| [FIND(CHECK)] DISPLAY/PRINT |
|--------------------------------|

- 9 To search for reconciled/not reconciled ATM payments, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on RECON.

| |
|----------------------------------|
| [AIM/RECON]: RECON /NOT RECON |
|----------------------------------|

- 10 Use **←** and **→** to select RECON or NOT RECON and press **RETURN**.

| |
|-----------------------------------|
| [CK/DATE]: mm/dd/yy ~ mm/dd/yy |
|-----------------------------------|

- 11 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

| |
|--------------------------------|
| [FIND(CHECK)] DISPLAY/PRINT |
|--------------------------------|

The above display appears after you enter one of the available search criteria.

Select DISPLAY to display the ATM payments that match the search criteria.

Select PRINT to print the complete list of the checks that match the search criteria. For details about printing, see "Printing Reports" on page 83.

- 12 Use **←** and **→** to select DISPLAY and press **RETURN**.

| | | |
|----------|-----------|---|
| DATE | AMOUNT | ▶ |
| mm/dd/yy | xx,xxx.xx | |

- 13 Use **←** and **→** to display other data for the same ATM payment.

| | |
|----------|--------|
| ◀PAYMENT | RECON. |
| ATM | * |

- 14 Use **▼** and **▲** to scan the list of the ATM payments found.

| | | |
|----------|-----------|---|
| DATE | AMOUNT | ▶ |
| mm/dd/yy | xx,xxx.xx | |

You can also press **CAN/C** to return to the destination selection display.



Finding a Deposit

You can search by either one of the following criteria:

- DATEa range of dates
- AMOUNTa range of amounts
- RECON.....whether the deposit has been reconciled

1 Select DEPOSIT.
Refer to "Finding a Past Transaction" on page 71.

[FIND(DEPOSIT)]
[] .DATE ▼

2 Use  and  to display the desired item.
You can also type the number for the operation (1 for DATE, 2 for AMOUNT, etc.) to scan faster.

[FIND(DEPOSIT)] ▲
[] .AMOUNT ▼


[FIND(DEPOSIT)] ▲
[] .RECON

3 To search by dates, press  when the cursor is on DATE.

[DEPOSIT/DATE]:
[]m/dd/yy ~ mm/dd/yy


4 Type a start date and press .
Type an end date and press .

[FIND (DEPOSIT)]
[]ISPLAY/PRINT

The preset range is the entire date range of your deposits. Pressing  on one of the dates without retyping will enter that date.

If you do not change the preset range, any deposit will match the criteria.


To search for deposits with a specific date rather than a range of dates, set the start and end dates to the same value.

5 To search by amounts, proceed as in steps **3** and **4**, but press  when the cursor is on AMOUNT.

[DEPOSIT/AMOUNT]:
\$ []x,xxx.xx~xx,xxx.xx

6 Type a start amount and press .
Type an end amount and press .

[DEPOSIT/DATE]:
[]m/dd/yy ~ mm/dd/yy

The preset range is the entire range of your deposits. Pressing  on one of the amounts without retyping will enter that number.

If you do not change the preset range, any deposit will match the criteria.

To search for deposits with a specific amount rather than a range of amounts, set the start and end amounts to the same value.

- 7 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

```
[FIND(DEPOSIT)]
  DISPLAY/PRINT
```

- 8 To search for reconciled/not reconciled deposits, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on RECON.

```
[DEPOSIT/RECON]:
  RECON /NOT RECON
```

- 9 Use **←** and **→** to select RECON or NOT RECON and press **RETURN**.

```
[CK/DATE]:
  mm/dd/yy ~ mm/dd/yy
```

- 10 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

```
[FIND(DEPOSIT)]
  DISPLAY/PRINT
```

The above display appears after you enter one of the available search criteria. Select DISPLAY to display the deposits that match the search criteria. Select PRINT to print the complete list of the deposits that match the search criteria. For details about printing, see "Printing Reports" on page 83.

- 11 Use **←** and **→** to select DISPLAY and press **RETURN**.

```
DATE      AMOUNT  ►
mm/dd/yy  xx,xxx.xx
```

- 12 Use **←** and **→** to display other data for the same deposit.

```
◀ RECON.
  *
```

- 13 Use **▼** and **▲** to scan the list of the deposits found.

```
DATE      AMOUNT  ►
mm/dd/yy  xx,xxx.xx
```

*You can also press **CAN/C** to return to the destination selection display.*

Chapter 6

Printing and Other Functions

6

Printing and Other Functions

81

Choosing an Operation

The following functions are available:

- REPORT.....to print reports
- LABELS.....to print a payee's address
- AMORTIZE.....to calculate and print the repayment of a loan
(CW-1000 only)
- INVEST.....to calculate and print the gain on an investment
(CW-1000 only)

Note: To enter the Function mode, press **FUNCTION** after typing the password and pressing **RETURN**. To exit the Function mode, press **FUNCTION** and type Y.

1 Press **FUNCTION**.

| | |
|------------|---|
| [FUNCTION] | |
| 1:REPORT | ▼ |

→ page 83

2 Use **▼** and **▲** to display the desired item.

| | |
|------------|---|
| [FUNCTION] | ▲ |
| 2:LABELS | ▼ |

→ page 101

You can also type the number of the operation (1 for REPORT, 2 for ADDRESS, etc.) to scan faster.

| | |
|------------|---|
| [FUNCTION] | ▲ |
| 3:AMORTIZE | ▼ |

→ page 104

3 Press **RETURN** when the cursor is located on the desired function.

| | |
|------------|---|
| [FUNCTION] | ▲ |
| 4:INVEST | |

→ page 105

6

Printing and Other Functions

Printing Reports

Background

The following functions are available:

- CHECK.....to print reports about payment and deposits
- SETUP.....to print user settings
- TEL No.to print a list of payee names and telephone numbers
- NAME/ADDRESS.....to print a list of payee names and addresses

- ① Press **FUNCTION** and select REPORT.
See "Choosing an Operation" on page 82.

```
[FUNCTION/REPORT]
1:[CHECK]KEY DATA ▼
→ page 84
```

- ② Use **▼** and **▲** to display the desired item.

```
[FUNCTION/REPORT] ▲
2:[SETUP]KEY DATA ▼
→ page 96
```

You can also type the number for the operation (1 for CHECK, 2 for SETUP, etc.) to scan faster.

- ③ Press **RETURN** when the cursor is located on the desired function.

```
[FUNCTION/REPORT] ▲
3:TEL No. ▼
→ page 99
```

```
[FUNCTION/REPORT] ▲
4:NAME/ADDRESS
→ page 100
```

6

Printing and Other Functions

Complete Transaction Summary

This function is used to print a report including all payments and deposits in a date range. An example is shown on page 85. You will be asked to enter the following:

- DATEa range of dates

① Select CHECK.
Refer to "Printing Reports" on page 83.

```
[REPORT]
1:ALL ▾
```

② Press **RETURN** when ALL is selected.

```
[ALL/DATE]:
mm/dd/yy ~ mm/dd/yy
```

③ Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

```
[REPORT/ALL]
REPO.FORMS IN?(Y/N)
```

The preset range is the entire date range of your payments/deposits. Pressing **RETURN** on one of the dates without retyping will enter that date.

④ If there are report forms in the cassette, type Y and press **RETURN** to start printing.

```
PRINTING ...
[PRINT]KEY->STOP
```

If there are no report forms in the cassette, insert some, type Y, and press **RETURN**.
Type N and press **RETURN** to cancel.

```
[REPORT]
# :ALL ▾
```

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

⑤ To interrupt printing, press **PRINT**.

```
PRINTING ...
STOP PRINTING?(Y/N)
```

Press **RETURN** to resume printing, or type Y and press **RETURN** to cancel printing. When you stop printing, the report form is ejected and the function is cancelled.

⑥ If the cassette becomes empty during printing, this message will appear.

```
= CASSETTE EMPTY! =
  INSERT FORMS
```

Insert report forms in the cassette and press any key to move to the next screen.

```
#02/03
CONTINUE?(Y/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step ① above.

ALL Report (example)

| No. | /DATE | /PAYEE | /PAID AMOUNT | /RECON | /DEPOSIT | /BALANCE |
|----------------------------|----------|---------------|--------------|--------|-------------|-------------|
| * DATE : 04/01/96 09/30/96 | | | | | | |
| 10/10/96 (PAGE 01/03) | | | | | | |
| | 04/01/96 | | | * | \$99,999.00 | \$99,999.00 |
| 10000 | 04/01/96 | JOHN ADAMS | \$3,000.00 | | | \$96,999.00 |
| 10001 | 04/01/96 | NANCY CARTER | \$3,001.00 | * | | \$93,998.00 |
| 10002 | 04/02/96 | LISA DAVIS | \$3,011.00 | * | | \$90,987.00 |
| 10003 | 04/02/96 | WILLIAM ESTER | \$3,111.00 | * | | \$87,876.00 |
| 10004 | 04/03/96 | -- VOID -- | \$3,002.00 | * | | \$87,876.00 |

Annotations: Date range (04/01/96 09/30/96), Date of the report (10/10/96), Page number (PAGE 01/03), Data is sorted by date (04/01/96), Voided check (VOID), Reconciled transaction (*).

Check History

This function is used to print a report including only payment by check. An example is shown on page 90. You can search by either one of the following criteria:

- PAYEE.....the beneficiary of the check
- DATEa range of dates
- CATEGORYthe category of the goods or services purchased
- CHECK No.a range of check numbers
- AMOUNTa range of amounts
- VOIDwhether the check has been voided
- RECON.....whether the check has been reconciled
- TAX RELATEDwhether the check is tax related

- 1 Select CHECK.
Refer to "Printing Reports" on page 83.
- 2 Press **▼** once to display PAYMENT and press **RETURN**.
- 3 Press **RETURN** to select payment by check.

[REPORT]
1:ALL ▼

[REPORT(PAYMENT)]
1:CHECK ▼

[REPORT(CHECK)]
1:PAYEE ▼

6

Printing and Other Functions

- 4 Use and to display the desired item.
 You can also type the number for the operation (1 for PAYEE, 2 for DATE, etc.) to scan faster.

[REPORT(CHECK)] ▲
 7:RECON ▼

[REPORT(CHECK)] ▲
 8:TAX RELATED ▼

[REPORT(CHECK)] ▲
 2:DATE ▼

[REPORT(CHECK)] ▲
 3:CATEGORY ▼

[REPORT(CHECK)] ▲
 4:CHECK No. ▼

[REPORT(CHECK)] ▲
 5:AMOUNT ▼

[REPORT(CHECK)] ▲
 6:VOID ▼

- 5 To search by payees, press when the cursor is on PAYEE.
 Use and to display the desired payee name. You can also type the first letter of the payee name to scan faster.

[CK/PAYEE]: ▲▼
 ABC SHOP

[CK/PAYEE]: ▲▼
 DEF MART

- 6 Press to confirm the payee name.
- 7 Type a start date and press . Type an end date and press .

[CK/DATE]:
 mm/dd/yy ~ mm/dd/yy

[REPORT(CHECK)]
 REPO. FORMS IN?(Y/N)

The above display allows you to check whether or not there is paper in the cassette and to start printing. Skip to step 27.

- 8 To search by dates, proceed as in steps 4 and 5, but press when the cursor is on DATE.
- 9 Type a start date and press . Type an end date and press .

[CK/DATE]:
 mm/dd/yy ~ mm/dd/yy

[REPORT(CHECK)]
 REPO. FORMS IN?(Y/N)

The preset range is the entire date range of your checks. Pressing **RETURN** on one of the dates without retyping will enter that date.

If you do not change the preset range, any check will match the criteria.

The above display allows you to check whether or not there is paper in the cassette and to start printing. Skip to step 27.

- 10 To search by categories, proceed as in steps 4 and 5, but press **RETURN** when the cursor is on CATEGORY.

```
[CK/CATEGORY]:  ▲▼
                AUTO(FUEL)
```

Use **▼** and **▲** to display the desired category. You can also type the first letter of the category to scan faster.

```
[CK/CATEGORY]:  ▲▼
                AUTO (LOAN)
```

- 11 Press **RETURN** to confirm the category.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 12 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

```
[REPORT(CHECK)]
REPO.FORMS IN?(Y/N)
```

The above display allows you to check whether or not there is paper in the cassette and to start printing. Skip to step 27.

- 13 To search by check numbers, proceed as in steps 4 and 5, but press **RETURN** when the cursor is on CHECK No.

```
[CK/CHECK No.]:
#nnnnn~ #nnnnn
```

- 14 Type a start number and press **RETURN**.
Type an end number and press **RETURN**.

```
[REPORT(CHECK)]
REPO.FORMS IN?(Y/N)
```

The preset range is the entire range of your check numbers. Pressing **RETURN** on one of the numbers without retyping will enter that number.

If you do not change the preset range, any check will match the criteria.

The above display allows you to check whether or not there is paper in the cassette and to start printing. Skip to step 27.

- 15 To search by amounts, proceed as in steps 4 and 5, but press **RETURN** when the cursor is on AMOUNT.

```
[CK/AMOUNT]:
$X,XXX.XX~XX,XXX.XX
```

- 16 Type a start amount and press **RETURN**.
Type an end amount and press **RETURN**.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

The preset range is the entire range of your check amounts. Pressing **RETURN** on one of the amounts without retyping will enter that number.

If you do not change the preset range, any check will match the criteria.

- 17 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

```
[REPORT(CHECK)]
REPO. FORMS IN?(Y/N)
```

The above display allows you to check whether or not there is paper in the cassette and to start printing. Skip to step 27.

- 18 To search for voided/not voided checks, proceed as in steps 4 and 5, but press **RETURN** when the cursor is on VOID.

```
[CK/VOID]:
VOIDED /UNVOIDED
```

- 19 Use **←** and **→** to select VOIDED or UNVOIDED and press **RETURN**.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 20 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

```
[REPORT(CHECK)]
REPO. FORMS IN?(Y/N)
```

The above display allows you to check whether or not there is paper in the cassette and to start printing. Skip to step 27.

- 21 To search for reconciled/not reconciled checks, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on RECON.

```
[CK/RECON]:
RECON /NOT RECON
```

- 22 Use **←** and **→** to select RECON or NOT RECON and press **RETURN**.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 23 Type a start date and press **RETURN**.
Type an end date and press **RETURN**.

```
[REPORT(CHECK)]
REPO. FORMS IN?(Y/N)
```

The above display allows you to check whether or not there is paper in the cassette and to start printing. Skip to step 27.

- 24 To search for tax related/not tax related checks, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on **TAX RELATED**.

```
[CK/TAX RELATED]: ▸
                Y/N
```

- 25 Use **◀** and **▶** to select Y or N and press **RETURN**.

```
[CK/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 26 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

```
[REPORT(CHECK)]
REPO.FORMS IN?(Y/N)
```

- 27 If there are report forms in the cassette, type Y and press **RETURN** to start printing. If there are no report forms in the cassette, insert some, type Y, and press **RETURN**.

```
PRINTING ...
[PRINT]KEY->STOP
```

Type N and press **RETURN** to cancel.

```
[REPORT(CHECK)]
1:PAYEE ▾
```

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

- 28 To interrupt printing, press **PRINT**.

```
PRINTING ...
STOP PRINTING?(Y/N)
```

Press **RETURN** to resume printing, or type Y and press **RETURN** to cancel printing. When you stop printing, the report form is ejected and the function is cancelled.

- 29 If the cassette becomes empty during printing, the message will appear. Insert report forms in the cassette and press any key to move to the next screen.

```
= CASSETTE EMPTY! =
  INSERT FORMS
```

```
#02/03
CONTINUE?(Y/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step 3 on page 85.

CHECK Report (example)

Check No. range
(When searching by check number only)

Date of the report

Page number

| No. | DATE | AMOUNT | PAYEE | CATEGORY | RECON | TAX |
|-------------------------------|----------|------------|------------------|-------------|-------|-----|
| * CHECK No. : #10000 - #10005 | | | | | | |
| 10000 | 04/01/96 | \$3,000.00 | JOHN ADAMS | AUTO (FUEL) | | N |
| 10001 | 04/01/96 | \$3,001.00 | NANCY CARTER | AUTO (LOAN) | * | Y |
| 10002 | 04/01/96 | \$3,011.00 | LISA DAVIS | BANK CHARGE | * | N |
| 10003 | 04/02/96 | \$3,111.00 | WILLIAM ESTER | CABLE TV | * | Y |
| 10004 | 04/03/96 | \$3,002.00 | -- VOID -- | BONUS | | Y |
| 10005 | 04/02/96 | \$3,002.00 | BARBARA FRANKLIN | CHARITY | * | Y |

10/10/96 (PAGE 01/03)

Data is sorted by date

Voided check

Reconciled check

Tax related check

6

Other Payments

Follow the steps below for printing a report for payments other than payments by check (ATM, BANK FEE, WITHDRAW, OTHERS). An example is shown on page 93. Since the procedure is basically the same for all these types of payment, only the ATM payment will be explained in detail.

You can search by either one of the following criteria:

- DATEa range of dates
- AMOUNTa range of amounts
- RECON.....whether the payment has been reconciled

- 1 Select CHECK.
Refer to "Printing Reports" on page 83.

| |
|---------|
| [RFPRT] |
| 1:ALL |

- 2 Press once to display PAYMENT and press .

| |
|-------------------|
| [REPORT(PAYMENT)] |
| 1:CHECK |

- 3 Use and to display ATM and press .

| |
|---------------|
| [REPORT(ATM)] |
| 1:DATE |

- 4 Use  and  to display the desired item.



```
[REPORT(ATM)]
2.AMOUNT
```

You can also type the number for the operation (1 for DATE, 2 for AMOUNT, etc.) to scan faster.


```
[REPORT(ATM)]
3.RECON
```

- 5 To search by dates, press  when the cursor is on DATE.

```
[ATM/DATE]:
mm/dd/yy ~ mm/dd/yy
```


- 6 Type a start date and press .
Type an end date and press .

```
[REPORT/ATM]
REPO.FORMS IN?(Y/N)
```



The preset range is the entire date range of your ATM payments. Pressing  on one of the dates without retyping will enter that date.

If you do not change the preset range, any ATM payment will match the criteria.


The above display allows you to check whether or not there is paper in the cassette and to start printing. See 13.

- 7 To search by amounts, proceed as in steps 4 and 5, but press  when the cursor is on AMOUNT.



```
[ATM/AMOUNT]:
$xx,xxx.xx~xx,xxx.xx
```

- 8 Type a start amount and press .
Type an end amount and press .

```
[ATM/DATE]:
mm/dd/yy ~ mm/dd/yy
```

The preset range is the entire range of your ATM amounts. Pressing  on one of the amounts without retyping will enter that number.

If you do not change the preset range, any ATM payment will match the criteria.

- 9 Type a start date and press .
Type an end date and press .

```
[REPORT(ATM)]
REPO.FORMS IN?(Y/N)
```

The above display allows you to check whether or not there is paper in the cassette and to start printing. See 13.

- 10 To search for reconciled/not reconciled ATM payments, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on RECON.

```
[ATM/RECON]:
  RECON /NOT RECON
```

- 11 Use **←** and **→** to select RECON or NOT RECON and press **RETURN**.

```
[ATM/DATE]:
  mm/dd/yy ~ mm/dd/yy
```

- 12 Type a start date and press **RETURN**. Type an end date and press **RETURN**.

```
[REPORT/ATM]
  REPO.FORMS IN?(Y/N)
```

- 13 If there are report forms in the cassette, type Y and press **RETURN** to start printing. If there are no report forms in the cassette, insert some, type Y, and press **RETURN**.

```
PRINTING ...
  [PRINT]KEY->STOP
```

Type N and press **RETURN** to cancel.

```
[REPORT(ATM)]
  1:DATE ▼
```

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

- 14 To interrupt printing, press **PRINT**.

```
PRINTING ...
  STOP PRINTING?(Y/N)
```

Press **RETURN** to resume printing, or type Y and press **RETURN** to cancel printing. When you stop printing, the report form is ejected and the function is cancelled.

- 15 If the cassette becomes empty during printing, this message will appear. Insert report forms in the cassette and press any key to move to the next screen.

```
= CASSETTE EMPTY! =
  INSERT FORMS
```

```
#02/03
  CONTINUE? (Y/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step 3 on page 90.

ATM Report (example)

10/10/96 (PAGE 01/03)

* DATE : 04/01/96 - 09/30/96

| DATE | AMOUNT | PAYMENT | RECON |
|----------|----------|---------|-------|
| 04/01/96 | \$100.00 | ATM | * |
| 04/01/96 | \$90.00 | ATM | |
| 04/01/96 | \$80.00 | ATM | * |
| 04/02/96 | \$150.00 | ATM | * |
| 04/02/96 | \$100.00 | ATM | |
| 04/03/96 | \$100.00 | ATM | |

Deposit History



Follow the steps below for printing a report for deposits. An example of a report is shown on page 95.

You can search by either one of the following criteria:

- DATEa range of dates
- AMOUNTa range of amounts
- RECON.....whether the payment has been reconciled

1 Select CHECK.
Refer to "Printing Reports" on page 83.

[REPORT]
1:ALL

2 Press  twice to display DEPOSIT and press .


[REPORT(DEPOSIT)]
1:DATE

3 Use  and  to display the desired item.

[REPORT(DEPOSIT)]
2:AMOUNT

You can also type the number for the operation (1 for DATE, 2 for AMOUNT, etc.) to scan faster.

[REPORT(DEPOSIT)]
3:RECON

4 To search by dates, press  when the cursor is on DATE.

[DEPOSIT/DATE]:
mm/dd/yy ~ mm/dd/yy

- 5 Type a start date and press **RETURN**.
 Type an end date and press **RETURN**.

```
[REPORT/DEPOSIT]
REPO.FORMS IN?(Y/N)
```

The preset range is the entire date range of your deposits. Pressing **RETURN** on one of the dates without retyping will enter that date.

If you do not change the preset range, any deposit will match the criteria.

The above display allows you to check whether or not there is paper in the cassette and to start printing. See 12.

- 6 To search by amounts, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on AMOUNT.

```
[DEPOSIT/AMOUNT]:
$X,XXX.XX~XX,XXX.XX
```

- 7 Type a start amount and press **RETURN**.
 Type an end amount and press **RETURN**.

```
[DEPOSIT/DATE]:
mm/dd/yy ~ mm/dd/yy
```

The preset range is the entire range of your deposit amounts. Pressing **RETURN** on one of the amounts without retyping will enter that number.

If you do not change the preset range, any deposit will match the criteria.

- 8 Type a start date and press **RETURN**.
 Type an end date and press **RETURN**.

```
[REPORT/DEPOSIT]
REPO.FORMS IN?(Y/N)
```

The above display allows you to check whether or not there is paper in the cassette and to start printing. See 12.

- 9 To search for reconciled/not reconciled deposits, proceed as in steps 3 and 4, but press **RETURN** when the cursor is on RECON.

```
[DEPOSIT/RECON]:
RECON /NOT RECON
```

- 10 Use **←** and **→** to select RECON or NOT RECON and press **RETURN**.

```
[DEPOSIT/DATE]:
mm/dd/yy ~ mm/dd/yy
```

- 11 Type a start date and press **RETURN**.
 Type an end date and press **RETURN**.

```
[REPORT/DEPOSIT]
REPO.FORMS IN?(Y/N)
```

- 12 If there are report forms in the cassette, type Y and press **RETURN** to start printing. If there are no report forms in the cassette, insert some, type Y, and press **RETURN**. Type N and press **RETURN** to cancel.

```
PRINTING ...
[PRINT]KEY->STOP
```

```
[REPORT(DEPOSIT)]
1:DATE
```

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

- 13 To interrupt printing, press **PRINT**.

```
PRINTING ...
STOP PRINTING?(Y/N)
```

Press **RETURN** to resume printing, or type Y and press **RETURN** to cancel printing. When you stop printing, the report form is ejected and the function is cancelled.

- 14 If the cassette becomes empty during printing, this message will appear. Insert paper in the cassette and press any key to move to the next screen.

```
= CASSETTE EMPTY! =
INSERT FORMS
```

```
#02/03
CONTINUE? (Y/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step 2 on page 93.

DEPOSIT Report (example)

| DATE | AMOUNT | RECON |
|----------|----------|-------|
| 04/01/96 | \$90.00 | |
| 04/01/96 | \$120.00 | |
| 05/10/96 | \$90.00 | * |
| 06/10/96 | \$25.00 | * |
| 06/25/96 | \$105.00 | |
| 07/01/96 | \$90.00 | * |

* DATE : 04/01/96 - 09/30/96

10/10/96 (PAGE 01/03)

Deposit is sorted by date

Reconciled transaction

Setup Report

This function is used to print a report listing all payments and deposits in a date range. An example is shown on page 97. You will be asked to enter the following:

- DATEa range of dates

- ① **Select SETUP.**
Refer to "Printing Reports" on page 83.

```
[SETUP KEY DATA]
REPO.FORMS IN?(Y/N)
```

- ② **If there are report forms in the cassette, type Y and press RETURN to start printing. If there are no report forms in the cassette, insert some, type Y, and press RETURN. Type N and press RETURN to cancel.**

```
PRINTING ...
[PRINT]KEY->STOP
```

```
[FUNCTION/REPORT] ▲
2:[SETUP]KEY DATA ▼
```

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

- ③ **To interrupt printing, press PRINT.**

```
PRINTING ...
STOP PRINTING?(Y/N)
```

6

Press RETURN to resume printing, or type Y and press RETURN to cancel printing. When you stop printing, the report form is ejected and the function is cancelled.

- ④ **If the cassette becomes empty during printing, this message will appear. Insert report forms in the cassette and press any key to move to the next screen.**

```
= CASSETTE EMPTY! =
INSERT FORMS
```

```
#02/03
CONTINUE?(Y/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step ② above.

SETUP Report (example – page 1)

```
* ACCOUNT [I]                                10/10/96    (PAGE 01/04)

  > NAME           : ABC BANK
  > RUNNING BALANCE : $49,909.19
  > RECONCILED BALANCE : $18,467.72

* CHECK PRINT POSITION

  > DATE           : X = 086, Y = 025
  > PAYEE          : X = 030, Y = 020
  > AMOUNT         : X = 109, Y = 020
  > SPELL OUT      : X = 015, Y = 015
  > MEMO           : X = 080, Y = 000

* PRINT FORMAT
  > CONTRAST       NORMAL
  > FONT           STANDARD
```

SETUP Report (example – page 2)

```
* PAYEE LIST OF ACCOUNT [I]  ( 1 / 2 )      10/10/96    (PAGE 02/04)

#00 JOHN ADAMS           #15 BRIAN JAMES
#01 THOMAS BRADLEES     #16 JAMES JOHNSON
#02 JOSEPH BROWN        #17 ALBERT JONES
#03 NANCY CARTER        #18 GARY KRAMER
#04 GEORGE COTY         #19 WALTER LARSON
#05 LISA DAVIS          #20 SUSAN LOMBARDO
#06 LAURA DRAKE        #21 FRANK MARTIN
#07 WILLIAM ESTER       #22 JACK MENDILLO
#08 BARBARA FRANKLIN    #23 EDWARD NAMINSKI
#09 DORIS FARMER        #24 SEAN O'CONNOR
#10 RICHARD GRANT       #25 WAYNE O'HARA
#11 VICTORIA GREER      #26 DAVID PLOTNICK
#12 JOHN HADLEY         #27 LORI QUAILS
#13 MICHAEL HOWSER      #28 KIMBERLY SMITH
#14 JEAN ISLANDER       #29 JOYCE TRAINER
```

SETUP Report (example – page 3)

| * PAYEE LIST OF ACCOUNT [1] (2 / 2) | | 10/10/96 | (PAGE 03/04) |
|---------------------------------------|------------------|----------|-----------------|
| #30 | JUDITH YATES | #45 | JEAN ISLANDER |
| #31 | JOHN ADAMS | #46 | BRIAN JAMES |
| #32 | THOMAS BRADLEES | #47 | JAMES JOHNSON |
| #33 | JOSEPH BROWN | #48 | AIRFRT JONES |
| #34 | NANCY CARTER | #49 | GARY KRAMER |
| #35 | GEORGE COTY | #50 | WALTER LARSON |
| #36 | LISA DAVIS | #51 | SUSAN LOMBARDO |
| #37 | LAURA DRAKE | #52 | FRANK MARTIN |
| #38 | WILLIAM ESTER | #53 | JACK MENDILLO |
| #39 | BARBARA FRANKLIN | #54 | EDWARD NAMINSKI |
| #40 | DORIS FARMER | | |
| #41 | RICHARD GRANT | | |
| #42 | VICTORIA GREER | | |
| #43 | JOHN HADLEY | | |
| #44 | MITHAFL HOWSER | | |

SETUP Report (example – page 4)

| * ADDITIONAL CATEGORY | | 10/10/96 | (PAGE 04/04) |
|-----------------------|----------------|----------|--------------|
| #01 | PERS. EXPENSES | #16 | |
| #02 | MARRIAGE BILLS | #17 | |
| #03 | RENOVATION | #18 | |
| #04 | KIDS CAMP | #19 | |
| #05 | SAVINGS BONDS | #20 | |
| #06 | | | |
| #07 | | | |
| #08 | | | |
| #09 | | | |
| #10 | | | |
| #11 | | | |
| #12 | | | |
| #13 | | | |
| #14 | | | |

6

Printing and Other Functions

Payee Telephone Numbers

This function is used to print a list of payee names and telephone numbers. Payee names entered with one-shot checks will not be printed.

- ① **Select TEL No.**
Refer to "Printing Reports" on page 83.

```
[TEL No.]
REPO.FORMS IN?(Y/N)
```

- ② **If there are report forms in the cassette, type Y and press **RETURN** to start printing. If there are no report forms in the cassette, insert some, type Y, and press **RETURN**. Type N and press **RETURN** to cancel.**

```
PRINTING ...
[PRINT]KFY->STOP
```

```
[FUNCTION/REPORT] ▲
3:TEL No. ▼
```

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

- ③ **To interrupt printing, press **PRINT**.**

```
PRINTING ...
STOP PRINTING?(Y/N)
```

Press **RETURN** to resume printing, or type Y and press **RETURN** to cancel printing. When you stop printing, the report form is ejected and the function is cancelled.

- ④ **If the cassette becomes empty during printing, this message will appear. Insert report forms in the cassette and press any key to move to the next screen.**

```
= CASSETTE EMPTY! =
INSERT FORMS
```

```
#02/03
CONTINUE?(Y/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step ② above.

6

Printing and Other Functions

TEL No. Report (example – page 1)

| * PAYEE TEL No. LIST OF ACCOUNT [I] | | |
|-------------------------------------|-----------------|--------------|
| No. | PAYEE NAME | TEL No. |
| 00 | JOHN ADAMS | 111-555-3200 |
| 01 | THOMAS BRADLEES | 222-555-3201 |
| 02 | JOSEPH BROWN | 333-555-3202 |
| 03 | NANCY CARTER | 444-555-3203 |

Payee Names and Addresses

This function is used to print a list of payee names and addresses.

Payee names entered with one-shot checks will not be printed.

- ① **Select NAME/ADDRESS.**
Refer to "Printing Reports" on page 83.

```
[NAME ADDRESS]
REPO. FORMS IN?(Y/N)
```

- ② **If there are report forms in the cassette, type Y and press **RETURN** to start printing. If there are no report forms in the cassette, insert some, type Y, and press **RETURN**. Type N and press **RETURN** to cancel.**

```
PRINTING ...
[PRINT]KEY->STOP
```

```
[FUNCTION/REPORT] ▲
4:NAME/ADDRESS
```

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

- ③ **To interrupt printing, press **PRINT**.**

```
PRINTING ...
STOP PRINTING?(Y/N)
```

*Press **RETURN** to resume printing, or type Y and press **RETURN** to cancel printing. When you stop printing, the report form is ejected and the function is cancelled.*

- ④ **If the cassette becomes empty during printing, this message will appear. Insert report forms in the cassette and press any key to move to the next screen.**

```
= CASSETTE EMPTY! =
INSERT FORMS
```

```
#02/03
CONTINUE?(N/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step ② above.

NAME/ADDRESS Report (example – page 1)

| No. | * ACCOUNT LIJ | | 10/10/96 | (PAGE 01/05) |
|-----|---|-----------------------|----------------------------|--------------|
| 00 | JOHN ADAMS 34 VALLEY DRIVE MAINTOWN | PRESIDENT N.J. | ADAMS INC. 01001 | |
| 01 | THOMAS BRADLEES 212 MEADOWS LANE SOMETOWN | MANAGER N.Y. | BRADIFSS INC. 02002 | |
| 02 | JOSEPH BROWN 600 PARK AVENUE NEWTOWN | COORDINATOR TX | BROWN CORPORATION 03003 | |
| 03 | NANCY CARTER 127 MOUNTAIN AVENUE ANYCITY | ATTORNEY AT LAW CA | CARTER & CARTER 04004 | |

Printing Mailing Labels

The LABELS function allows you to use the payee data to print mailing labels automatically. An example is shown on page 103.


Feeding Mailing (Address) Labels

Mailing labels cannot be stacked into the paper cassette. You must feed them manually.

⚠ Caution:

Do not strip off the back of the labels before feeding. The label would stick inside the printer unit and the machine might need to be serviced.

Use only the recommended labels (CW-AL20).

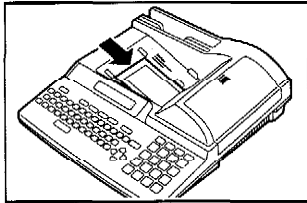

Remove the paper cassette and insert the label following the directions written on the machine itself concerning feeding mailing labels. These instructions read:

CAUTION

When printing an address label, insert the label sheet until you feel the resistance by the roller.

To Print:

- 1 Press **FUNCTION** and select LABELS. See "Choosing an Operation" on page 82.
- 2 Use **▼** and **▲** to display the desired payee name.
You can also type the first letter of a name to scan faster.

[LABELS/PAYEE]: ▼
ABC SHOP

[LABELS/PAYEE]: ▲▼
DEF MART

[LABELS/PAYEE]: ▲▼
GHI STORE

3 To select a payee for printing, press **SPACE**. An asterisk will appear. To cancel a selection, press **SPACE** again to remove the asterisk.

```
[LABELS/PAYEE]: * ▲▼
                GHI STORE
```

4 Repeat steps 2 and 3 to mark all the payees you want to print and press **RETURN**.

```
MAILING LABEL
                SET? (Y/N)
```

5 If a mailing label is set up, press **RETURN** to start printing.

```
PRINTING ...
[PRINT]KEY->STOP
```

Otherwise, load a mailing label, and press

RETURN.

```
[FUNCTION]
2:LABELS      ▲
                ▼
```

Type N and press **RETURN** to cancel.

See next page for more details about the format of the mailing labels.

The first display appears when printing starts.

The second display appears when you cancel or after printing is completed.

6 To interrupt printing, press **PRINT**.

```
PRINTING ...
STOP PRINTING?(Y/N)
```

Press **RETURN** to resume printing, or type Y and press **RETURN** to cancel printing. When you stop printing, the mailing label is ejected and the function is cancelled.

7 When there is no label paper, this message appears.

```
-PAPER EMPTY!-
  INSERT LABEL
```


Manually feed a label and press any key to move to the next screen (the next screen will also appear after 5 seconds if you don't press any key).

```
CONTINUE? (Y/N)
```

The second display appears automatically if no key is pressed for 5 seconds.

If you type N, you will be returned to step 5 above.

Labels are available in the following format:

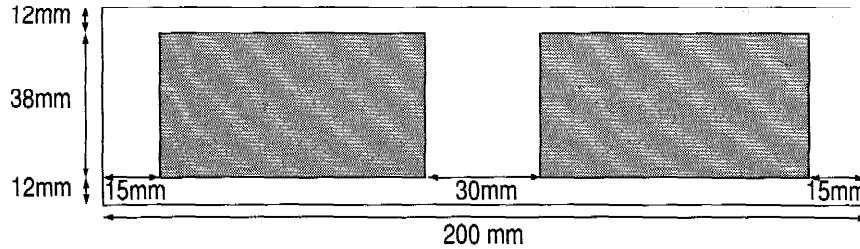

The following items can be printed (See "Entering Your Payees" on page 30.):

NAME
TITLE
COMPANY
ADDRESS1
ADDRESS2
CITY
STATE
ZIP
(TEL No. cannot be printed)

6

Here are two examples of address layouts:

```
JOHN ADAMS  
A34 VALLEY DRIVE  
MAINTOWN, N.J. 01001
```

Blank fields (TITLE, COMPANY, ADDRESS2) are skipped.

```
JOHN ADAMS  
PRESIDENT  
JO. Corp.  
200 COTTONTAIL  
LONGNAMETOWN,  
N.J. 01001
```

When the length of CITY + STATE + ZIP exceeds 20 characters, the data is printed on two lines.

103

Financial Calculations(CW-1000 only)

Monthly Loan Payment Amounts

The AMORTIZE function calculates the monthly payment of a loan. An example is shown on page 105.

You will have to enter the following data:

- AMOUNTthe amount of the loan
- INTEREST RATEthe interest rate
- # OF YEARSthe number of year
- # OF PERIODSthe number of periods

6

Printing and Other Functions

- 1 Press **FUNCTION** and select **AMORTIZE**.

[AMORTIZE] AMOUNT:
\$

See "Choosing an Operation" on page 82.
- 2 Type in the amount and press **RETURN**.

[AMORTIZE]
INTEREST RATE: 0.00%
- 3 Type in the interest rate in percents and press **RETURN**.

[AMORTIZE]
OF YEARS: 0
- 4 Type in the number of years and press **RETURN**. The display shows the number of periods (payments).

[AMORTIZE]
OF PERIODS: xxx
- 5 If necessary, type in the number of periods and press **RETURN**.

[AMORTIZE]
=\$xx,xxx.xx

The above display show the amount of the monthly repayments.
- 6 Press **RETURN**.

PRINT OUT?
(Y/N)
- 7 Type Y and press **RETURN** to start printing or type N and press **RETURN** to cancel.

Monthly Loan Payment Amounts (example)

| [AMORTIZATION FUNCTION] | | |
|--------------------------------------|---|--------------|
| * Amount to be Financed | : | \$106,000.00 |
| * Annual Interest Rate | : | 9.00 (%) |
| * Number of Financing periods (Year) | : | 30 |
| * Total Number of Periods (month) | : | 360 |
| ----- | | |
| * Monthly Payment | : | \$852.89 |

Investment Interest Simulation

The INVEST function calculates the result of an investment. An example is shown on page 106.

You will have to enter the following data:

- ANNUAL/MONTHLY the kind of interest compounding
- AMOUNT the base amount invested
- INTEREST RATE the interest rate
- # OF YEARS (MONTHS) the number of years or months

1 Press **FUNCTION** and select INVEST.
See "Choosing an Operation" on page 82.

[INVEST]
ANNUAL/MONTHLY

2 Use **◀** and **▶** to select ANNUAL or MONTHLY.

[INVEST] AMOUNT:
\$

3 Type the amount and press **RETURN**.

[INVEST]
INTEREST RATE: 0.00%

4 Type in the interest rate in percents and press **RETURN**.

[INVEST]
OF YEARS: 0

[INVEST]
OF MONTHS: 0

The first display appears when you select ANNUAL in step 2.

The second display appears when you select MONTHLY in step 2.

- 5 Type in the number of years or months and press **RETURN**.

```
[INVEST]
=$XX,XXX.XX
```

The above display show the total amount after the specified period.

- 6 Press **RETURN**.

```
PRINT OUT?
(Y/N)
```

- 7 Type Y and press **RETURN** to start printing or type N and press **RETURN** to cancel.

Investment (example – annual compounding)

```
[ INVEST FUNCTION ]
ANNUAL COMPOUNDING OF INTEREST
* Amount to invest :    $1,000.00
* Interest Rate   :          9.00 (%)
* Number of years :          3
-----
                        $1,295.02
```

Investment (example – monthly compounding)

```
[ INVEST FUNCTION ]
MONTHLY COMPOUNDING OF INTEREST
* Amount to invest :    $1,000.00
* Interest Rate   :          9.00 (%)
* Number of months :          36
-----
                        $1,308.64
```


Chapter 7

Using the Calculator

7

Using the Calculator

107

Turning the Calculator On/Off

- 1 Press  to start the calculator mode.

0.

The calculator can be started without entering a password, at any time, except when the CheckWriter is waiting for input.

- 2 Press any function key to switch the calculator off.

The display in which you turned the calculator on will reappear.

If you come back to the calculator mode later, the display will show the same value as when you exited the calculator.

Operating the Calculator

- 1 Press   .

123.

- 2 Press .

123. +

- 3 Press   .

456. =

- 4 Press .

579.

Try again, pressing ,  or  in step 2.

If you make a mistake, press  to clear the display and the memory.

About Calculator Precision

- 1 Press .

2.

- 2 Press .

2. +

3 Press **3**.

3. +

4 Press **=**.

0.666666666

A maximum of 10 digits can be displayed. In the above example, the value $1/3$ is truncated at the 9th decimal digit (1 digit for the integer part + 9 decimal digits = a total of 10 digits).

Display Overflow

1 Press **9** 10 times.

9,999,999,999.

2 Press **+**.

9,999,999,999. +

3 Press **1**.

1. +

4 Press **=**.

-E-

A maximum of 10 digits can be displayed. The result of the above operation is 10,000,000,000 (11 digits). This number is too big, and the error symbol E appears.

Additive Memory

Each time you press **M+**, the value currently displayed is added to the contents of the memory.

1 Press **CM** to clear the memory.

0.

2 Press **1** **2** **3**.

123.

3 Press **x**.

123. x

7

Using the Calculator

4 Press **4**.

4. ×

5 Press **92**.

492.

6 Press **M+**.

[MEM]
492.

7 Press **4** **5** **6**.

[MEM]
456.

8 Press **×**.

[MEM]
456. ×

9 Press **2**.

[MEM]
2. ×

10 Press **=**.

[MEM]
912.

11 Press **MC**.

[MEM]
912.

12 Press **CE**.

[MEM]
1,404.

*A value remains in the memory until you press **MC**, **CE**, or turn the power off. If you store a value into the memory and exit calculator mode, then come back to the calculator mode later, the value will still be in the memory.*

Appendix



Appendix

Error Messages

= MEMORY FULL =
PRESS ANY KEY

The area of the memory where your transaction records are kept is full.

Press any key to exit and delete some data to make room in the memory.

-- WARNING !! --
BATTERY NEAR EMPTY

The lithium battery is almost empty.

The machine can still be used and the data is still protected when the power is switched off.

Change the battery as soon as possible. Battery type: CR2032

-- ALARM !! --
BATTERY EMPTY

The lithium battery is empty.

The machine can still be used, but the data will be lost if you switch the power off.

Keep the power on (disable the auto power off function) and change the battery as soon as possible. Battery type: CR2032

PLEASE
SYSTEM RESET

This message appears when the machine is switched on the first time, or when the unit has been left without a lithium battery for more than 10 minutes.

Reset the system (this will delete all data.) See "Resetting the System" on page 44.

JAM ERROR !!
PRESS ANY KEY

Paper is jammed.

Proceed as explained on page 115.

POWER ERROR !!
(E-20)

Power failure or problems with the AC adapter.

Check the power supply connections. Turn the power off, then on again. If the problem cannot be corrected, consult with your dealer.

ERROR !!
(E-xx)

If this message appears, or if the program stalls and two or three LED are on simultaneously, switch the power off and on again.

If the message stays on, consult with your dealer.

#XXXXXX
PRINT AREA OVER

Data cannot fit in the print area.

Press any key to move to the next screen.

If you are printing checks using **PRINT :**
The Check No. range input screen appears.

If you are printing checks using **CHECK :**
The Check No. input screen appears.

If you are printing a report:
The REPORT FORM IN? screen appears.

If you are printing a label:
The PRINT OUT? screen appears.

When one of these screens appears, make sure that the check, report form, or label is not smaller than the specified size. (In particular, when printing checks, make sure you did not load personal checks instead of business checks.) If the size is incorrect, load paper of the correct size and try to print again.

If you are printing checks and the size of the loaded checks is correct, press **CAN/C and go to the SETUP mode to check and adjust the X position of each item, then try to print again.**

#XXXXXX
"DATE" TOO LONG

One of the following messages may appear before printing a check. It means that the printing area for the indicated item is too short.

#XXXXXX
"PAYEE" TOO LONG

Press any key to continue.

If you are printing checks using **PRINT :**
The Check No. range input screen appears.

#XXXXXX
"AMOUNT" TOO LONG

If you are printing checks using **CHECK :**
The Check No. input screen appears.

#XXXXXX
"SPELLOUT" TOO LONG

When one of these screens appears, press **CAN/C and go to the SETUP mode to check and increase the width of the printing area for the item by reducing the value of X. Then try to print again.**

#XXXXXX
"MEMO" TOO LONG




Troubleshooting

Your unit has been precision-manufactured to give you years of trouble-free use. In the rare case that trouble does happen, you will probably be able to find the solution in the table below. If you can not, please do not attempt to repair the machine yourself. Instead, contact your dealer.


NOTE: Make sure to turn the power off before applying any remedy.

| Trouble | Remedy |
|--|--|
| Nothing works after the machine has been switched on. | <ul style="list-style-type: none"> • Check that the power cord is plugged in. • Check that the AC adapter is the correct type. • Check the LCD contrast. See "Adjusting the LCD (display) Contrast" on page 39. |
| Printout is impossible or difficult to read. | <ul style="list-style-type: none"> • Check that the ink cartridge is installed correctly. • Clean the ink cartridge. See "Cleaning the Print Head" on page 116. • Check to see if the ink cartridge is empty (refer to the illustration below). If necessary, change the ink cartridge. |
| White horizontal lines appear in the printed text. | <ul style="list-style-type: none"> • Pull the cartridge release lever toward you and push it in again. • Clean the ink cartridge. See "Cleaning the Print Head" on page 116. |
| Paper jams. | <ul style="list-style-type: none"> • Remove the jammed paper. • Check the amount of paper in the cassette. See "Setting Up Report or Check Paper" on page 15. |
| All seems normal after the machine has been switched on, but the display is difficult to read. | <ul style="list-style-type: none"> • Adjust the LCD contrast. See "Adjusting the LCD (display) Contrast" on page 39. |

Appendix

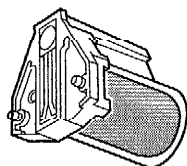


New cartridge

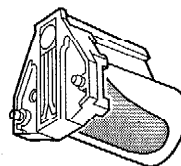

Empty cartridge

Paper Jam


If a paper jam occurs, proceed as follows:

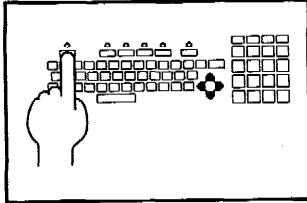

- 1 Switch the power off.




- 2 Remove the paper cassette.

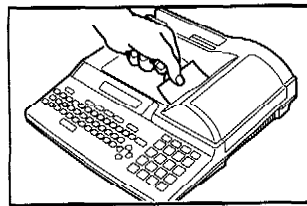


- 3 If the paper end can be seen from the ejection side, switch the power on. If this ejects the paper, skip to step 4; if not, skip to step 5.

If the paper end cannot be seen from the ejection side, pull it out slowly from the cassette side.

Reinstall the cassette and try printing again.

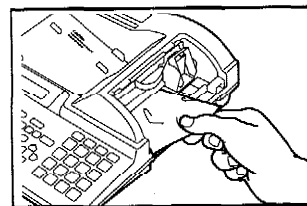

- 4 If the paper is ejected in step 3, switch the power off, remove the ink cartridge, and eliminate any remaining pieces of paper. Reinstall the ink cartridge and cassette and try printing again.

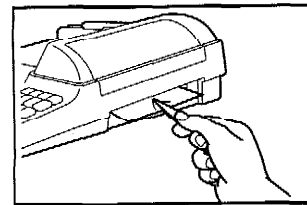


- 5 If the paper is not ejected in step 3, switch the power off and extract the paper little by little using tweezers or another suitable tool. Reinstall the cassette and try printing again.




Periodic Cleaning of Your Machine

Cleaning the Print Head

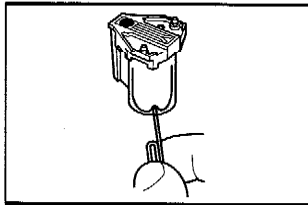


1 To prime the cartridge, push the bladder with a paper clip until ink fully coats the silver plate.

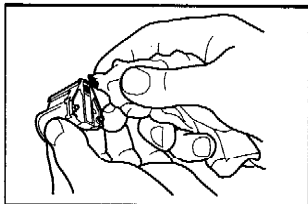

2 If the printout is not neat or is dirty, clean the print head. Remove it and wipe it carefully with a dry tissue.

Cleaning the Platen

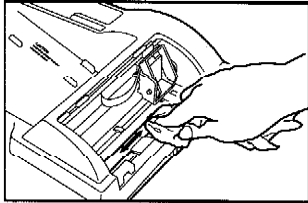

If the platen is stained with ink, wipe the ink off with a soft cloth or tissue paper.

Specifications

| | |
|--|---|
| Display | LCD, 2 rows × 20 characters, 7 (vertical) × 5 (horizontal) pixels Software-adjustable contrast (returns to default when the contrast setup function is activated) |
| Indicators | LED (POWER, CHECK, CALC, SETUP, FUNCTION, PRINT) |
| Keyboard | 69 keys Auto repeat function |
| Printer Print Method Max. number of dots Printing direction Paper Size Print head Print head nozzle pitch Print head capacity Font Types | Built-in ink jet printer Vertical column-type ink jet printing 270 dots/line Bi-directional shortest-distance printing (character printing only) Personal and business size checks, special report paper, and mailing labels Brother IN-60 or Hewlett-Packard Plain paper ink-jet cartridge (51604A) 1/96 inch Approx. 500,000 chr. / cartridge in light print mode Approx. 160,000 chr. / cartridge in normal print mode Standard, italic |
| Paper cassette Paper quality and size Total paper height Paper orientation Scale markings | Use only paper specified on page 118 3 mm max. Printing on side facing up 1/16" |
| Memory ROM RAM | 64 KB 64 KB |
| General AC Adapter Backup battery Weight Dimensions | IN: AC 120 V, 60 Hz OUT: DC 7 V, 1.2 A CW-20 or AD-30 (for auxiliary use) Coin-type lithium primary cell CR2032 Nominal voltage: DC 3V Nominal capacity: 220 mAh Life time: approx. 1 year (depending upon usage and temperature conditions) 3.31 lbs (not including the AC-Adapter) 1.50 kg 260 mm (W) x 270 mm (D) x 90 mm (H) 10.24" (W) x 10.63" (D) x 3.54" (H) |
| Environmental conditions Main unit Print head | Temperature: 10 ~ 35°C Humidity: 10 ~ 80% (with no condensation) Period of warranty (after opening): 6 months at 23°C Period of warranty (closed): 18 months at 23°C Storage in original package: Temperature: -10 ~ 35°C Humidity: 10 ~ 95% (with no condensation) |

Paper Specifications

| | Width | Length | Thickness |
|---------------------------------|---------------------------------|---------------------------------|---|
| Check (cassette feed) | 69.9 ~ 86.4 mm (2.75 ~ 3.4") | 152.4 ~ 219.7 mm (6 ~ 8.65") | 0.09 ~ 0.11 mm |
| Report paper (cassette feed) | 86.4 mm (3.4") | 219.7 mm (8.65") | 0.09 ~ 0.11 mm |
| Label (manual feed) | 62 mm (2.44") | 200 mm (7.9") | 0.14 ~ 0.15 mm (including peel-off backing) |

Checks: you can use personal and business checks.

Report paper: purchase from your dealer (CW-RP25).

Mailing labels: purchase from your dealer (CW-AL20).



Caution:

The following precautions apply to labels purchased from your dealer as well as from other sources:

Curling can result from the characteristics of the paper and handling conditions. Before feeding labels, put a stack of labels approximately 50 mm thick on your desk and check that it lays flat (the gap between any portion of the label and the desk surface should be less than 1 mm). If labels are curled, they must be straightened before feeding.

To avoid damaging the edge of the paper, handle labels in stacks of less than 200 sheets.

Store your labels horizontally, in stacks of less than 1000 sheets, on a flat surface slightly larger than the sheets to prevent curling. Even pressure should be applied to the entire surface, and the storage location should well ventilated and protected from direct sunlight and other sources of heat.

Optional Accessories

Obtain all your accessories from your Brother dealer. Brother cannot be held responsible for troubles caused by the use of unauthorized supplies.

| Stock No. | Description | Quantity/ Package | Price |
|-----------|---|----------------------|---------|
| IN-60 | Ink-jet cartridge (print head) | 1 | \$24.95 |
| CW-RP25 | Report papers | 25 | \$ 6.95 |
| CW-AL20 | Mailing labels | 20 | \$ 5.95 |
| CW-BN1 | Binder for report papers | 1 | \$14.95 |
| AD-30 | AC Adapter for P-Touch and CheckWriter | 1 | \$21.95 |
| CW-PC1 | Paper cassette | 1 | \$24.95 |



Index

A

AC adapter 2, 7
AC adapter connector 2
Account 33
Additive memory 109
Addresses 100
Amount 52, 58, 61
ATM 57
Auto power off 41

B

Bank fee 57
Basic arithmetic 108

C

Calculator 107
Cartridge lever 3
Category 5, 51
Character keys 3
Check format 36, 54
Check functions 45
Check number 5, 50
Cleaning 7
Comment 53
Cursor keys 3

D

Date 5, 40, 51
Deleting data 70
Deposit 60

E

Electric shock 7
Error messages 112

F

Feeding mailing labels 101
Finding a check 72
Finding a deposit 79
Finding data 71
Finding payments (other than checks) 77
Function keys 3

I

Ink cartridge 3
Ink-jet cartridge 12
Interference 7
Investment 105

K

Keyboard 2

L

LCD contrast 39
LCD display 2
LED 3
Lithium battery 10
Lithium battery compartment 2
Lithium battery life time 11

M

Mailing labels 101
Malfunction 7
Memory 42, 43
Memory loss 5
Mode of payment 49
Monthly payment of a loan 104

N

Negative balance 52
Numeric key pad 3

O

Overflow 109
Overheating 7

P

Paper cassette 2
Paper cassette cover 3
Paper guide 3
Paper jam 115
Payee 5, 51
Payments (other than checks) 57
Platen 3, 116
Power switch 3
Precautions 7
Precision 108
Print contrast 38
Print position 36
Print unit compartment 2
Print unit compartment cover 3
Printing a check 54
Printing a report 83, 90, 93, 96

R

Reconciled balance 4
Reconciling 63
Reconciling a check 64
Reconciling other transactions 66
Report 4, 83
Resetting the system 44
Running balance 4

S

Search 4
Servicing 7
Setting up a list of categories 35
Setting up the payee list 30
Setup 27, 96
Special functions 81
Specifications 117

T

Tax 51
Telephone numbers 99
Thunderstorms 7
Time 40
Troubleshooting 114

V

Voiding a check 68

W

Withdrawal 57



ACCESSORY ORDER FORM

Dear Customer:

Please use this order form when ordering accessories for your CheckWriter.

**To charge your order on Visa or Master Card, call TOLL FREE 1-800-284-4357,
or fax the completed order form to 1-901-373-6213.**

| Stock No. | Description | Price | Quantity | Total |
|--|-------------|-------|----------|--------|
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| Sub Total | | | | |
| CA, CT, FL, GA, IL, LA, MA, MI, MN, NJ, NY, NC, SC, TN, TX, VA Residents-Add Applicable Sales Tax | | | | |
| Shipping/Handling | | | | \$3.00 |
| TOTAL | | | | |

| | |
|--|--|
| <p style="text-align: center;">SHIPPING LABEL</p> <p>Brother International Corporation Consumer Products Division P.O.Box 341332, BARTLETT, TN 38184-1332</p> <p>(Please Type or Print Clearly)</p> <p>Name</p> <p>Address</p> <p>City</p> <p>State/Zip</p> | <p style="text-align: center;">METHOD OF PAYMENT (CHECK ONE)</p> <p><input type="checkbox"/> CHECK OR MONEY ORDER ENCLOSED</p> <p>Please charge my:</p> <p><input type="checkbox"/> VISA <input type="checkbox"/> MASTER CARD</p> <p>\$15.00 minimum for credit card orders (Sorry, no C.O.D.'s)</p> <p>Account number:</p> <p>Expiration Date</p> <p>Signature</p> <p>Daytime phone# ()</p> |
|--|--|

Prices Subject To Change Without Notice

* For orders shipped outside of the continental United states, please add \$10.00.

brother®

KRB8001-A
Printed in U.S.A.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>