

Century

DEDICATED TO QUALITY

Stroller

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label on the rear leg of your new stroller.



Models 6901, 6942

Congratulations on your purchase of a Century® stroller!

Century is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Century® stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

Please save your Owner's Manual for future use.

 
Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Century about your product, please contact our **Customer Service Department at 1-800-837-4044** or visit our Internet website, www.centuryproducts.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

⚠ WARNING



Never leave child unattended.
Always keep your child in view.

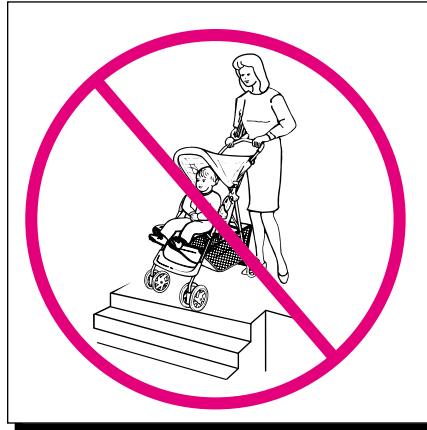


Never use stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.



Use of the stroller with a child weighing more than 40 lbs. (18.1 kg) will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.



 Avoid serious sliding out.

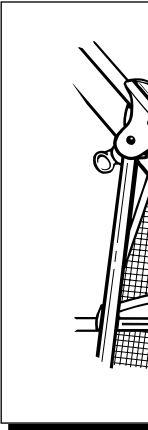

Be certain the stroller is locked and latched before your child near the

TO PREVENT
(4.5 kg) i

 
DO NOT
cause inj

NEVER A

STROLL
while jog

DISCON


Failure to follow these warnings and the assembly instructions could result in serious injury or death.

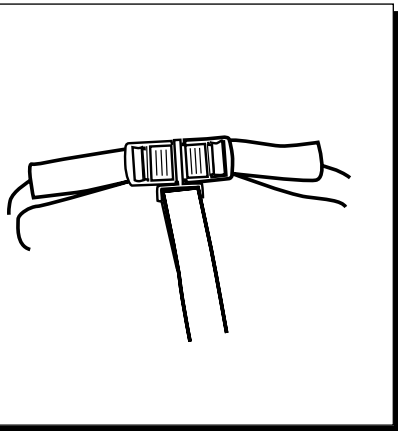


Avoid serious injury from falling or sliding out. Always use seat belt.



 Never place child in the stroller with head toward front of the stroller.

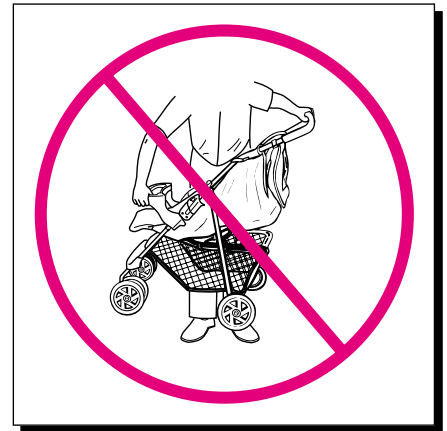

DO NOT lift the stroller by the tray.

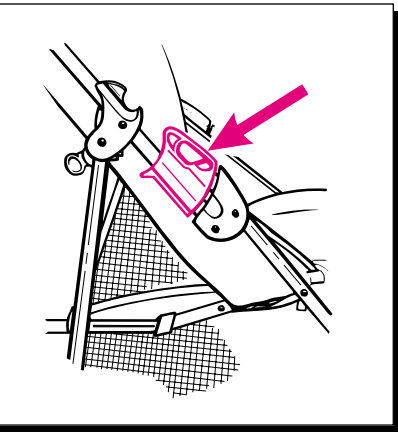 

Be certain the stroller is fully erected and latched before allowing your child near the stroller.



DO NOT place purses, shopping bags, parcels and accessory items on handle or canopy. They may fall on the child or change the balance of the stroller and make it unstable.



Avoid strangulation. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

TO PREVENT A HAZARDOUS CONDITION, do not place more than 10 lbs. (4.5 kg) in the storage basket. DO NOT use storage basket as a child carrier.

DO NOT ALLOW YOUR CHILD to stand on the basket. It may collapse and cause injury.

NEVER ALLOW YOUR STROLLER to be used as a toy.

STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.

DISCONTINUE USING YOUR STROLLER should it become damaged or broken.

 
 
 
FOR ADDITIONAL IMPORTANT INFORMATION, please see the Helpful Hints and Care and Maintenance sections in these instructions.

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your stroller.

If any parts are missing, call Customer Service at 1-800-837-4044 or visit our Internet website, www.centuryproducts.com.

THIS PRODUCT REQUIRES ADULT ASSEMBLY.

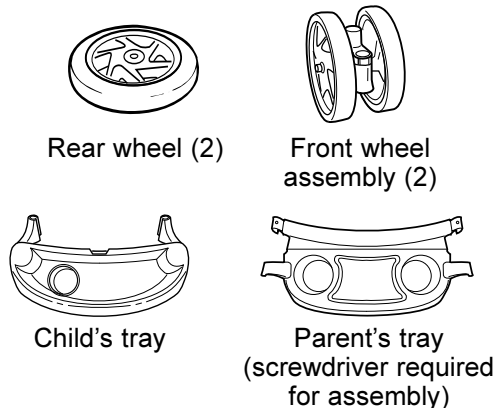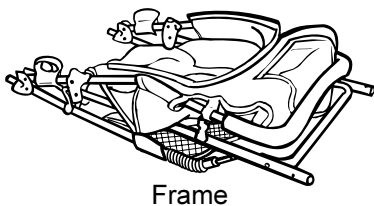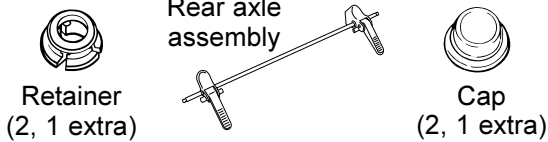


To Unpack Stroller

Step 1.

Remove stroller from carton. Flatten carton to protect floor.

Step 2.

 Release storage latch.

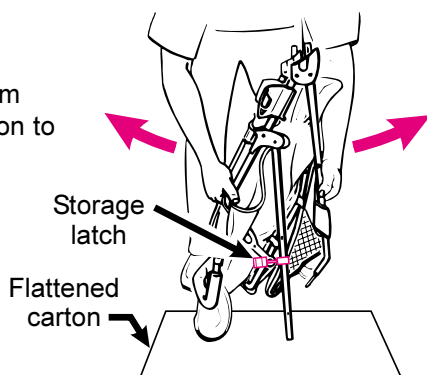


Step 3.

Open stroller on carton as shown until locking latches on both sides are locked.

Step 4.

 
Push the footrest down until it snaps onto the bar beneath it.

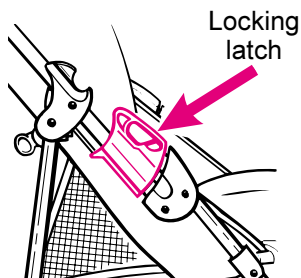

To Assemble Front Wheels

Step 1.

 Line up pin on bottom of front leg with the wheel assembly as shown. **Plastic snap inside wheel mount must be away from pin.**

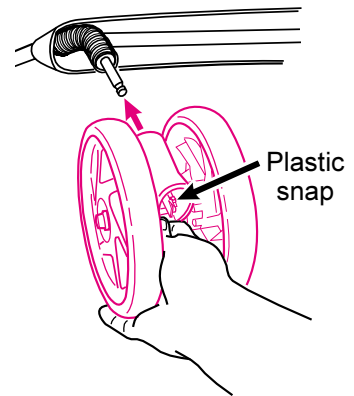

Step 2.

 
Push wheel assembly onto pin until it snaps in place.

Step 3.

Repeat for other wheel.

Pull firmly on each wheel assembly to be sure the wheel assemblies are securely attached.

To Assemble Rear Axle

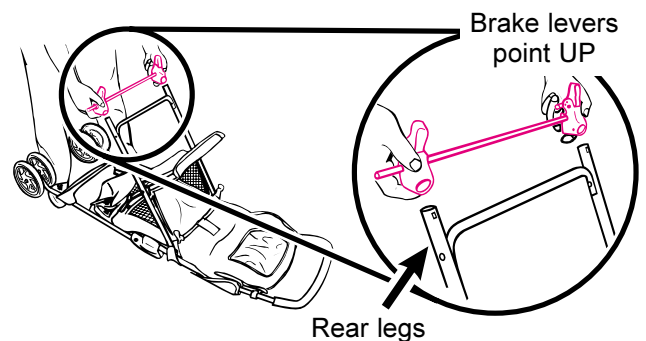

Step 1.

Turn stroller over as pictured above.

Step 2.

Position rear axle assembly as shown.

 
 
Step 3.

Push both brackets at the same time all the way on until they snap onto the legs.

Pull firmly on each bracket to be sure they are securely attached.

To Assemble Rear Wheels

Place parts in **order** on rear axle as shown. Push red retainer onto axle **BEFORE** attaching white cap. Repeat on other side.

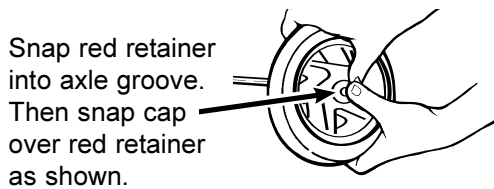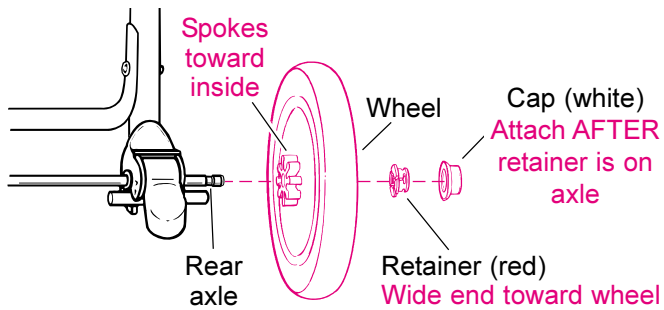


Be sure cap is snapped securely over red retainer.

To Unfold Stroller

Step 1.

 Release storage latch and begin opening stroller.

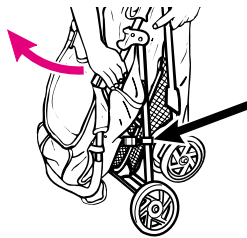

Step 2.

Continue unfolding until both latches lock.



 
To Use Brakes

▲WARNING Always apply both brakes when parking stroller.

Push **DOWN** to park.

Check to make sure brake is on by pushing the stroller.


Lift **UP** to stroll.

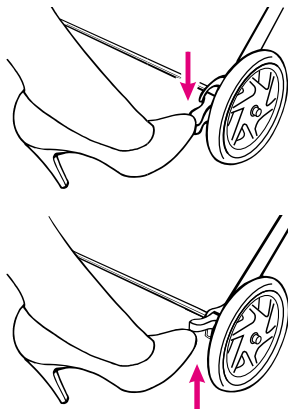

To Change to Swivel or Non-swivel Wheels

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

 Before locking swivels, first push stroller forward a few feet to ensure the wheels are correctly positioned.

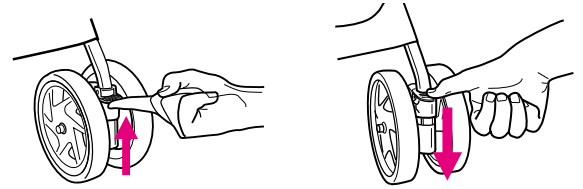

Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.

 
To Secure Your Child

▲WARNING Avoid serious injury from falling or sliding out. Always use seat belt.


Your stroller may have a single button buckle or double button buckle seat belt. Follow the appropriate instructions below.

Single Button Buckle Seat Belt:

Place crotch strap between child's legs. Snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

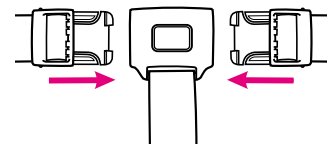


Push in on front of buckle to release.

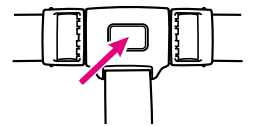 


Double Button Buckle Seat Belt:

 Place crotch strap between child's legs. Snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

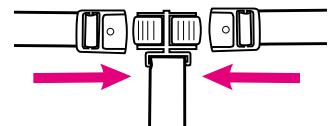


Push in on front of buckle to release.

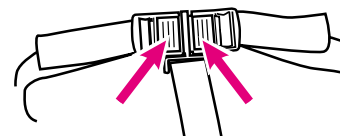 

To Adjust Canopy

 Push or pull canopy to the desired position.

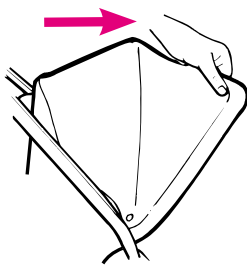


To Use Child's Tray

▲ WARNING Always secure your child with the seat belt. The child's tray is not a restraint device.

DO NOT lift the stroller by the child's tray.

Use care when clamping the child's tray on the stroller with a child in the stroller.

 Snap the child's tray under the fold latch on both leg tubes as shown.

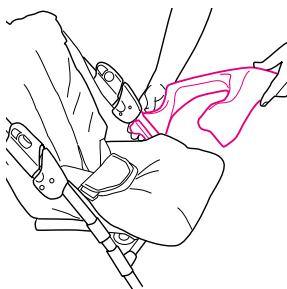

To Use Parent's Tray

 
▲ WARNING To avoid burns, never put hot liquids in the parent's tray. To prevent tipping over, do not place more than 3 lbs. (1.4 kg) on the parent's tray.

Step 1.

Remove the two screws found on top of the stroller handle tubing just above the canopy. **Do not remove canopy screws.**


Step 2.

Fold the tray on its "hinge" several times to break in the hinge.

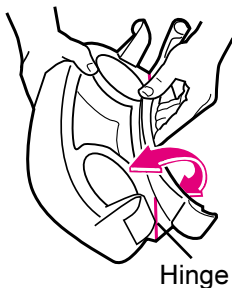

Step 3.

 
Snap parent's tray to stroller handle as shown. Reinsert screws, attaching tray to handle.

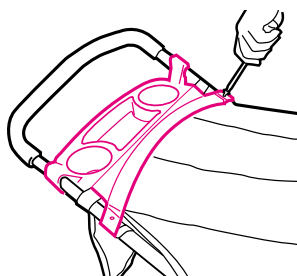

To Adjust Back


Step 1.

 To adjust seat to upright position, lift the seat back until both recline latches are locked.

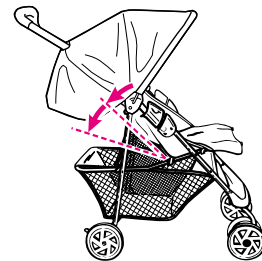

Step 2.

 To recline the seat, push the two latches behind the seat toward each other.

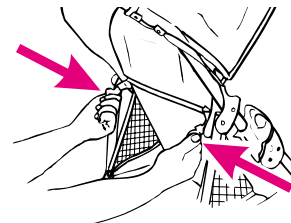

▲ WARNING Fabric caught in the latches may prevent them from locking. When returning seat to upright position, do not allow fabric to be pinched in the latch.

To Fold Stroller

 
Step 1.

Before folding stroller, fold canopy and fully recline seat. Apply brakes to prevent stroller from moving.




Step 2.

On certain models, pull both side latches up to release. Fold the handle down.

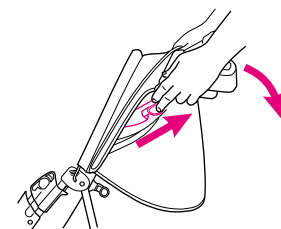


OR

 On models with a one-hand fold latch, slide red button on handle, twist grip toward yourself until it stops, then push handle down on stroller.

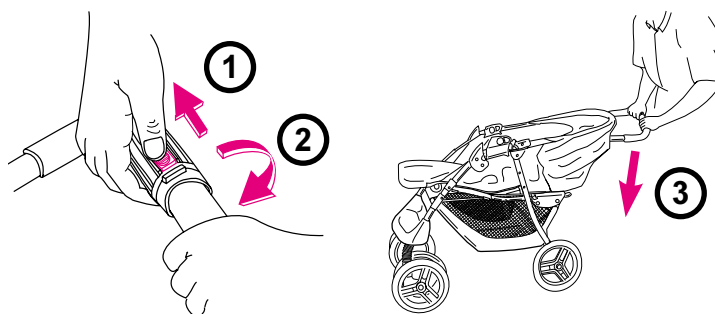


Step 3.

 Close and lock storage latch.

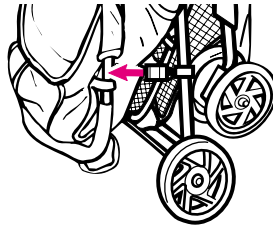

HELPFUL HINTS

 IF WHEEL SQUEAKS, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as illustrated.

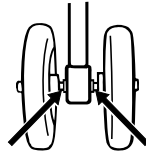


WHEN USING YOUR STROLLER AT THE BEACH, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

TO STAND FOLDED STROLLER, lock the brakes.

CARE AND MAINTENANCE

 TO CLEAN THE SEAT on models with side latches, unscrew the plastic clasps under the seat and the two release latches on the handle. (When removing latches, note location of the long screw and the wire attachment holes.) Hand wash in warm water with a mild detergent. Drip dry only—seat contains plastic inserts. Replace seat on frame when dry. Reattach wires to latches, then screw latches and clasps back onto stroller frame.

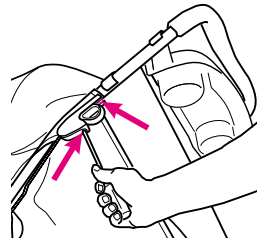

REMOVABLE SEAT PAD (if so equipped) may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

FROM TIME TO TIME CHECK YOUR STROLLER for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Century® replacement parts.

TO CLEAN STROLLER FRAME, use only household soap or detergent and warm water. **NO BLEACH.**

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

Replacement Parts

Instructions for ordering stroller parts:

Complete form below. Stroller model number **MUST** be included on the form to ensure proper replacement parts. **The model number is given on a sticker on the rear leg of the stroller. Payment must accompany your order.**

Parts List:	Price:**
Seat	\$21.00
Canopy	\$18.00
Front wheel assembly	\$16.00
(2 wheels per unit)	
Rear axle assembly	\$11.00
Rear wheel	\$ 8.00 (each)
Basket	\$16.00
Child's tray.....	\$13.00
Parent's tray.....	\$12.00
Removable soft pad.....	\$16.00
Rear wheel hardware	No charge
Recline latches*	No charge

* On certain models only

** Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

1-800-837-4044

or visit our Internet website,
www.centuryproducts.com.

Return the form below with payment to:
CENTURY PRODUCTS
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100
ELVERSON, PA 19520

Model Number	SHIP TO:
(Must be filled in)	Name _____
<input type="checkbox"/> Seat	Address _____
<input type="checkbox"/> Canopy	City, State, Zip _____
<input type="checkbox"/> Front wheel assembly	() _____
<input type="checkbox"/> Rear axle assembly	Telephone _____
<input type="checkbox"/> Rear wheel	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Basket	(payable to Century Products)
<input type="checkbox"/> Child's tray	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Parent's tray	<input type="checkbox"/> Visa
<input type="checkbox"/> Removable soft pad	<input type="checkbox"/> MasterCard
<input type="checkbox"/> Rear wheel hardware	<input type="checkbox"/> Discover
<input type="checkbox"/> Recline latches	
Total: _____	Account #: _____
Shipping & handling: \$5.00	Expiration date: _____
6% sales tax (PA only): _____	Signature: _____
Total amount due: _____	

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>