


CREATIVE®

PC-CAM 950 Slim

CAMERA, DIGITAL CAMCORDER, WEBCAM

About Your Camera

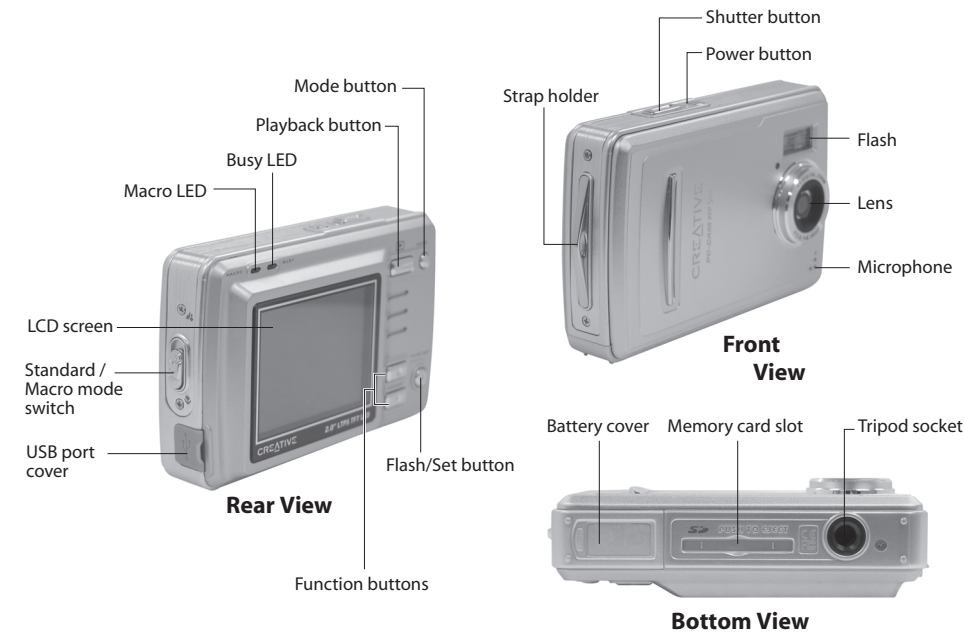


1 Setting Up Your Camera

1. Open the battery cover



2. Insert the batteries

Note the polarity of the two AAA batteries when inserting them.

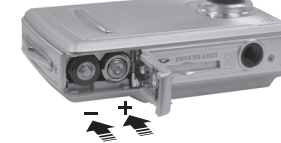

3. Close the battery cover

4. Insert an SD memory card (optional)



5. Turn on your camera

Press and hold the Power button to turn on your camera. The Busy LED lights up in red for a few seconds and the LCD turns on.



2 Taking a Picture or Video

Taking a Picture

- Make sure that your camera is not connected to your computer.
- Press and hold the Power button to turn on your camera. You are in **Record Mode**.
- Compose your picture and press the Shutter button halfway. A yellow box appears in the center of the LCD.
- Fully press the shutter button and release it. Your camera beeps when you take a picture.

- While composing your picture, use the Function buttons to zoom in and out.
- To take close-up pictures, move the Standard/Macro mode switch to . The Macro LED lights up in green.

Previewing a Picture

- Press and hold the Mode button. The mode selection menu appears.
- Use the Function buttons to select the **Play Mode** icon.
- Press the Flash/Set button.
- Use the Function buttons to locate your picture on the LCD screen.
- To exit Play Mode, press and hold the Mode button.

Recording a Video

- Make sure that your camera is not connected to your computer.
- Press and hold the Power button to turn on your camera.
- Press and hold the Mode button. The mode selection menu appears.
- Use the Function buttons to select the **Movie Mode** icon.
- Press the Flash/Set button.
- Compose your picture and press the Shutter button to begin recording. You can see the elapsed recording time, shown in seconds, on the LCD screen.
- Press the Shutter button again to stop recording.

Playing Back a Video Recording

- Press and hold the Mode button. The mode selection menu appears.
- Use the Function buttons to select the **Play Mode** icon.
- Press the Flash/Set button.
- Use the Function buttons to locate your video recording on the LCD screen.
- Press the Shutter button to play back the video. To pause playback, press the Shutter button again. To continue playback, press the Shutter button once.
- To stop playback, press one of the Function buttons.
- To exit Play Mode, press and hold the Mode button.

Product Registration

Registering your product ensures you receive the most appropriate service and product support available. You can register your product during installation or at www.creative.com/register.

Please note that your warranty rights are not dependent on registration.

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to www.creative.com, select your region and then select **Support**.

For details on Technical Support and Warranty, refer to the leaflet included with your Creative PC-CAM 950 Slim. Please keep your Proof of Purchase for the duration of the warranty period.

Keep this document for future reference.



PN: 03VF02100000 Rev. A

3 Installing Software

Do not connect the camera to your computer yet!

- Do not connect Creative PC-CAM 950 Slim to your computer before installing the drivers. If you accidentally begin installation with PC-CAM 950 Slim connected, the **Add New Hardware Wizard** or **Found New Hardware Wizard** dialog box may appear. Click the **Cancel** button and disconnect your camera from your computer.
- Insert the Installation CD into your CD-ROM drive. Your CD should start automatically. If it does not, follow the steps below:
 - Start Windows® Explorer.
 - On the left pane, click the **My Computer** icon.
 - Right-click the CD-ROM/DVD-ROM drive icon, and then click **AutoPlay**.
- Follow the instructions on the screen to complete the installation.
- Restart your computer after all the drivers and applications are installed.

4 Using Your Camera as a Mass Storage Device

- Press and hold the Power button to turn on your camera.
- Press and hold the Mode button. The mode selection menu appears.
- Use the Function buttons to select the **PC mode** icon.
- Press the Flash/Set button.
- Use the Function buttons to select **Mass Storage**.

- Press the Flash/Set button. The **USB connection** icon flashes on the LCD screen.
- Open the USB port cover.
- Using the supplied USB cable, connect PC-CAM 950 Slim to an available USB port on your computer. The Busy LED lights up in red and the LCD turns off.
- Windows automatically detects the device and your camera appears as a removable disk in Microsoft® Windows Explorer.
- Copy the picture and video files into your computer using a drag-and-drop operation.

- To install your camera as a webcam, refer to the User's Manual.



USB port

5 Using Instant Live Video Chats

Add a new dimension to your communication with family and friends, and use Live Video Chats with your camera!

To use Live Video Chats, download one of the following:

- MSN Messenger from <http://messenger.msn.com>
- Yahoo! Messenger from <http://messenger.yahoo.com>
- any Windows application that supports Live Video Chats, like Windows NetMeeting

User's Manual

For more details on using your camera, read the User's Manual.

Copyright © 2005 Creative Technology Ltd. All rights reserved. The Creative logo, are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>