

Dell™ PowerVault™ 745N Systems

Installation and Troubleshooting Guide



Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Abbreviations and Acronyms

For a complete list of abbreviations and acronyms, see the "Abbreviations and Acronyms."

Information in this document is subject to change without notice.

© 2003 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *PowerEdge*, *PowerApp*, *PowerVault*, *PowerConnect*, *Dell OpenManage*, *DellNet*, *Axim*, *Dell Precision*, *Dimension*, *Inspiron*, *OptiPlex*, and *Latitude* are trademarks of Dell Inc.; *Microsoft*, *Windows*, and *MS-DOS* are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

September 2009P/N D3835 Rev. A01

Contents

1	Introduction	
	Other Documents You May Need	9
	Obtaining Technical Assistance	10
2	Indicators, Messages, and Codes	
	Front-Panel Indicators and Features	11
	Back-Panel Indicators and Features	13
	System Messages	16
	System Beep Codes	23
	Warning Messages	26
	Diagnostics Messages	26
	Alert Messages	26
3	Finding Software Solutions	
	Before You Begin	27
	Troubleshooting Errors and Conflicts	27
	Input Errors	28
	Application Conflicts	28
	IRQ Assignment Conflicts	28
4	Running the System Diagnostics	
	Using Server Administrator Diagnostics	31
	System Diagnostics Features	31
	When to Use the System Diagnostics	32
	Running the System Diagnostics	32

System Diagnostics Testing Options	33
Using the Custom Test Options	33
Selecting Devices for Testing	33
Selecting Diagnostics Options	33
Viewing Information and Results	34
5 Troubleshooting Your System	
Safety First—For You and Your System	35
External Connections	35
Checking Basic Power Problems	35
Start-Up Routine	35
Checking the Equipment	36
Troubleshooting the Video Subsystem	36
Troubleshooting the Keyboard	37
Troubleshooting the Mouse	37
Troubleshooting Basic I/O Functions	38
Troubleshooting a Serial I/O Device	38
Troubleshooting a USB Device	39
Troubleshooting a Network Adapter	39
Responding to a Systems Management Software Alert Message	40
Inside the System	40
Removing and Replacing the Bezel	41
Opening the System	42
Closing the System	43
Troubleshooting a Wet System	44
Troubleshooting a Damaged System	44
Troubleshooting the System Battery	45
Troubleshooting the Power Supply	46
Troubleshooting System Cooling Problems	46
Troubleshooting a Fan	46

Troubleshooting Hard Drives	47
Troubleshooting Expansion Cards	48
Troubleshooting System Memory	49
Troubleshooting the Processor	50
Troubleshooting the System Board	51

6 Installing System Components

System Board Components	53
Cooling Shroud	54
Removing the Cooling Shroud	54
Installing the Cooling Shroud	55
System Battery	55
Replacing the System Battery	55
Fan Assembly	56
Removing the Fan Assembly	57
Installing the Fan Assembly	58
Power Distribution Board	58
Removing the Power Distribution Board	58
Installing the Power Distribution Board	58
Power Supply	59
Removing the Power Supply	59
Installing the Power Supply	60
Expansion Cards	61
Installing an Expansion Card	61
Removing an Expansion Card	64
Riser Board	64
Removing the Riser Board	64
Installing the Riser Board	65
Daughter Card	65
Removing a Daughter Card	65
Installing a Daughter Card	66
System Memory	67

Memory Module Installation Guidelines	67
Installing Memory Modules	68
Removing Memory Modules	69
Control Panel	69
Removing the Control Panel	69
Installing the Control Panel	71
SATA Cable Kits	72
Removing the SATA Cable Kits	72
Processor	72
Replacing the Processor	72
System Board	76
Removing the System Board Assembly	76
Installing the System Board Assembly	78

7 Installing Drives

Configuring the Boot Drive	81
Removing a Hard Drive	81
Installing a Hard Drive	83
Connecting Hard Drives for RAID	84
Software RAID	84
Hardware RAID (Internal Drives)	84
Hardware RAID (External Drives) and Software RAID (Internal Drives)	84

8 Getting Help

Technical Assistance	85
Online Services	85
AutoTech Service	86
Automated Order-Status Service	86
Technical Support Service	87
Dell Enterprise Training and Certification	87
Problems With Your Order	87
Product Information	87

Returning Items for Warranty Repair or Credit	87
Before You Call	88
Contacting Dell	88
A Jumpers, Switches, and Connectors	
Jumpers—A General Explanation	105
Jumpers	105
System Board Jumpers	106
System Board Connectors	107
Riser Board Connectors	108
Disabling a Forgotten Password	109
B I/O Connectors	
I/O Connectors	111
Serial Connector	112
Serial Connector Autoconfiguration	112
PS/2-Compatible Keyboard and Mouse Connectors	113
Video Connector	114
USB Connector	115
Integrated Network Adapter Connector	115
Network Cable Requirements	116
Abbreviations and Acronyms	117
Index	121

Introduction

Your system includes the following significant service and upgrade feature:

- System diagnostics, which checks for hardware problems (if the system can boot)

The following system upgrade options are available:

- Processor
- Memory
- PCI expansion card

Other Documents You May Need



The *System Information Guide* provides important safety and regulatory information. Warranty information may be included within this document or as a separate document.

- The *Rack Installation Guide* or *Rack Installation Instructions* included with your rack solution describes how to install your system into a rack.
- The *Getting Started Guide* provides an overview of initially setting up your system.
- The *User's Guide* provides information about system features and technical specifications.
- The *Administrator's Guide* provides system configuration, operation, and management information.
- Systems management software documentation describes the features, requirements, installation, and basic operation of the software.
- Operating system documentation describes how to install (if necessary), configure, and use the operating system software.
- Documentation for any components you purchased separately provides information to configure and install these options.
- Updates are sometimes included with the system to describe changes to the system, software, and/or documentation.



NOTE: Always read the updates first because they often supersede information in other documents.

- Release notes or readme files may be included to provide last-minute updates to the system or documentation or advanced technical reference material intended for experienced users or technicians.

Obtaining Technical Assistance

If you do not understand a procedure in this guide or if the system does not perform as expected, see "Getting Help."

Dell Enterprise Training and Certification is available; see www.dell.com/training for more information. This service may not be offered in all locations.

Indicators, Messages, and Codes

The system, applications, and operating systems can identify problems and alert you to them. Any of the following can indicate when the system is not operating properly:

- System indicators
- System messages
- Beep codes
- Warning messages
- Diagnostics messages
- Alert messages

This section describes each type of message, lists the possible causes, and provides steps to resolve any problems indicated by a message. The system indicators and features are illustrated in this section.

Front-Panel Indicators and Features

Figure 2-1 shows the front-panel indicators for the system status and hard drive activity. Table 2-1 details the conditions associated with each indicator code.

Figure 2-1. Front-Panel Features

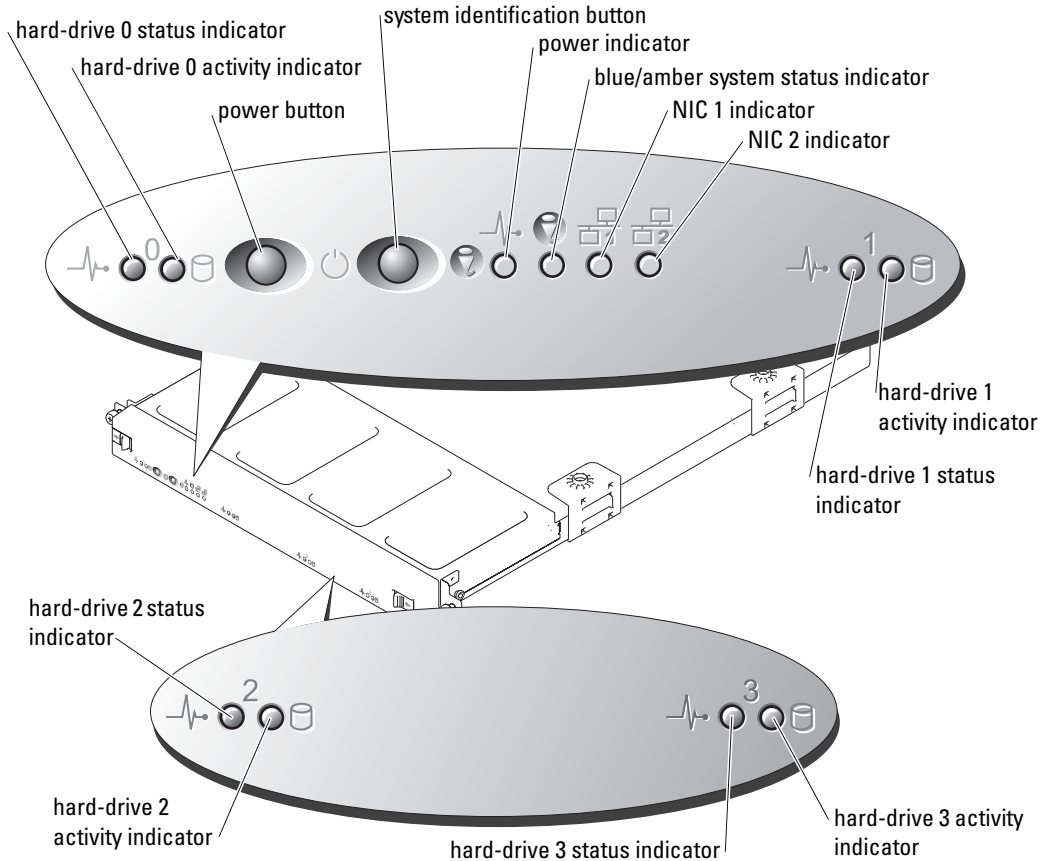


Table 2-1. Front-Panel Indicator Codes

LED Indicator	Description
Blue/amber system status indicator	The blue system status indicator lights up during normal system operation or when you press the system identification button. You can also use the systems management software to cause this indicator to flash to identify a particular system. The amber system status indicator flashes when the system needs attention due to a possible system problem.
Hard-drive activity indicator	The green hard-drive activity indicator flashes when the hard drives are in use.

Table 2-1. Front-Panel Indicator Codes (continued)

LED Indicator	Description
Hard-drive status indicator	<p>The green hard-drive status indicator lights up when the drive is ready and is functioning normally. The status indicator is off when the drive is absent and is not configured as part of a RAID or non-RAID volume or cannot be detected by the operating system or RAID controller.</p> <p>The green status indicator blinks when a volume of which the drive is a member is rebuilding.</p> <p>The amber status indicator blinks when a fault occurs with the drive.</p>
NIC1 and NIC2 link indicators	<p>The indicators for the two integrated network adapters light green if the network adapters are connected to the network.</p> <p>The indicators flash green when data is being transmitted.</p>
Power indicator	<p>The green indicator flashes if AC power is available to the system, but the system is not powered on.</p> <p>The green indicator is on when the system is powered on.</p> <p>If the system is not connected to AC power, the green indicator is off.</p>

- The power button provides the ability to soft switch the power cycling to the system.
- The two system identification buttons on the front and back panels can be used to locate a particular system within a rack. When one of these buttons is pushed or the system management software is used to identify the system, the blue system status indicators on the front and back of the system blink. (To stop the indicator from blinking press one of the identification buttons a second time, or use the systems management software.)

The front panel also incorporates a USB connector that is accessible when the bezel is removed. See Figure 2-4.

Back-Panel Indicators and Features

Figure 2-2 shows the back-panel indicators and features and Figure 2-3 shows the indicators for the integrated network adapters. Table 2-2 details the conditions associated with each back-panel indicator code.

Figure 2-2. Back-Panel Features

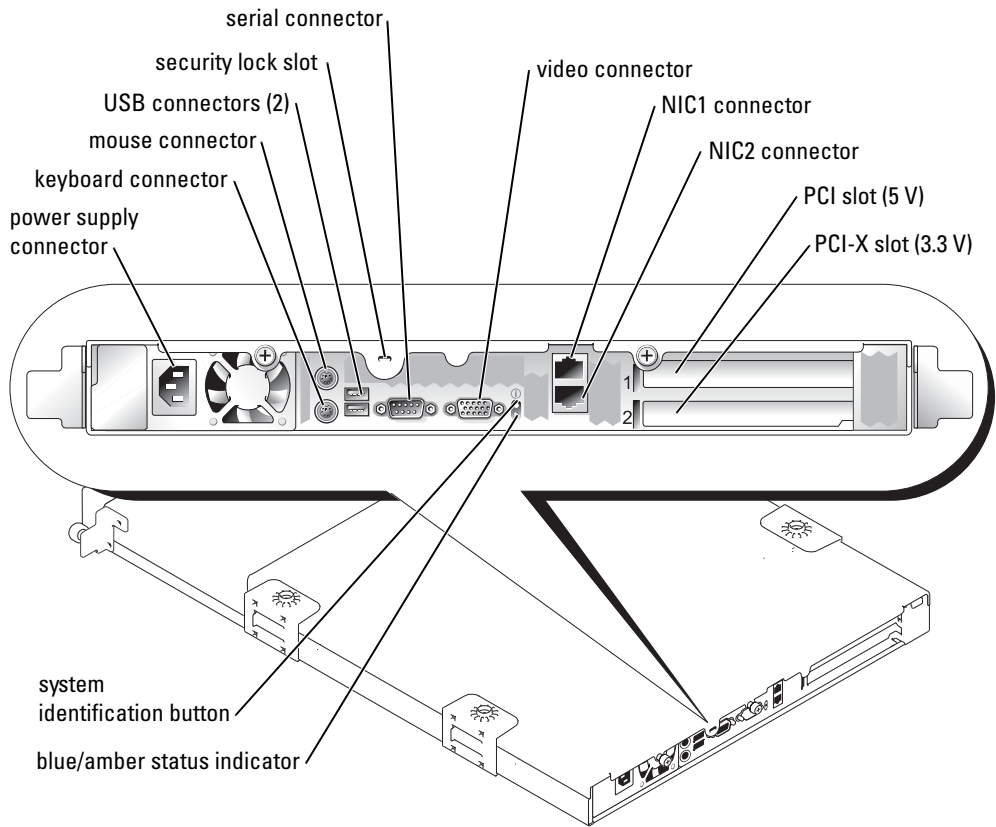


Figure 2-3. Network Adapter Indicators

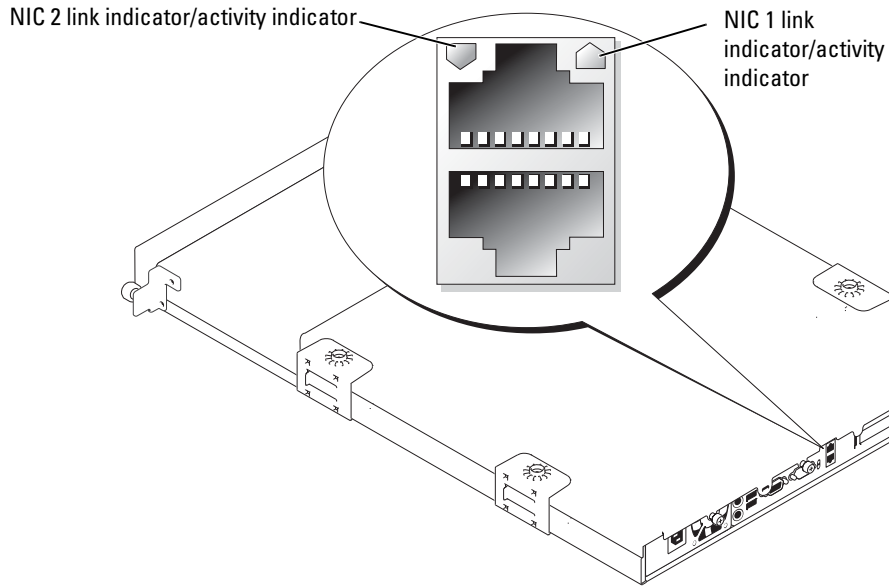


Figure 2-4. Front-Panel USB Connector

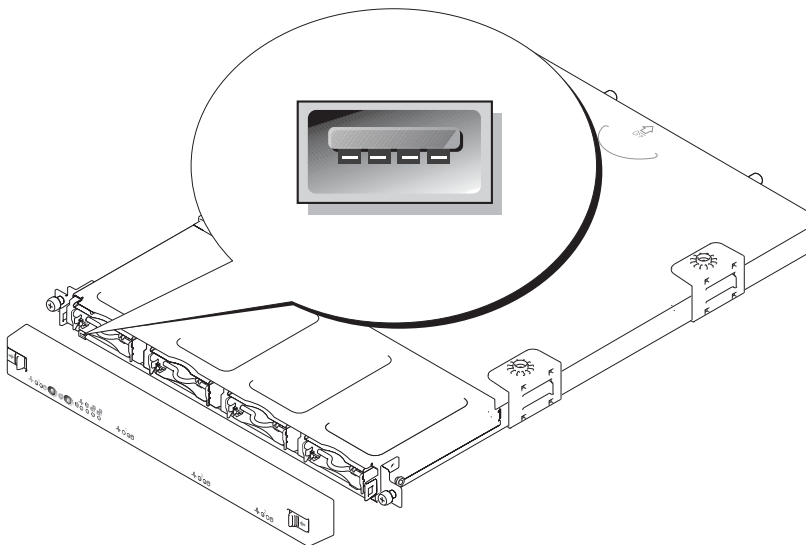


Table 2-2. Back-Panel LED Codes

LED Indicator	LED States	Description
Status	Off	The system is off.
	Blue	The system is operating normally.
	Blue blinking	The system is identifying itself due to the pressing of the identification button. NOTE: Systems management software causes the indicator to blink to identify the system.
	Amber blinking	Indicates a fault with the system.
NIC link/activity	Off	The network adapter is not connected to the network.
	Green	The network adapter has established a link to the network
	Flashing green	Data is being transmitted.

System Messages

System messages appear on the screen during power-on self test (POST) to notify you of a possible problem with the system. Table 2-3 lists the system messages that can occur and the probable cause and corrective action for each message.


 **NOTE:** If you receive a system message that is not listed in Table 2-3, check the documentation for the application that is running when the message appears or the operating system's documentation for an explanation of the message and recommended action.

Table 2-3. System Messages

Message	Causes	Corrective Actions
Address mark not found	Faulty hard-drive subsystem; defective system board.	Ensure that the hard drive cables are properly connected. See "Troubleshooting Hard Drives" in "Troubleshooting Your System" for the appropriate drive(s) installed. If the problem persists, the system board may be defective. See "Troubleshooting the System Board."
Alert! Cover was previously removed!	The chassis has been opened.	Information only.

Table 2-3. System Messages (continued)

Message	Causes	Corrective Actions
Alert! CPU fan was not detected.	Specified fan is faulty or the fan assembly is not installed correctly.	Ensure that the fan assembly is properly installed. See "Troubleshooting a Fan" in "Troubleshooting Your System."
Alert! Memory fan was not detected.		
Alert! PCI fan was not detected.		
Alert! DIMM(s) <i>n</i> are unsupported.	Unsupported or faulty memory module(s).	Ensure that the memory modules are properly populated. See "Memory Module Installation Guidelines" in "Installing System Components." If the problem persists, see "Troubleshooting System Memory" in "Troubleshooting Your System."
Alert! Mismatched DIMMs are detected in Bank <i>n</i> . Potential for decreased performance!	The memory module installation guidelines have not been properly followed.	Ensure that the memory modules are properly populated. See "Memory Module Installation Guidelines" in "Installing System Components."
Alert! Previous CPU fan failure.	Specified fan failed before last system startup.	Information only.
Alert! Previous Memory fan failure.		
Alert! Previous PCI fan failure.		
Alert! Previous voltage failure.	The power supply failed before last system startup.	Information only.
Alert! Processor thermal probe failure detected.	The processor fan is faulty, or the fan assembly is improperly installed.	Ensure that the fan assembly is properly installed. See "Troubleshooting a Fan" in "Troubleshooting Your System."
Alert! Previous processor thermal event was detected.	The processor fan failed before the last system startup.	Information only.
Auxiliary device failure	Loose or improperly connected mouse or keyboard cable; faulty mouse or keyboard.	Replace the mouse. If the problem persists, replace the keyboard.
BIOS Update Attempt Failed!	Remote BIOS update attempt failed.	Retry the BIOS update. If the problem persists, see "Getting Help."

Table 2-3. System Messages (continued)

Message	Causes	Corrective Actions
Caution! NVRAM_CLR jumper is installed on system board. Please run SETUP	Incorrect configuration settings in System Setup program; NVRAM_CLR jumper is installed; faulty system battery.	Check the System Setup configuration settings. See "Using the System Setup Program" in your <i>User's Guide</i> . Remove the NVRAM_CLR jumper. See Figure A-2 for jumper location.
Data error	Faulty hard drive.	Ensure that the hard drive cables are properly connected. See "Troubleshooting Hard Drives" in "Troubleshooting Your System" for the appropriate drive(s) installed in your system.
Decreasing available memory	Faulty or improperly installed memory modules.	Ensure that all memory modules are properly installed. See "Troubleshooting System Memory" in "Troubleshooting Your System."
Embedded server management error	Faulty or improperly installed remote access controller (RAC) or loose cable connection.	Ensure that the RAC's cable is properly connected. Ensure that the RAC is properly installed. See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."
Embedded server management is not present	Faulty or improperly installed RAC or loose cable connection.	Ensure that the RAC is properly installed. See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."
Error: More than one RAC detected, system halted.	Two RACs are installed, or faulty or improperly installed RAC.	Ensure that only one RAC is installed and that it is installed in the upper slot. Ensure that the RAC is properly installed. See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."
Error: Remote Access Card initialization failure.	Faulty or improperly installed RAC.	Ensure that the RAC is properly installed. See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."
Error: RAC is not in the correct PCI slot, system halted.	The RAC is not installed in the proper PCI slot.	Ensure that the RAC is installed in the upper slot. See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."

Table 2-3. System Messages (continued)

Message	Causes	Corrective Actions
Error: RAC cannot be used with an add-in video card in this slot.	Add-in video card is installed.	Remove the add-in video card. See "Installing and Removing a CERC SATA RAID Controller" in "Installing System Components." To use the add-in video card, remove the RAC.
Gate A20 failure	Faulty keyboard controller (faulty system board).	See "Getting Help."
General failure	Operating system corrupted or improperly installed.	Reinstall the operating system.
Hard disk controller failure	Incorrect configuration settings in System Setup program.	Run the System Setup program to correct the settings. See "Using the System Setup Program" in your <i>User's Guide</i> .
	Faulty or improperly installed hard drive, or loose power cable.	Ensure that the hard-drive subsystem is properly installed. See "Troubleshooting Hard Drives" in "Troubleshooting Your System" for the type of hard drive installed in your system.
Invalid memory configuration detected. Potential corruption exists!	Memory module installation guidelines have not been properly followed.	Ensure that the memory modules are properly populated. See "Memory Module Installation Guidelines" in "Installing System Components."
Keyboard controller failure	Faulty keyboard controller (faulty system board).	See "Getting Help."
Keyboard data line failure Keyboard failure Keyboard stuck key failure	Loose or improperly connected keyboard cable; faulty keyboard; faulty keyboard controller.	Ensure that the keyboard is properly connected. If the problem persists, replace the keyboard. If the problem persists, see "Troubleshooting the System Board" in "Troubleshooting Your System."

Table 2-3. System Messages (continued)

Message	Causes	Corrective Actions
Memory address line failure at <i>address</i> , read <i>value</i> expecting <i>value</i>	Faulty or improperly installed memory modules, or faulty system board.	Ensure that all memory modules are properly installed. See "Troubleshooting System Memory" in "Troubleshooting Your System." If the problem persists, see "Troubleshooting the System Board."
Memory double word logic failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory odd/even logic failure at <i>start address</i> to <i>end address</i>		
Memory write/read failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory allocation error	Faulty application program.	Restart the application program.
Memory bank population error!	Memory modules are not installed in identical pairs; faulty memory module(s).	Ensure that the memory modules are properly installed. See "Memory Module Installation Guidelines" in "Installing System Components." If the problem persists, see "Troubleshooting System Memory" in "Troubleshooting Your System."
Memory parity interrupt at <i>address</i>	Faulty or improperly installed memory modules.	Ensure that all memory modules are properly installed. See "Memory Module Installation Guidelines" in "Installing System Components." If the problem persists, see "Troubleshooting System Memory" in "Troubleshooting Your System."
Memory tests terminated by keystroke	The spacebar was pressed during POST to terminate the memory test.	Information only.

Table 2-3. System Messages (continued)

Message	Causes	Corrective Actions
No boot device available	Faulty or missing hard drive or hard-drive subsystem.	Check the Integrated Devices configuration settings in the System Setup program. See "Using the System Setup Program" in your <i>User's Guide</i> . Ensure that either SCSI Controller or Integrated Drive Controller is enabled. If the system is booting from a SCSI controller, ensure that the controller is properly connected. If the problem persists, replace the faulty hard drive. See "Installing a Hard Drive" in "Installing Drives."
No boot sector on hard-disk drive	An operating system is not on the hard drive.	Check the hard drive configuration settings in the System Setup program. See "Using the System Setup Program" in your <i>User's Guide</i> .
No timer tick interrupt	Faulty system board.	See "Getting Help."
Non-system disk or disk error	Faulty hard drive or hard-drive subsystem; no operating system on hard drive.	See "Troubleshooting Hard Drives" in "Troubleshooting Your System."
PCI BIOS failed to install	Loose cables to expansion card(s); faulty or improperly installed expansion card.	Ensure that all appropriate cables are securely connected to the expansion cards. See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."
Plug & Play Configuration Error	Error encountered in initializing PCI device; faulty system board.	Install the NVRAM_CLR jumper and reboot the system. See Figure A-2 for jumper location. Check for a BIOS update. If the problem persists, see "Troubleshooting Expansion Cards" in "Troubleshooting Your System." If the problem persists, see "Troubleshooting the System Board."
Read fault Requested sector not found	Faulty hard drive.	Ensure that the hard drive cables are properly connected. See "Troubleshooting Hard Drives" in "Troubleshooting Your System" for the appropriate drive(s) installed in your system.

Table 2-3. System Messages (continued)


Message	Causes	Corrective Actions
Reset failed	Improperly connected drive interface or power cable.	Ensure that the interface and power cables are securely connected. See "Troubleshooting Hard Drives" in "Troubleshooting Your System."
ROM bad checksum = <i>address</i>	Faulty or improperly installed expansion card.	Remove and reseal the expansion cards. See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."
Sector not found Seek error Seek operation failed	Faulty hard drive.	Replace the hard drive. See "Troubleshooting Hard Drives" in "Troubleshooting Your System" for the appropriate drive installed in your system.
Shutdown failure	Shutdown test failure.	Ensure that all memory modules are properly installed. See "Troubleshooting System Memory" in "Troubleshooting Your System." If the problem persists, see "Troubleshooting the System Board."
Time-of-day clock stopped	Faulty battery; faulty system board.	See "Troubleshooting the System Battery" in "Troubleshooting Your System." If the problem persists, see "Troubleshooting the System Board."
Time-of-day not set - please run SETUP program	Incorrect Time or Date settings; faulty system battery.	Check the Time and Date settings. See "Using the System Setup Program" in your <i>User's Guide</i> . If the problem persists, see "Troubleshooting the System Battery" in "Troubleshooting Your System."
Timer chip counter 2 failed	Faulty system board.	See "Getting Help."
Unexpected interrupt in protected mode	Faulty or improperly installed memory modules or faulty system board.	Ensure that all memory modules are properly installed. See "Memory Module Installation Guidelines" in "Installing System Components." If the problem persists, see "Troubleshooting System Memory" in "Troubleshooting Your System." If the problem persists, see "Troubleshooting the System Board."
Unsupported CPU stepping detected	Processor is not supported by the system.	Check for a BIOS update. If the problem persists, install a supported processor. See "Control Panel."

Table 2-3. System Messages (continued)

Message	Causes	Corrective Actions
Warning! Firmware is out-of-date	Firmware is out-of-date.	Update the firmware. See "Getting Help."
Warning! No microcode update loaded for processor	New or unsupported processor.	Update the BIOS firmware. See "Getting Help."
Write fault Write fault on selected drive	Faulty hard drive.	Ensure that the hard drive cables are properly connected. See "Troubleshooting Hard Drives" in "Troubleshooting Your System" for the appropriate drive(s) installed in your system.

System Beep Codes

If an error that cannot be reported on the screen occurs during POST, the system may emit a series of beeps that identifies the problem.

 **NOTE:** If the system boots without a keyboard, mouse, or monitor attached, the system does not issue beep codes related to those peripherals.

If a beep code is emitted, write down the series of beeps and then look it up in Table 2-4. If you are unable to resolve the problem by looking up the meaning of the beep code, use system diagnostics to identify the possible cause. If you are still unable to resolve the problem, see "Getting Help."

Table 2-4. Server Module Beep Codes

Code	Cause	Corrective Action
1-1-2	CPU register test failure	See "Troubleshooting the Processor" in "Troubleshooting Your System."
1-1-3	CMOS write/read failure; faulty system board	Faulty system board. See "Troubleshooting the System Board" in "Troubleshooting Your System."
1-1-4	BIOS error	Reflash the BIOS.
1-2-1	Programmable interval-timer failure; faulty system board	Faulty system board. See "Troubleshooting the System Board" in "Troubleshooting Your System."

Table 2-4. Server Module Beep Codes (continued)

Code	Cause	Corrective Action
1-2-2	DMA initialization failure	See "Troubleshooting System Memory" in "Troubleshooting Your System."
1-2-3	DMA page register write/read failure	
1-3-1	Main-memory refresh verification failure	
1-3-2	No memory installed	
1-3-3	Chip or data line failure in the first 64 KB of main memory	
1-3-4	Odd/even logic failure in the first 64 KB of main memory	
1-4-1	Address line failure in the first 64 KB of main memory	
1-4-2	Parity failure in the first 64 KB of main memory	
1-4-3	Fail-safe timer test failure	
1-4-4	Software NMI port test failure	
2-1-1 through 2-4-4	Bit failure in the first 64 KB of main memory	

Table 2-4. Server Module Beep Codes (continued)


Code	Cause	Corrective Action
3-1-1	Slave DMA-register failure	Faulty system board. See "Troubleshooting the System Board" in "Troubleshooting Your System."
3-1-2	Master DMA-register failure	
3-1-3	Master interrupt-mask register failure	
3-1-4	Slave interrupt-mask register failure	
3-2-2	Interrupt vector loading failure	
3-2-4	Keyboard-controller test failure	
3-3-1	CMOS failure	
3-3-2	System configuration check failure	
3-3-3	Keyboard controller not detected	
3-3-4	Video memory test failure	
3-4-1	Screen initialization failure	
3-4-2	Screen-retrace test failure	
3-4-3	Video ROM search failure	
4-2-1	No timer tick	
4-2-2	Shutdown test failure	
4-2-3	Gate A20 failure	
4-2-4	Unexpected interrupt in protected mode	See "Troubleshooting Expansion Cards" in "Troubleshooting Your System."
4-3-1	Improperly installed or faulty memory modules	See "Troubleshooting System Memory" in "Troubleshooting Your System."
4-3-2	No memory modules installed in the first memory module connector	Install a memory module in the first memory module connector. See "Installing Memory Modules" and "Memory Module Installation Guidelines" in "Installing System Components."
4-3-3	Faulty system board	Faulty system board. See "Troubleshooting the System Board" in "Troubleshooting Your System."
4-3-4	Time-of-day clock stopped	See "Troubleshooting System Memory" in "Troubleshooting Your System." If the problem persists, see "Troubleshooting the System Board" in "Troubleshooting Your System."

Table 2-4. Server Module Beep Codes (continued)

Code	Cause	Corrective Action
4-4-1	Super I/O chip failure; faulty system board	Faulty system board. See "Troubleshooting the System Board" in "Troubleshooting Your System."
4-4-4	Cache test failure; faulty processor	See "Troubleshooting the Processor" in "Troubleshooting Your System."

Warning Messages

A warning message alerts you to a possible problem and prompts you to respond before the system continues a task. For example, before you format a hard drive, a message warns that you may lose all data on the drive. Warning messages usually interrupt the task and require you to respond by typing y (yes) or n (no).

 **NOTE:** Warning messages are generated by either the application or the operating system. For more information, see "Finding Software Solutions" and the documentation that accompanied the operating system or application.

Diagnostics Messages

When you run system diagnostics, an error message may result. Diagnostic error messages are not covered in this section. Record the message on a copy of the Diagnostics Checklist in "Getting Help," and then follow the instructions in that section for obtaining technical assistance.

Alert Messages

Systems management software generates alert messages for your system. Alert messages include information, status, warning, and failure messages for drive, temperature, fan, and power conditions. For more information, see the systems management software documentation on your NAS system's *Resource CD*.

Finding Software Solutions

Software problems can be caused by:

- Improper installation or configuration of an application
- Application conflicts
- Input errors
- Interrupt assignment conflicts

Ensure that you are installing the software application according to the software manufacturer's recommended procedures. If a problem occurs after you install the software, you might need to troubleshoot your software application and your system.

See the documentation that accompanied the software or contact the software manufacturer for detailed troubleshooting information.



NOTE: If all of the system diagnostic tests complete successfully, then the problem is most likely caused by the software and not the hardware.

Before You Begin

- Scan the software media with antivirus software.
- Read the software documentation before you run the installation utility.
- Be prepared to respond to prompts from the installation utility.

The installation utility may require you to enter information about your system, such as how the operating system is configured, and the type of peripherals that are connected to the system. Have this information available before running the installation utility.

Troubleshooting Errors and Conflicts

While configuring and running software, problems might occur that are caused by input errors, application conflicts, and/or IRQ assignment conflicts. The problems are sometimes indicated by error messages.

Error messages are generated by system hardware or software. "Indicators, Messages, and Codes" provides information about error messages that are hardware-based. If you receive an error message that is not listed, see your operating system or software program documentation for troubleshooting information.

Input Errors

Pressing a specific key or set of keys at the wrong time may produce unexpected results. See the documentation that came with the software application to ensure that the values or characters you are entering are valid.

Ensure that your operating system is configured properly to run the application. Remember that whenever you change the parameters of the operating system, the changes can conflict with an application's operating requirements. After you configure the operating system, you may need to reinstall or reconfigure a software application so that it can run properly in its new environment.

Application Conflicts

Some applications can leave unnecessary files or data behind after they are deleted from your system. Device drivers can also create application errors. If application errors occur, see your application device driver or operating system documentation for troubleshooting information.

IRQ Assignment Conflicts

Most PCI devices can share an IRQ with another device, but they cannot use an IRQ simultaneously. To avoid this type of conflict, see the documentation for each PCI device for specific IRQ requirements.

Table 3-1. IRQ Assignment Defaults

IRQ Line	Assignment
IRQ0	System timer
IRQ1	Keyboard controller
IRQ2	Interrupt controller 1 to enable IRQ8 through IRQ15
IRQ3	Remote access controller serial port (when applicable)
IRQ4	Serial port 1 (COM1 and COM3)
IRQ5	<i>Available</i>
IRQ6	<i>Available</i>
IRQ7	<i>Available</i>
IRQ8	Real-time clock
IRQ9	ACPI functions (used for power management)
IRQ10	<i>Available</i>

Table 3-1. IRQ Assignment Defaults (continued)

IRQ Line	Assignment
IRQ11	<i>Available</i>
IRQ12	PS/2 mouse port unless the mouse is disabled through the System Setup program
IRQ13	Math coprocessor
IRQ14	Reserved for IDE devices
IRQ15	Integrated drive controller for the SATA ports

Running the System Diagnostics

If you experience a problem with your system, run the diagnostics before calling for technical assistance. The purpose of the diagnostics is to test your system's hardware without requiring additional equipment or risking data loss. If you are unable to fix the problem yourself, service and support personnel can use diagnostics test results to help you solve the problem.

Using Server Administrator Diagnostics

To assess a system problem, first use the online Server Administrator diagnostics. If you are unable to identify the problem, then use the system diagnostics.

To access the online diagnostics, log into the Server Administrator home page, and then click the **Diagnostics** tab. For information about using diagnostics, see the online help. For additional information, see the *Server Administrator User's Guide* on your NAS system's *Resource CD*.

System Diagnostics Features

The system diagnostics provides a series of menus and options for particular device groups or devices. The system diagnostics menus and options allow you to:


- Run tests individually or collectively.
- Control the sequence of tests.
- Repeat tests.
- Display, print, or save test results.
- Temporarily suspend testing if an error is detected or terminate testing when a user-defined error limit is reached.
- View help messages that briefly describe each test and its parameters.
- View status messages that inform you if tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

When to Use the System Diagnostics

If a major component or device in the system does not operate properly, component failure may be indicated. As long as the processor and the system's input/output devices (monitor, keyboard, and USB port) are functioning, you can use the system diagnostics to help identify the problem.


Running the System Diagnostics

To run the system diagnostics, you need the *Resource* CD, a USB key, and a system with a CD drive.

 **NOTICE:** Use the system diagnostics to test only your NAS system. Using this program with other systems may cause invalid results or error messages. In addition, use only the program that came with your system (or an updated version of that program).

To run the diagnostics:

- 1 On a system running Microsoft® Windows® with a CD drive, insert the *Resource* CD into the CD drive and a 64-MB USB key into a USB port.
- 2 Click **Reinstallation utilities**, and then click **Dell PowerVault USB Key Preparation Utility** to install the utility.
- 3 After installation completes, double-click the **Dell PowerVault USB Key Preparation Utility** icon on the Windows desktop.

 **NOTE:** Always check support.dell.com for diagnostics updates for your NAS system. If an updated version is available, replace the contents of the **diags** folder on the USB key with the new files. Do not modify the existing directory structure.

- 4 In the **Dell PowerVault USB Key Preparation Utility** window, click a key in the **Detected USB Key** list and then click **Prepare USB Key**.
- 5 When you receive a message that the key preparation is complete, click **OK**.
- 6 Click the **Safely Remove Hardware** icon on the Windows toolbar and then click **Safely remove Mass Storage Device**.
- 7 Remove the key from the system.
- 8 On the NAS system, change the System Setup settings so that the NAS system boots first from the **Hard-disk-emulated USB flash drive**.

See your system's *User's Guide* for information on how to change the boot order and other system settings.

- 9 Insert the USB key into one of the USB ports on the NAS system.

- 10 Reboot the NAS system.
- 11 When the **USB Key** menu appears, press <2> and then press <Enter>.

When you start the system diagnostics, a message is displayed stating that the diagnostics are initializing. Next, the diagnostics **Main Menu** window appears. The window allows you to run all or specific diagnostics tests or to exit the system diagnostics.

System Diagnostics Testing Options

Click the testing option in the **Main Menu** window. Table 4-1 provides a brief explanation of testing options.

Table 4-1. System Diagnostics Testing Options

Testing Option	Function
Express Test	Performs a quick check of the system. This option runs device tests that do not require user interaction. Use this option to quickly identify the source of your problem.
Extended Test	Performs a more thorough check of the system. This test can take an hour or longer.
Custom Test	Tests a particular device.
Information	Displays test results.

Using the Custom Test Options

When you select **Custom Test** in the **Main Menu** window, the **Customize** window appears and allows you to select the device(s) to be tested, select specific options for testing, and view the test results.

Selecting Devices for Testing

The left side of the **Customize** window lists devices that can be tested. Devices are grouped by device type or by module, depending on the option you select. Click the (+) next to a device or module to view its components. Click (+) on any component to view the tests that are available. Clicking a device, rather than its components, selects all of the components of the device for testing.

Selecting Diagnostics Options

Use the **Diagnostics Options** area to select how you want to test a device. You can set the following options:

- **Non-Interactive Tests Only** — When checked, runs only tests that require no user intervention.

- **Quick Tests Only** — When checked, runs only the quick tests on the device. Extended tests will not run when you select this option.
- **Show Ending Timestamp** — When checked, time stamps the test log.
- **Test Iterations** — Selects the number of times the test is run.
- **Log output file pathname** — When checked, enables you to specify where the test log file is saved.

Viewing Information and Results

The tabs in the **Customize** window provide information about the test and the test results. The following tabs are available:

- **Results** — Displays the test that ran and the result.
- **Errors** — Displays any errors that occurred during the test.
- **Help** — Displays information about the currently selected device, component, or test.
- **Configuration** — Displays basic configuration information about the currently selected device.
- **Parameters** — If applicable, displays parameters that you can set for the test.

Troubleshooting Your System

Safety First—For You and Your System

To perform certain procedures in this document, you must remove the system cover and work inside the system. While working inside the system, do not attempt to service the system except as explained in this guide and elsewhere in your system documentation.



CAUTION: Always follow the instructions closely, and ensure that you review all information in "Safety Instructions" in the *System Information Guide*.



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

External Connections

Loose or improperly connected cables are the most likely source of problems for the system, monitor, and other peripherals (such as a keyboard, mouse, or other external device). Ensure that all external cables are securely attached to the external connectors on your system. See Figure 2-1 and Figure 2-2 for the front- and back-panel connectors on your system.

Checking Basic Power Problems

- 1 If the power indicator on the bezel does not indicate that power is available to the system, ensure that the power cable is securely connected to the power supply.
- 2 If the system is connected to a PDU or UPS, turn the PDU or UPS off and then on.
- 3 If the PDU or UPS is not receiving power, plug it into another electrical outlet. If it still is not receiving power, try another PDU or UPS.
- 4 Reconnect the system to the electrical outlet and turn on the system.
- 5 If the system still is not working properly, see "Troubleshooting the Power Supply."

Start-Up Routine

Look and listen during the system's start-up routine for the indications described in Table 5-1.

Table 5-1. Start-Up Routine Indications

Look/listen for:	Action
An error message displayed on the monitor.	See "System Messages" in "Indicators, Codes, and Messages."
A series of beeps emitted by the system.	See "System Beep Codes" in "Indicators, Codes, and Messages."
Alert messages from the systems management software.	See the systems management software documentation.
The monitor's power indicator.	See "Troubleshooting the Video Subsystem."
The keyboard indicators.	See "Troubleshooting the Keyboard."
The hard-drive status and activity indicators.	See "Troubleshooting Hard Drives."
An unfamiliar constant scraping or grinding sound when you access a drive.	See "Getting Help."

Checking the Equipment

This section provides troubleshooting procedures for external devices attached to the system, such as the monitor, keyboard, or mouse. Before you perform any of the procedures, see "External Connections."

Troubleshooting the Video Subsystem

Problem

- Monitor is not working properly.
- Video memory is faulty.

Action

- 1 Check the system and power connections to the monitor.
- 2 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running System Diagnostics."

If the tests run successfully, the problem is not related to video hardware. See "Finding Software Solutions."

If the tests fail, see "Getting Help."

Troubleshooting the Keyboard

Problem

- System message indicates a problem with the keyboard.
- Keyboard is not functioning properly.

Action

- 1** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running System Diagnostics."
If the test fails, continue to the next step.
- 2** Examine the keyboard and its cable for signs of damage.
If the keyboard is not damaged, go to step 4.
If the keyboard is damaged, continue to the next step.
- 3** Swap the faulty keyboard with a working keyboard.
If the problem is resolved, replace the faulty keyboard. See "Getting Help."
- 4** Run the keyboard test in the system diagnostics. See "Running the System Diagnostics."
If the test fails, see "Getting Help."

Troubleshooting the Mouse

Problem

- System message indicates a problem with the mouse.
- Mouse is not functioning properly.

Action

- 1** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running System Diagnostics."
If the test fails, continue to the next step.
- 2** Examine the mouse and its cable for signs of damage.
If you are using a USB mouse and it is not damaged, go to step 4.
If you are using a PS/2 mouse and it is not damaged, go to step 5.
If the mouse is damaged, continue to the next step.
- 3** Swap the faulty mouse with a working mouse.
If the problem is resolved, replace the faulty mouse. See "Getting Help."

- 4 Enter the System Setup program and ensure that the USB ports are enabled. See "Using the System Setup Program" in your *User's Guide*.
If the problem is not resolved, continue to the next step.
- 5 Run the pointing devices test in the system diagnostics. See "Running the System Diagnostics."
If the test fails, see "Getting Help."

Troubleshooting Basic I/O Functions

Problem

- Error message indicates a problem with a serial port.
- Device connected to a serial port is not operating properly.

Action

- 1 Enter the System Setup program and ensure that the serial port(s) are enabled. See "Using the System Setup Program" in the *User's Guide*.
- 2 If the problem is confined to a particular application, see the application documentation for specific port configuration requirements that the program may require.
- 3 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running System Diagnostics."
If the tests run successfully but the problem persists, see "Troubleshooting a Serial I/O Device."

Troubleshooting a Serial I/O Device

Problem

- Device connected to the serial port is not operating properly.

Action

- 1 Turn off the system and any peripheral devices connected to the serial port.
- 2 Swap the serial interface cable with a working cable, and turn on the system and the serial device.
If the problem is resolved, replace the interface cable. See "Getting Help."
- 3 Turn off the system and the serial device, and swap the device with a comparable device.
- 4 Turn on the system and the serial device.
If the problem is resolved, replace the serial device. See "Getting Help."
If the problem persists, see "Getting Help."

Troubleshooting a USB Device

Problem

- System message indicates a problem with a USB device.
- Device connected to a USB port is not operating properly.

Action

- 1** Enter the System Setup program, and ensure that the USB ports are enabled. See "Using the System Setup Program" in your *User's Guide*.
- 2** Turn off the system and any USB devices.
- 3** Disconnect the USB devices, and connect the malfunctioning device to the other USB connector.
- 4** Turn on the system and the reconnected device.
If the problem is resolved, the USB connector might be defective. See "Getting Help."
- 5** If possible, swap the interface cable with a working cable.
If the problem is resolved, replace the interface cable. See "Getting Help."
- 6** Turn off the system and the USB device, and swap the device with a comparable device.
- 7** Turn on the system and the USB device.
If the problem is resolved, replace the USB device. See "Getting Help."
If the problem persists, see "Getting Help."

Troubleshooting a Network Adapter

Problem

- Network adapter cannot communicate with network.

Action

- 1** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running System Diagnostics."
If the tests fail, continue to the next step.

- 2 Check the appropriate indicator on the NIC connector. See Table 2-2 in "Indicators, Messages, and Codes."
 - If the link indicator does not light, check all cable connections.
 - If the activity indicator does not light, the network driver files might be damaged or missing.
Remove and reinstall the drivers if applicable. See the network adapter's documentation.
 - Change the autonegotiation setting, if possible.
 - Use another connector on the switch or hub.
- 3 Ensure that the appropriate drivers are installed and the protocols are bound. See the network adapter's documentation.
- 4 Enter the System Setup program and confirm that the network adapters are enabled. See "Using the System Setup Program" in your *User's Guide*.
- 5 Ensure that the network adapters, hubs, and switches on the network are all set to the same data transmission speed. See the network equipment documentation.
- 6 Ensure that all network cables are of the proper type and do not exceed the maximum length. See "Network Cable Requirements" in your *User's Guide*.


Responding to a Systems Management Software Alert Message

Systems management software monitors critical system voltages and temperatures, fans, and hard drives in the system. Alert messages appear in the **Alert Log** window. For information about the **Alert Log** window, see the systems management software documentation on your *Resource CD* or at support.dell.com.

Inside the System

In Figure 5-1, the bezel and system cover are removed to provide an interior view of the system.

Figure 5-1. Inside the System

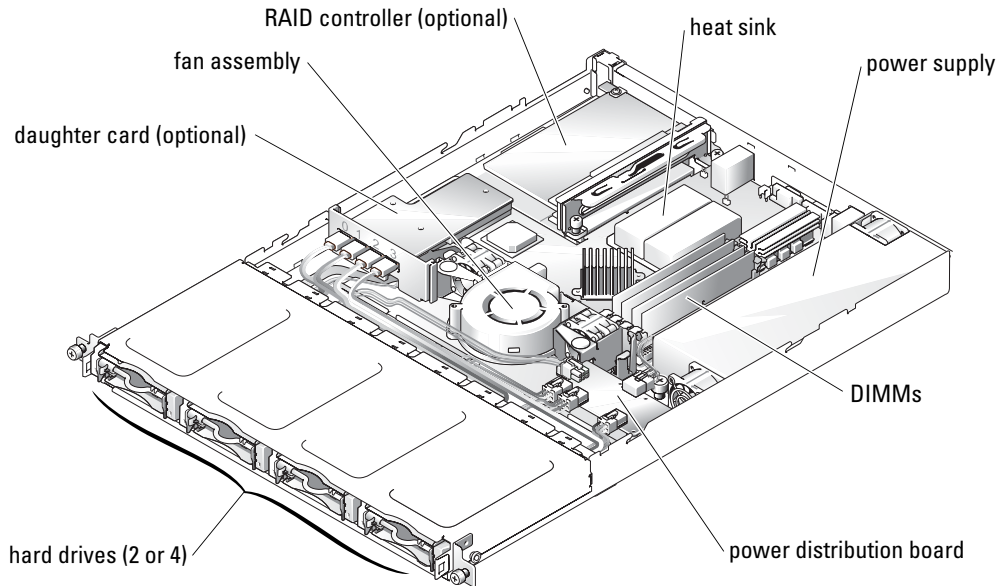


The system board holds the system's control circuitry and other electronic components. Several hardware options such as the processor and memory are installed directly on the system board. Using a riser board, the system can accommodate up to two expansion cards. The upper slot supports PCI 32-bit, 33-MHz (5.0-V) expansion cards and the lower slot supports PCI-X 64-bit, 66-MHz (3.3-V) expansion cards.

NOTE: The connectors on 64-bit cards are longer than the 32-bit PCI connector in the system. However, as long as the card is installed properly, the card will still function.

The hard-drive bays provide space for up to four SATA hard drives. Power is supplied to the system board, hard drives, and internal peripherals through a single nonredundant power supply.

Removing and Replacing the Bezel

To access the hard drives or the front USB connector, you must first remove the system's bezel. To remove the bezel, push the bezel release latches inward and pull the bezel away from the system. See Figure 5-2.

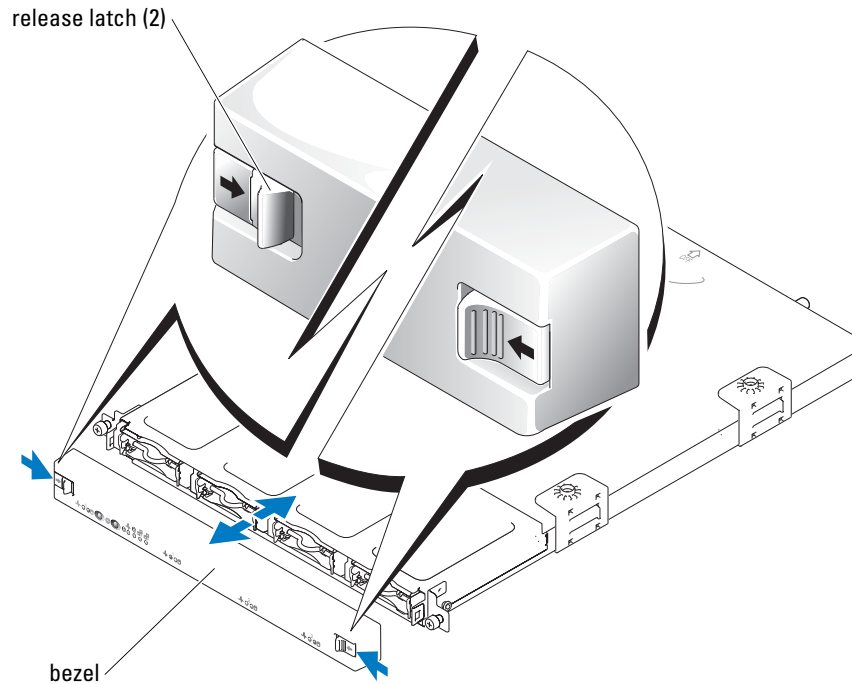
Figure 5-2. Installing and Removing the Bezel

To replace the bezel, push the latches inward, place the bezel on the front of the system and release the latches.

Opening the System

- 1 Observe the precautions in "Safety First—For You and Your System."
- 2 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 3 To remove the system cover, loosen the two captive screws at the back of the system. See Figure 5-3.
- 4 While pressing down on the cover indentation, slide the cover backward about an inch, and grasp the cover on both sides.
- 5 Carefully lift the cover away from the system.

Figure 5-3. Installing and Removing the System Cover

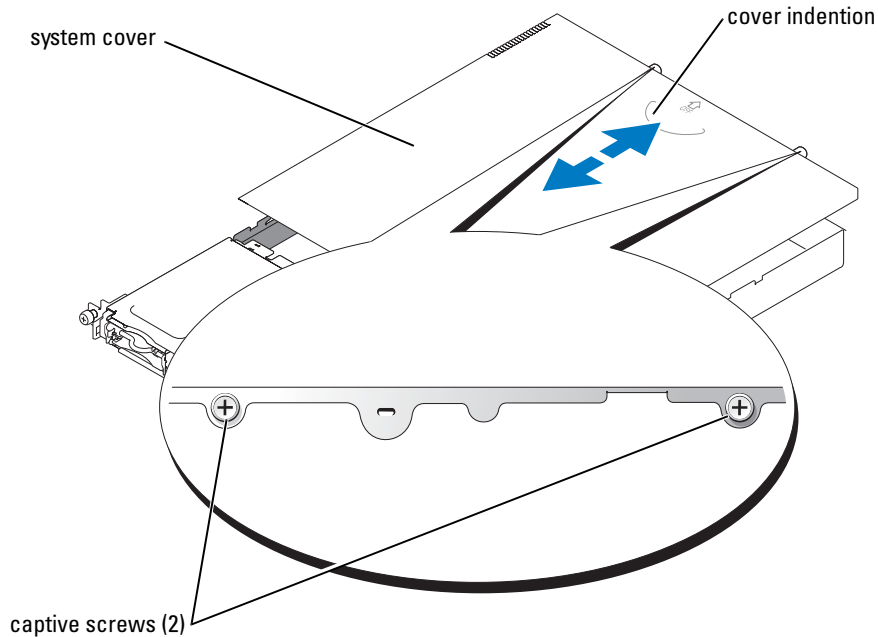

Closing the System

- 1 Ensure that you did not leave tools or parts inside the system.
- 2 Place the cover over the sides of the chassis, and slide the cover forward. See Figure 5-3.
- 3 Tighten the two captive screws at the back of the system to secure the cover.
- 4 Replace the bezel. See "Removing and Replacing the Bezel."
- 5 Reconnect the system to the electrical outlet, and turn on the system.

Troubleshooting a Wet System

Problem

- Liquid spilled on the system.
- Excessive humidity.

Action

 **CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.**

- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Open the system. See "Opening the System."
- 3 Remove all expansion cards installed in the system. See "Installing and Removing a CERC SATA RAID Controller" in "Installing System Options."
- 4 Let the system dry thoroughly for at least 24 hours.
- 5 Close the system. See "Closing the System."
- 6 Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
If the system does not start properly, see "Getting Help."
- 7 If the system starts properly, shut down the system and reinstall all of the expansion cards that you removed. See "Installing an Expansion Card" in "Installing System Options."
- 8 Run the system board tests in the system diagnostics to confirm that the system is working properly. See "Running the System Diagnostics."
If the tests fail, see "Getting Help."

Troubleshooting a Damaged System

Problem

- System was dropped or damaged.

Action



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System."
- 2 Ensure that the following components are properly installed:
 - Expansion cards
 - Power supply
 - Fans
 - Hard drive connections
- 3 Ensure that all cables are properly connected.
- 4 Close the system. See "Closing the System."
- 5 Run the system board tests in the system diagnostics. See "Running the System Diagnostics." If the tests fail, see "Troubleshooting the System Board."

Troubleshooting the System Battery

Problem

- System message indicates a problem with the battery.
- System Setup program loses system configuration information.
- System date and time do not remain current.



NOTE: If the system is turned off for long periods of time (for weeks or months), the NVRAM may lose its system configuration information. This situation is caused by a defective battery.

Action

- 1 Re-enter the time and date through the System Setup program. See "Using the System Setup Program" in your *User's Guide*.
- 2 Turn off the system and disconnect it from the electrical outlet for at least one hour.
- 3 Reconnect the system to the electrical outlet and turn on the system.
- 4 Enter the System Setup program.

If the date and time are not correct in the System Setup program, replace the battery. See "System Battery" in "Installing System Components."

If the problem is not resolved by replacing the battery, see "Getting Help."



NOTE: Some software may cause the system time to speed up or slow down. If the system seems to operate normally except for the time kept in the System Setup program, the problem may be caused by software rather than by a defective battery.

Troubleshooting the Power Supply

Problem

- The power LED on the front of the system is not lit.

Action

- 1 Check the connection of the power cable to the power supply and the outlet.
- 2 Remove the bezel. See "Removing and Replacing the Bezel."
- 3 Turn on the system.
If the problem is not resolved, continue to the next step.
- 4 Open the system. See "Opening the System."
- 5 Ensure that the power supply cable is properly connected to the backplane board.
- 6 Close the system. See "Closing the System."

If the problem is still not resolved, replace the power supply. See "Power Supply" in "Installing System Components."

Troubleshooting System Cooling Problems

Problem

- Systems management software issues a fan-related error message.

Action

Ensure that none of the following conditions exist:

- Ambient temperature is too high.
- External airflow is obstructed.
- Cables inside the system obstruct airflow.
- An individual cooling fan has failed. See "Troubleshooting a Fan."

Troubleshooting a Fan

Problem

- System-status indicator is amber.
- Systems management software issues a fan-related error message.

Action

- 1 Run the appropriate diagnostic test. See "Using Server Administrator Diagnostics" in Running System Diagnostics."



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 2 Open the system. See "Opening the System."
- 3 Ensure that the fan assembly's power cable is firmly attached to the fan power connector on the system board. See "Fan Assembly" in "Installing System Components."



NOTE: Wait 30 seconds for the system to recognize the fans and determine whether it is working properly.

- 4 If the problem is not resolved, install a new fan assembly. See "Fan Assembly" in "Installing System Components."

If the replacement fan assembly is working properly, close the system. See "Closing the System."

If the replacement fan assembly does not operate, see "Getting Help."

Troubleshooting Hard Drives

Problem

- Faulty hard drive.
- Damaged or improperly connected hard-drive cables.

Action



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.



NOTICE: This troubleshooting procedure can destroy data stored on the hard drive. Before you proceed, back up all files on the hard drive.

- 1 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running the System Diagnostics."

If the test fails, continue to the next step.

- 2 Enter the System Setup program and verify that the system is configured correctly. See "Using the System Setup Program" in your *User's Guide*.
- 3 Run the hard drive tests in the system diagnostics. See "Running the System Diagnostics."
If the tests fail, continue to the next step.
- 4 Open the system. See "Opening the System."

- 5 Ensure that the hard-drive interface cable is properly connected between the drive and the daughter card and/or RAID controller.
To identify system board connectors, see Figure A-3.
- 6 If the hard drive is the boot drive, ensure that the drive is configured and connected properly. See "Configuring the Boot Drive" in "Installing Drives."
- 7 Ensure that the power cable is properly connected to the drive.
- 8 Close the system. See "Closing the System."

Troubleshooting Expansion Cards



NOTE: When you are troubleshooting an expansion card, see the documentation for your operating system and the expansion card.

Problem

- Error message indicates a problem with an expansion card.
- Expansion card performs incorrectly or not at all.

Action

- 1 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running System Diagnostics."



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 2 Open the system. See "Opening the System."
- 3 Ensure that each expansion card is firmly seated in its connector. See "Expansion Cards" in "Installing System Components."
- 4 Close the system. See "Closing the System."
- 5 Run the appropriate tests in the system diagnostics. See "Running the System Diagnostics." If the problem persists, continue to the next step.
- 6 Open the system. See "Opening the System."
- 7 Remove all expansion cards installed in the system. See "Installing and Removing a CERC SATA RAID Controller" in "Installing System Components."
- 8 Close the system. See "Closing the System."
- 9 Run **Quick Tests** in the system diagnostics.
If the tests fail, see "Getting Help."

10 For each expansion card that you removed in step 7, perform the following steps:

- a** Open the system. See "Opening the System."
- b** Reinstall one of the expansion cards.
- c** Close the system. See "Closing the System."
- d** Run the appropriate tests in the system diagnostics.
If the tests fail, see "Getting Help."

If you reinstall all of the expansion cards and the tests fail, see "Getting Help."

Troubleshooting System Memory

Problem

- Faulty memory module.
- Faulty system board.

Action



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1** Ensure that the memory modules are properly installed. See "Memory Module Installation Guidelines" in "Installing System Components."
- 2** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" in "Running System Diagnostics."

If the test fails, continue to the next step.

- 3** Reboot the system.

If an error message does not appear, continue to the next step.

If an error message appears, go to step 5.

- 4** Enter the System Setup program and check the system memory setting. See "Using the System Setup Program" in your *User's Guide*.

If the amount of memory installed matches the system memory setting, go to step 12.


- 5** Open the system. See "Opening the System."
- 6** Reseat the memory modules in their sockets. See "Installing Memory Modules" in "Installing System Options."
- 7** Close the system. See "Closing the System."

- 8 Enter the System Setup program and check the system memory setting. See "Using the System Setup Program" in your *User's Guide*.

If the amount of memory installed does not match the system memory setting, then perform the following steps:

- a Turn off the system and attached peripherals, and disconnect the system from its electrical outlet.

- b Open the system. See "Opening the System."

 **NOTE:** Several configurations for memory modules exist; see "Memory Module Installation Guidelines" in "Installing System Options."

- c Swap the memory module in socket DIMM1_A with another of the same capacity. See "Installing Memory Modules" in "Installing System Options."

- d Close the system. See "Closing the System."

- 9 Reconnect the system to its electrical outlet, and turn on the system and attached peripherals.

- 10 As the system boots, observe the monitor screen and the indicators on the keyboard.

- 11 Repeat step 8 through step 10 for each memory module installed.

If the problem persists, see "Getting Help."

- 12 Run the system memory test in the system diagnostics. See "Running the System Diagnostics."

If the test fails, see "Getting Help."

Troubleshooting the Processor

Problem

- Error message indicates a processor problem.
- A heat sink is not installed for the processor.

Action



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Run the appropriate online diagnostics test. See "Using Server Administrator Diagnostics" in "Running the System Diagnostics."
- 2 Open the system. See "Opening the System."
- 3 Ensure that the processor and heat sink are properly installed. See "Replacing the Processor" in "Installing System Options."
- 4 Close the system. See "Closing the System."

- 5 Run **Quick Tests** in the system diagnostics. See "Running the System Diagnostics."
If the test fails, continue to the next step.
- 6 Open the system. See "Opening the System."
- 7 Replace the processor. See "Replacing the Processor."
- 8 Close the system. See "Closing the System."
- 9 Run **Quick Tests** in the system diagnostics. See "Running the System Diagnostics."
If the tests fail or the problem persists, see "Getting Help."

Troubleshooting the System Board

Problem

- Error message indicates a system board problem.

Action

- 1 Open the system. See "Opening the System."
- 2 Remove the expansion cards, if installed. See "Installing and Removing a CERC SATA RAID Controller" in "Installing System Components."
- 3 Close the system. See "Closing the System."
- 4 Run the system board tests in the system diagnostics. See "Running the System Diagnostics."
If the tests do not run successfully, see "Getting Help."
- 5 Open the system. See "Opening the System."
- 6 Reinstall the one of the expansion cards that you removed in step 2. See "Installing an Expansion Card" in "Installing System Components."
- 7 Close the system. See "Closing the System."
- 8 Run the system board tests again.
If the tests do not complete successfully, the expansion card might be faulty. See "Getting Help."

If the tests complete successfully, repeat step 5 through step 8 for the remaining expansion card, if applicable.


Installing System Components

This section describes how to install the following system components:

- Cooling shroud
- System battery
- Fan assembly
- Power supply
- Expansion cards
- Riser board
- System memory
- Control Panel Assembly
- SATA Cable Kits
- Processor
- System Board

System Board Components

When installing and replacing system board components, use Figure 6-1 to locate the components.

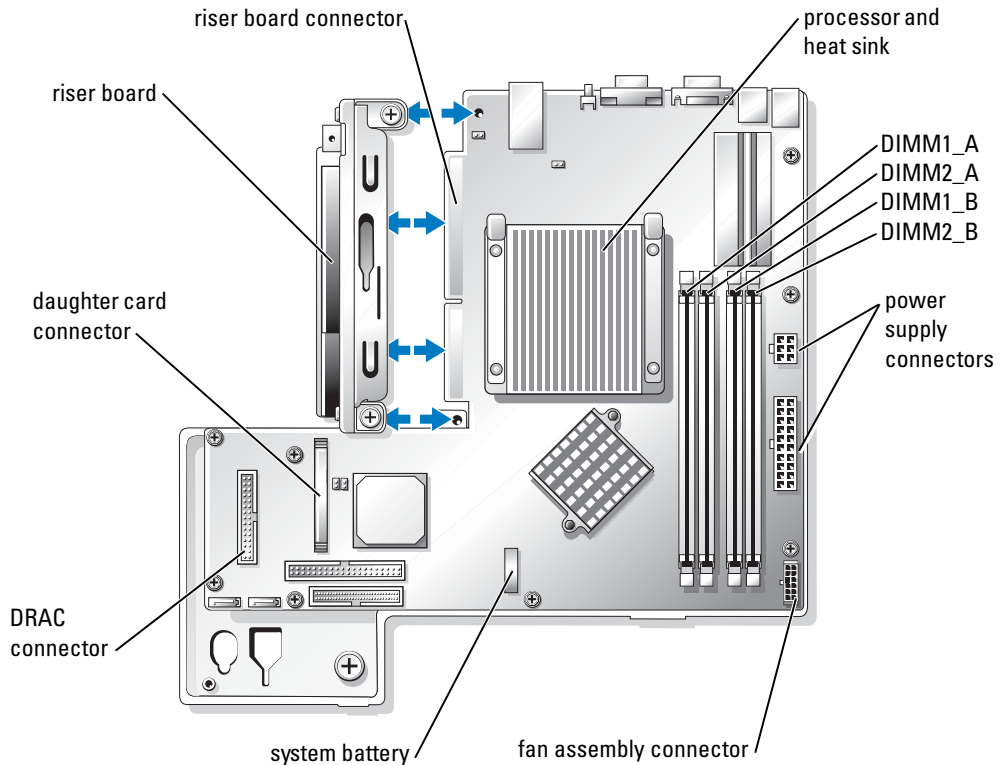Figure 6-1. System Board Components and Connectors

Cooling Shroud


The cooling shroud covers the processor and system battery. The shroud also directs air flow to the expansion cards and system memory.

Removing the Cooling Shroud

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 While grasping the cooling shroud, press the release latch and rotate away from the fan assembly. See Figure 6-2.
- 3 Remove the cooling shroud.

Figure 6-2. Installing and Removing the Cooling Shroud

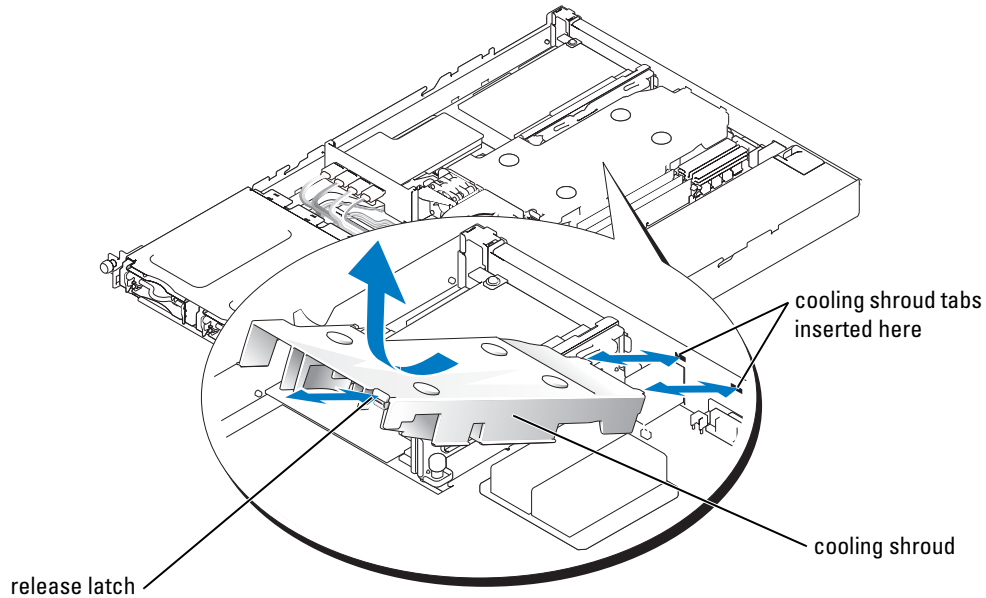

Installing the Cooling Shroud

- 1 Insert the two tabs of the cooling shroud into the back panel. See Figure 6-2.
- 2 Rotate the cooling shroud down until the release latch snaps into place securing the shroud to the fan assembly.
- 3 Close the system. See "Closing the System" in "Troubleshooting Your System."

System Battery

Replacing the System Battery

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Enter the System Setup program and, if possible, make a printed copy of the System Setup screens.
See "Using the System Setup Program" in the *User's Guide*.
- 2 Open the system. See "Opening the System" in "Troubleshooting Your System."
- 3 Remove the cooling shroud. See "Removing the Cooling Shroud."


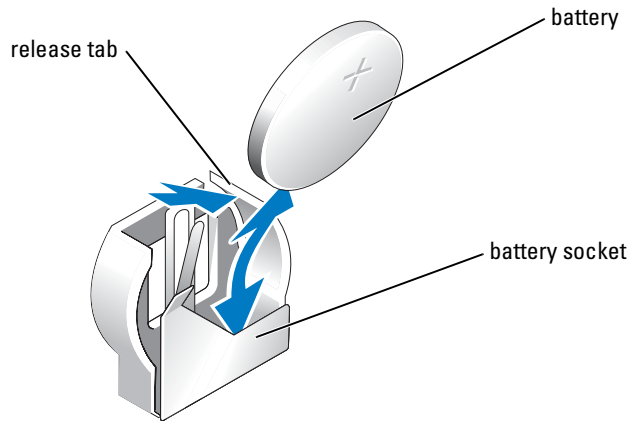
- 4 Locate the battery on the system board. See Figure A-3 for the battery location.
 - 5 Grasp the battery socket release tab with your fingers and gently pull out away from the battery to remove the battery from the battery socket. See Figure 6-3.
 - 6 Place the new battery in the battery socket as shown in Figure 6-3.
-  **NOTE:** The side of the battery labeled "+" must face toward the open side of the battery socket.

Figure 6-3. Replacing the Battery



- 7 Press the battery into the socket until it snaps into place.
- 8 Install the cooling shroud. See "Installing the Cooling Shroud."
- 9 Close the system. See "Closing the System" in "Troubleshooting Your System."
- 10 Enter the System Setup program to confirm that the battery operates properly.
- 11 From the main screen, select **System Time** to enter the correct time and date.
Also, re-enter any system configuration information that is no longer displayed on the System Setup screens, and then exit the System Setup program.
- 12 To test the newly installed battery, see "Troubleshooting the System Battery" in "Troubleshooting Your System."

Fan Assembly


The fan assembly contains three fans and provides cooling for the processor, memory modules, and expansion cards.

Removing the Fan Assembly

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in "Troubleshooting Your System."
- 2 Remove the cooling shroud. See "Removing the Cooling Shroud."
- 3 Remove the SATA cables from the daughter card. See "Removing a Daughter Card."
- 4 Remove the blue plastic SATA cable guide by pulling upwards and out of the system.
- 5 Disconnect the fan assembly's power cable from the system board. See Figure 6-4.
- 6 Remove the power distribution board. See "Removing the Power Distribution Board."
- 7 Disengage the three forward-facing snaps on the fan assembly.
- 8 While pressing the release levers on each end of the fan assembly, lift the fan assembly off the two securing posts and out of the chassis. See Figure 6-4.

Figure 6-4. Installing and Removing the Fan Assembly

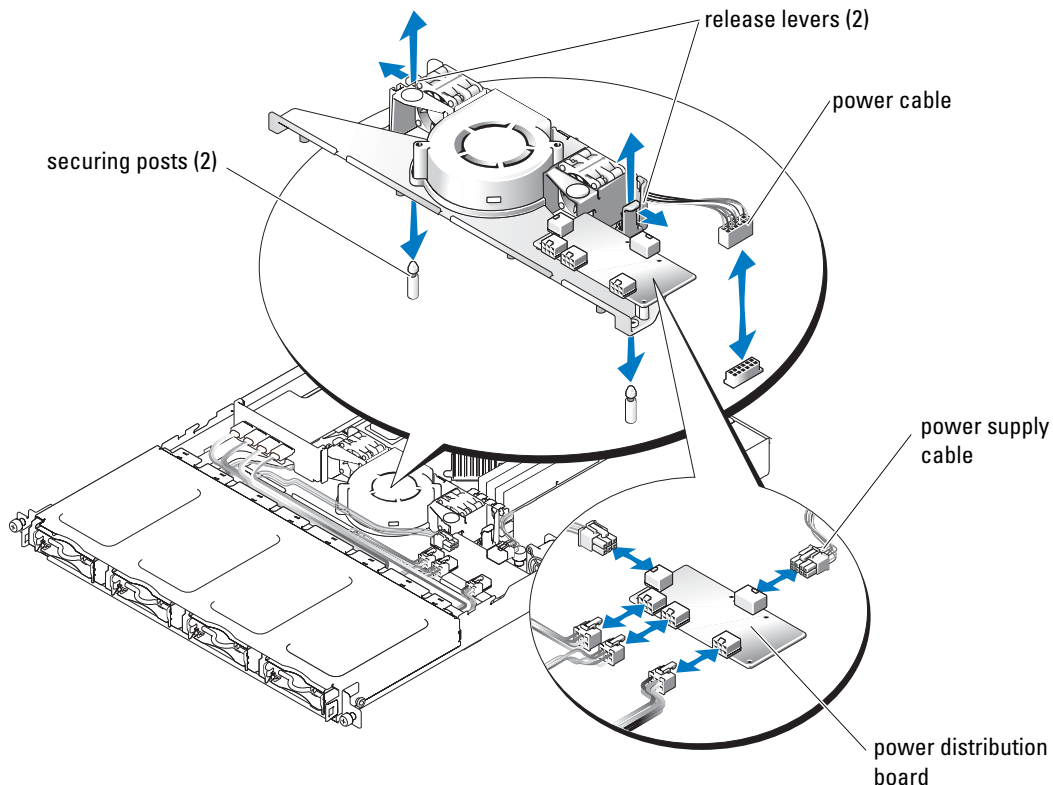

Installing the Fan Assembly

- 1 Align the holes in the fan assembly with the three fan assembly securing posts.
- 2 Lower the fan assembly until the release levers snap onto the securing posts.
- 3 Re-engage the three forward-facing snaps.
- 4 Install the power distribution board. See "Installing the Power Distribution Board."
- 5 Reconnect data and power connector cable to the hard drives.
- 6 Reconnect the fan assembly power cable to the connector on the system board. See Figure 6-4.
- 7 Install the cooling shroud. See "Installing the Cooling Shroud."
- 8 Close the system. See "Closing the System" in "Troubleshooting Your System."

Power Distribution Board

The system supports a power distribution board, which distributes power from the power supply to the hard drives.

Removing the Power Distribution Board




CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 Disconnect the hard drive connectors and power supply connectors from the power distribution board. See Figure 6-5.
- 3 Using a #2 Phillips screwdriver, remove the four screws that secure the power distribution board.
- 4 Lift the power distribution board out of the system.

Installing the Power Distribution Board

- 1 Align the four holes in the power distribution board with four mounting posts near the cooling fan.
- 2 Using a #2 Phillips screwdriver, install the four screws that secure the power distribution board.
- 3 Reconnect the connectors from the hard drives and the power supply to the power distribution board.
- 4 Close the system. See "Closing the System" in "Troubleshooting Your System."

Figure 6-5. Removing the Power Distribution Board

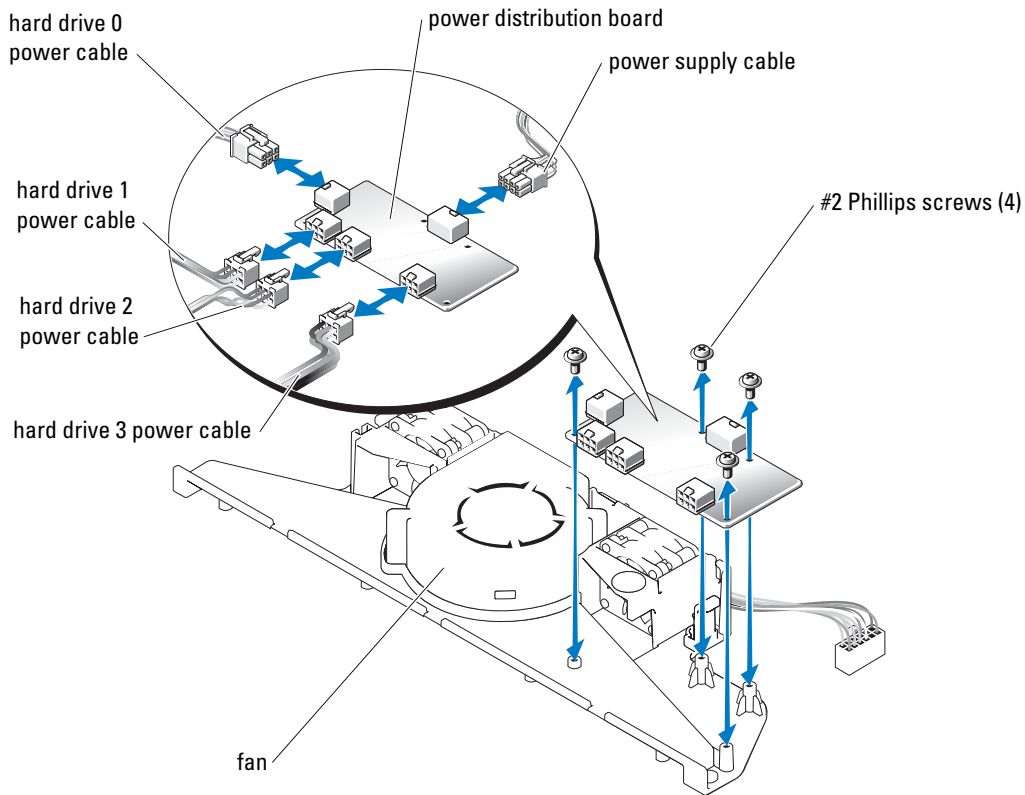

Power Supply

The system supports a single nonredundant power supply.


Removing the Power Supply

CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 Disconnect the following power supply cables:
 - a P3 from the power distribution board
 - b P2 from system board connector CN2
 - c P1 from system board connector CN1

- 3 Loosen the captive screw at the front of the power supply that secures the power supply to the chassis. See Figure 6-6.
- 4 Slide the power supply forward and lift straight up to remove the power supply from the chassis.

Figure 6-6. Installing and Removing the Power Supply

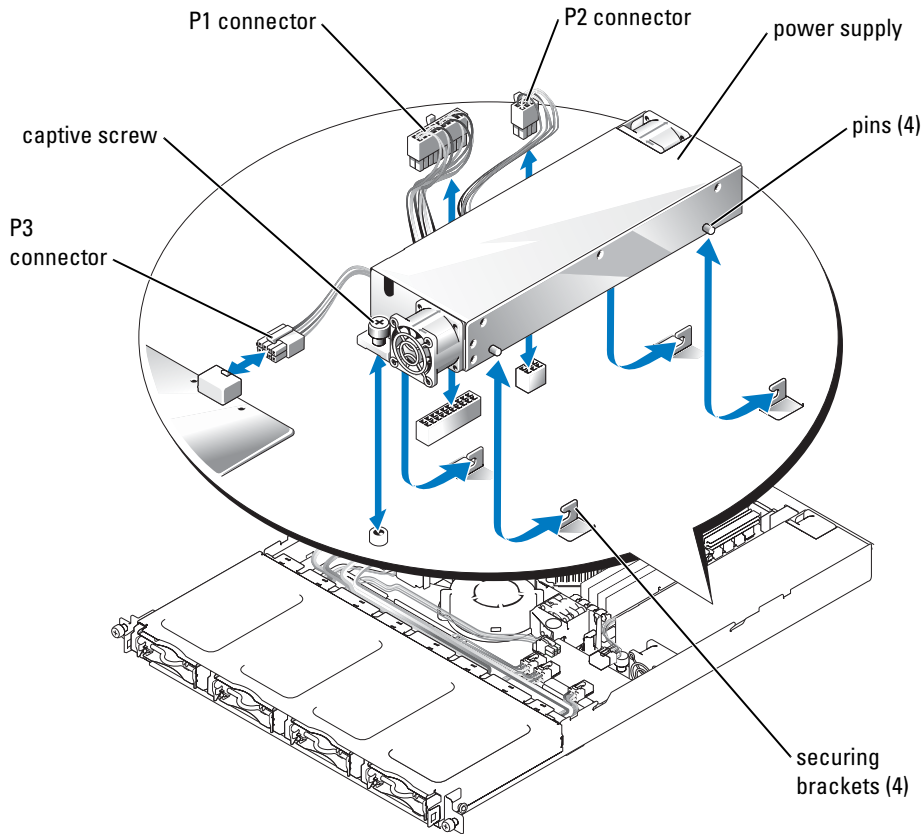


Installing the Power Supply

- 1 Lower the power supply into the chassis and slide it backward until the four pins on the power supply are engaged into the securing brackets.
- 2 Tighten the captive screw at the front of the power supply that secures the power supply to the chassis.

- 3 Connect the following power supply cables:
 - a P3 to the power distribution board
 - b P2 to the system board connector CN2
 - c P1 to the system board connector CN3
- 4 Close the system. See "Closing the System" in "Troubleshooting Your System."

Expansion Cards


The system supports up to two PCI expansion cards, which are installed in connectors on a riser board. The upper slot supports PCI 32-bit, 33-MHz (5.0-V) expansion cards and the lower slot supports PCI-X 64-bit, 66-MHz (3.3-V) expansion cards. See Figure A-4. If you are installing a remote access controller card, it must be installed in the upper slot of the riser board. Install most RAID and SCSI controller cards in the lower slot.

 **NOTE:** The connectors on 64-bit cards are longer than the 32-bit PCI connector in the system. However, as long as the card is installed properly, the card will still function.


Installing an Expansion Card

 **CAUTION:** See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 If you are installing a remote access controller card and a daughter card is installed, remove the daughter card. See "Removing a Daughter Card."
- 3 Remove the expansion-card retainer adjacent to the PCI slots. See Figure 6-7.
- 4 Remove the filler bracket on the slot you will be using.

 **NOTE:** Keep this bracket if you need to remove the expansion card. Filler brackets must be installed over empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

- 5 If you are installing a CERC SATA RAID controller or remote access controller, do the following as appropriate:
 - Connect the LED cable to bottom of the RAID controller. See Figure 6-8.
 - Connect the remote access controller cable to the bottom of the remote access controller. See Figure 6-9.
- 6 Insert the expansion card firmly into the expansion-card connector on the riser board until the card is fully seated, being careful not to remove the riser board from the system board.

 **NOTE:** Ensure that the expansion-card bracket is also inserted into the securing slot on the chassis's back panel.

- 7 Replace the expansion-card retainer. See Figure 6-7.

- 8 Connect any remaining internal or external cable(s) to the expansion card.
- 9 If installing a remote access controller, connect the cable to the remote access controller connector on the system board. See Figure 6-9.
- 10 Replace the daughter card if it was removed. See "Installing a Daughter Card."
- 11 Close the system. See "Closing the System" in "Troubleshooting Your System."

Figure 6-7. Installing and Removing Expansion Cards

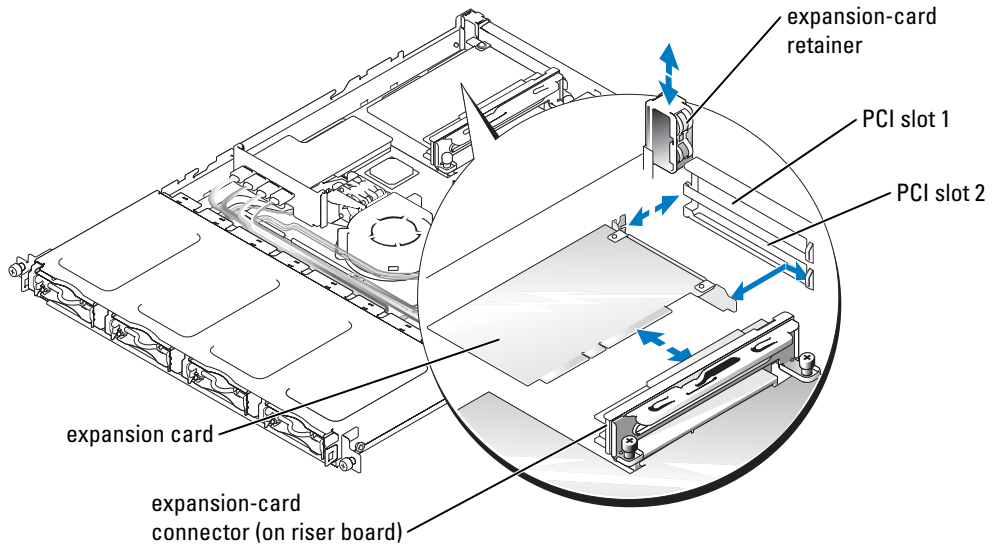


Figure 6-8. Installing and Removing a CERC SATA RAID Controller


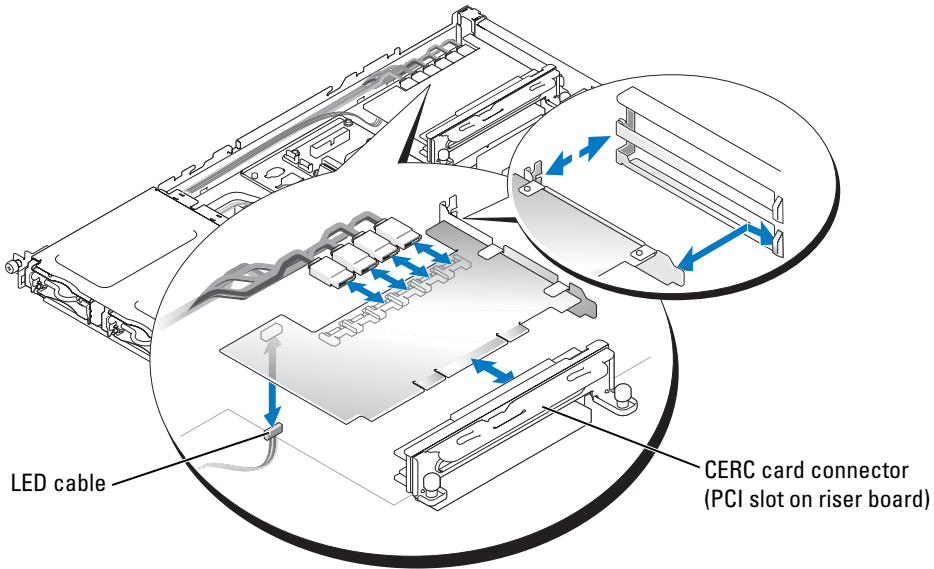


Figure 6-9. Installing and Removing a Remote Access Controller



Removing an Expansion Card

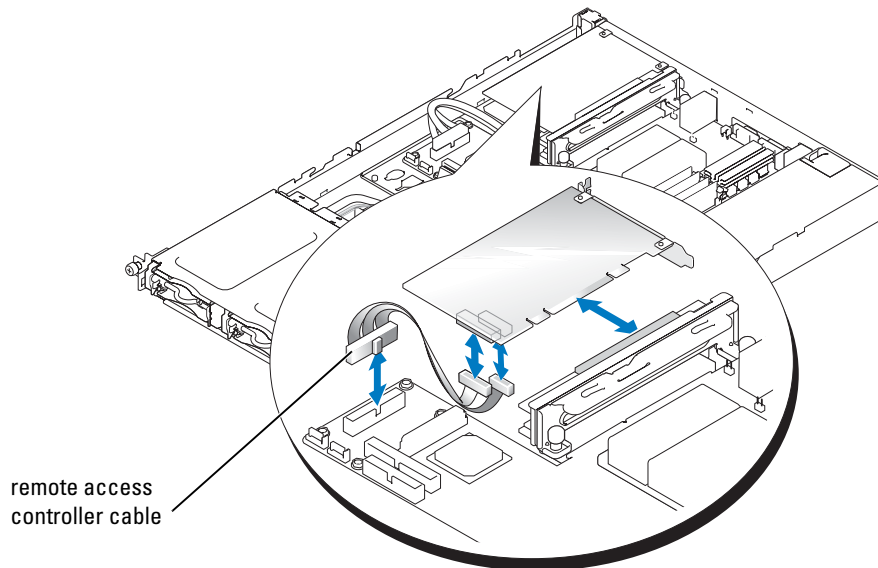

CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 If you are removing a remote access controller card, remove the daughter card. See "Removing a Daughter Card."
- 3 Disconnect any internal or external cable(s) that are connected to the expansion card.
- 4 Remove the expansion-card retainer adjacent to the PCI slots using your index finger and pulling upwards. See Figure 6-7.
- 5 Grasp the expansion card and carefully pull it away from the riser-board connector.
- 6 If you are permanently removing the card, replace the metal filler bracket over the empty card-slot opening.



NOTE: Filler brackets must be installed over empty expansion-card slots to maintain FCC certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

- 7 Replace the expansion-card retainer.
- 8 Replace the daughter card if it was removed. See "Installing a Daughter Card."
- 9 Close the system. See "Closing the System" in "Troubleshooting Your System."

Riser Board

The riser board provides two expansion-card slots.


Removing the Riser Board



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 Remove any expansion card(s). See "Installing and Removing a CERC SATA RAID Controller."
- 3 Loosen the two captive screws that secure the riser board to the system board. See Figure 6-10.
- 4 From the back of the system, slide the riser board to the right to disconnect the riser board from the system board, and lift the riser board out of the chassis.

Figure 6-10. Installing and Removing the Riser Board

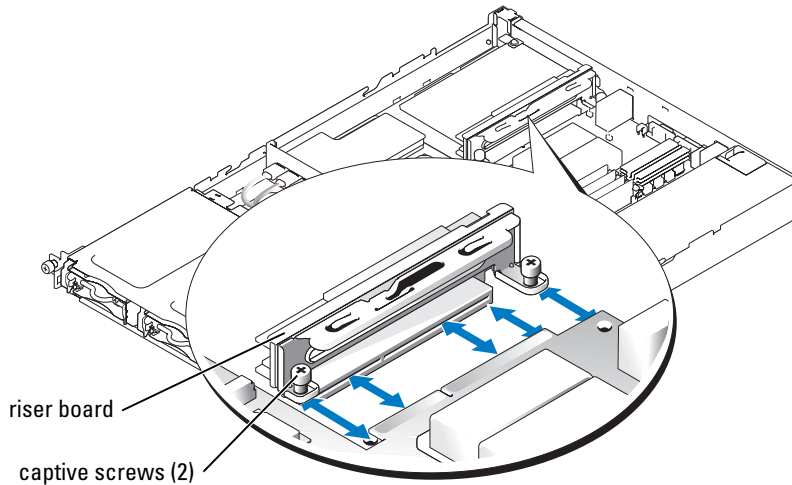

Installing the Riser Board

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.


- 1 Slide the riser board onto the system board. See Figure 6-10.
- 2 Tighten the two captive screws that secure the riser board to the system board. See Figure 6-10.
- 3 Install any expansion card(s). See "Installing an Expansion Card."
- 4 Close the system. See "Closing the System" in *Troubleshooting Your System*."

Daughter Card

The system uses a daughter card to support software RAID. Hardware RAID systems do not use a daughter card.

Removing a Daughter Card

- 1 Open the system. See "Opening the System" in *Troubleshooting Your System*."
- 2 Disconnect the hard-drive cables from the daughter card. See Figure 6-11.

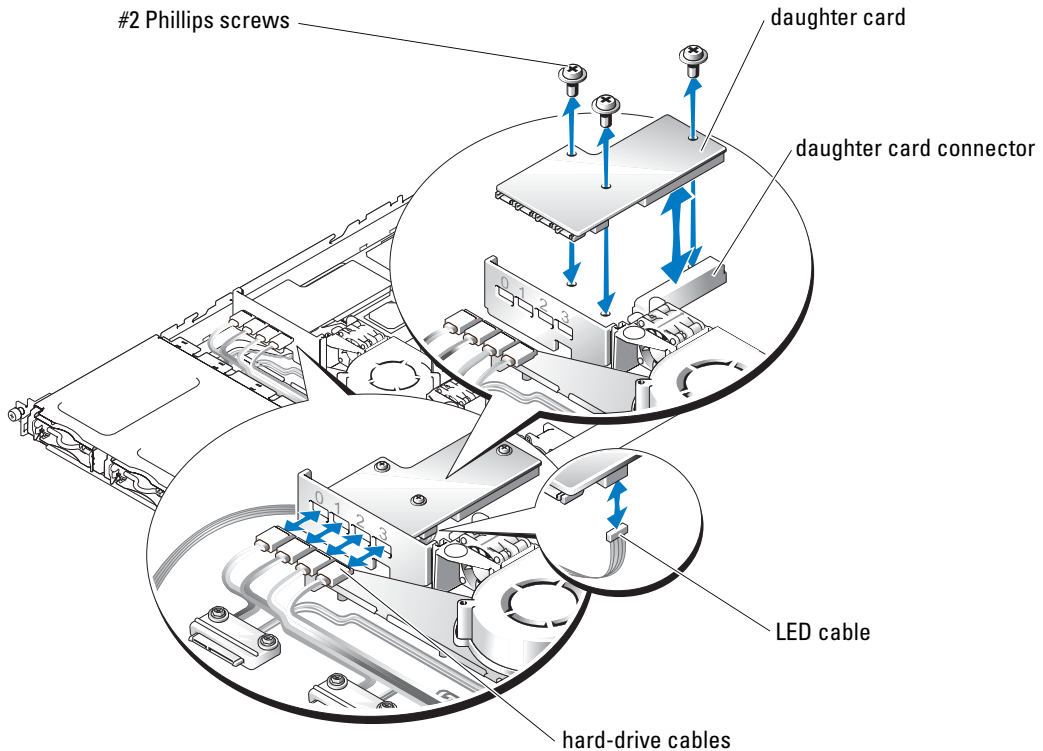Figure 6-11. Installing and Removing a Daughter Card

- 3 Grasp the daughter card and carefully pull it away from the system-board connector.
- 4 Disconnect the LED cable from the daughter card. See Figure 6-11.


Installing a Daughter Card

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 Connect the LED cable to the connector on the bottom of the daughter card. See Figure 6-11.
- 3 Use the #2 Phillips screws to secure the daughter card to the system board.
- 4 Insert the daughter card firmly into the connector on the system board until the card is fully seated.
- 5 Connect the hard-drive cables to the connectors on the daughter card.
Ensure that port 0 of the daughter card is connected to the cable for hard drive 0, port 1 is connected to the cable for hard drive 1, and so forth.
- 6 Close the system. See "Closing the System" in "Troubleshooting Your System."

System Memory

The four memory module sockets are located on the system board adjacent to the power supply and can accommodate from 512 MB to 4 GB of unbuffered ECC PC-3200 (DDR400) memory. See Figure 6-1 for the location of the memory module sockets.

You can upgrade the system memory by installing combinations of 256-, 512-MB, and 1-GB unbuffered memory modules. If you receive an error message stating that maximum memory has been exceeded, see "Indicators, Messages, and Codes" for more information. You can purchase memory upgrade kits from Dell.

 **NOTE:** The memory modules must be PC-3200 compliant.

Memory Module Installation Guidelines

The memory module sockets are arranged in banks (1 and 2) on two channels (A and B). See Figure A-3 for the location of the memory module sockets. The memory module banks must be installed in identical pairs.

The memory module banks are identified as follows:

- Bank 1: DIMM1_A and DIMM1_B
- Bank 2: DIMM2_A and DIMM2_B

For example, if socket DIMM1_A contains a 256-MB memory module, then socket DIMM1_B must contain a 256-MB memory module.

Table 6-1 shows examples of different memory configurations.

- If only one memory module is installed, it must be installed in the DIMM1_A socket.
- A bank must contain identical memory modules.
- Install the memory modules in bank 1 (DIMM1_x) before installing memory modules in bank 2 (DIMM2_x).
- Installing three memory modules is not supported.

Table 6-1. Sample Memory Module Configurations

Total Memory	DIMM1_A	DIMM2_A	DIMM1_B	DIMM2_B
512 MB	256 MB	None	256 MB	None
1 GB	256 MB	256 MB	256 MB	256 MB
1 GB	512 MB	None	512 MB	None
1.5 GB	512 MB	256 MB	512 MB	256 MB
2 GB	1 GB	None	1 GB	None
2 GB	512 MB	512 MB	512 MB	512 MB

Table 6-1. Sample Memory Module Configurations (continued)

Total Memory	DIMM1_A	DIMM2_A	DIMM1_B	DIMM2_B
3 GB	1 GB	512 MB	1 GB	512 MB
4 GB	1 GB	1 GB	1 GB	1 GB

Installing Memory Modules


- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 Locate the memory module sockets. See Figure 6-1.
- 3 Press the ejectors on the memory module socket down and out, as shown in Figure 6-12, to allow the memory module to be inserted into the socket.
- 4 Align the memory module's edge connector with the alignment keys of the memory module socket, and insert the memory module in the socket.



NOTE: The memory module socket has two alignment keys that allow you to install the memory module in the socket in only one way.

- 5 Press down on the memory module with your thumbs while pulling up on the ejectors with your index fingers to lock the memory module into the socket.
When the memory module is properly seated in the socket, the ejectors on the memory module socket align with the ejectors on the other sockets that have memory modules installed.
- 6 Repeat step 2 through step 5 of this procedure to install the remaining memory modules. See Table 6-1 for installing the total desired memory.
- 7 Close the system. See "Closing the System" in "Troubleshooting Your System."
- 8 (Optional) Press <F2> to enter the System Setup program, and check the **System Memory** setting on the main **System Setup** screen.
The system should have already changed the value to reflect the newly installed memory.
- 9 If the value is incorrect, one or more of the memory modules may not be installed properly. Repeat step 1 through step 8 of this procedure, checking to ensure that the memory modules are firmly seated in their sockets.
- 10 Run the system memory test in the system diagnostics. See "Running the System Diagnostics."

Figure 6-12. Installing and Removing a Memory Module

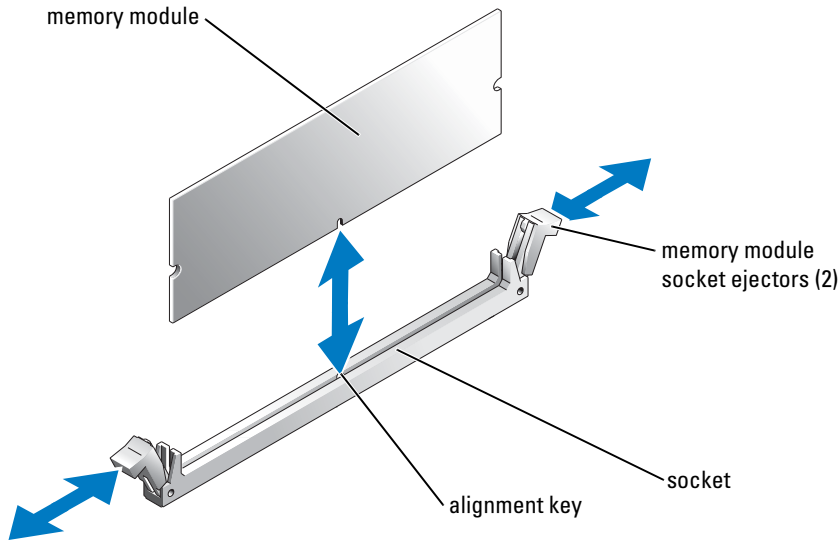

Removing Memory Modules

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."
- 2 Locate the memory module sockets. See Figure 6-1.
- 3 Press down and out on the ejectors on each end of the socket until the memory module pops out of the socket. See Figure 6-12.
- 4 Close the system. See "Closing the System" in "Troubleshooting Your System."

Control Panel


The following procedure documents the steps for removing and replacing the control panel.

Removing the Control Panel

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Dismount the system from the rack.
- 3 Remove the bezel.

Figure 6-13. Control Panel Removal

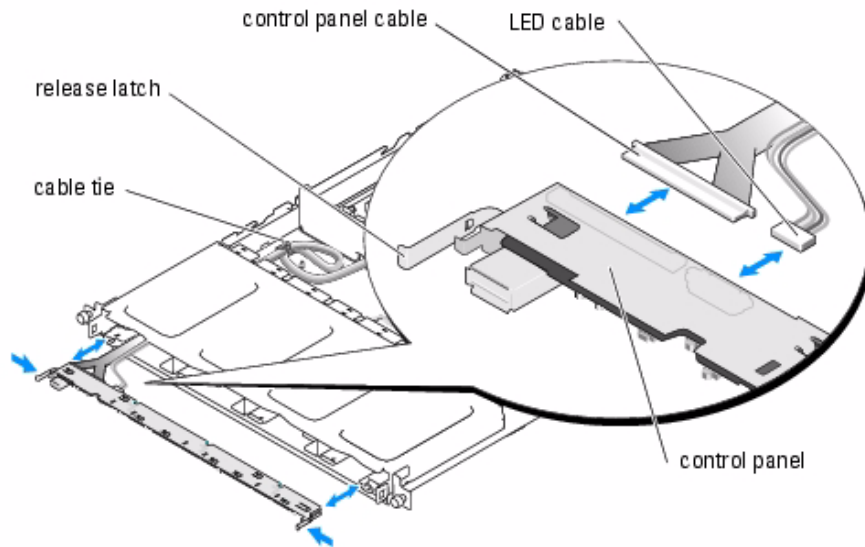

Installing the Control Panel

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Align the control panel and connect the control panel and LED cables to the control panel.
- 2 Carefully slide the control panel into the system until the release latches click. See Figure 6-13.
- 3 Replace all of the hard drive carriers in the system at their labeled locations.
- 4 Close the system.
 - a Ensure that you did not leave tools or parts inside the system.
 - b Place the cover over the sides of the chassis, and slide the cover forward.
 - c Tighten the two captive screws at the back of the system to secure the cover.
- 5 Reconnect the system to the electrical outlet, and turn on the system.
- 6 Replace the bezel.
 - a Push the latches on the bezel inward.
 - b Place the panel on the front of the system and release the latches.

SATA Cable Kits

Removing the SATA Cable Kits

 **CAUTION:** See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Dismount the system from the rack.
- 3 Remove the bezel.
 - a Push the bezel release latches inward.
 - b Pull the panel away from the system.
- 4 Open the system.
 - a Loosen the two captive screws at the back of the system.
 - b While pressing down on the cover indentation, slide the cover backward about an inch, and grasp the cover on both sides.
 - c Carefully lift the cover away from the system.
- 5 Disconnect the SATA data cables (0-3) from the daughter card.
- 6 Disconnect the power cables from the power distribution board.
- 7 Using a philips screwdriver, remove the two screws that secure the data and power cables (0-3) to the chassis.
- 8 Lift the assembly out of the chassis.

Processor

It is possible to upgrade your processor to take advantage of future options in speed and functionality. Each processor and its associated internal cache memory are contained in a pin grid array (PGA) package that is installed in a ZIF socket on the system board.


The following items are included in the processor upgrade kit:

- Processor
- Heat sink


Replacing the Processor

 **CAUTION:** See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Open the system. See "Opening the System" in Troubleshooting Your System."

- ➔ **NOTICE:** The processor and heat sink can become extremely hot. Be sure the processor has had sufficient time to cool before handling.
- 2 Remove the cooling shroud. See "Removing the Cooling Shroud."
 - 3 Pushing down with one hand on the securing clip's rubber-coated tab, use the other hand to slide the latch on the securing clip away from the heat-sink post to release the securing clip. See Figure 6-14.
 - 4 Remove the securing clip.
 - ➔ **NOTICE:** Never remove the heat sink from a processor unless you intend to remove the processor. The heat sink is necessary to maintain proper thermal conditions.
 - 5 Repeat step 3 and step 4 to remove the other securing clip.
 -  **NOTE:** When removing the heat sink, the possibility exists that the processor might adhere to the heat sink and be removed from the socket. It is recommended that you remove the heat sink while the processor is still warm.
 - 6 Remove the heat sink.
 - a Gently rotate the heat sink side-to-side before lifting the heat sink from the processor.
 - b If the processor is removed from the socket with the heat sink, twist or slide the processor off of the heat sink. Do not pry the processor off of the heat sink.
 - c Set the heat sink upside down so as not to contaminate the thermal grease.
 - 7 Pull the socket-release lever straight up until the processor is released from the socket. See Figure 6-15.
 - 8 Lift the processor out of the socket and leave the release lever up so that the socket is ready for the new processor.
 - ➔ **NOTICE:** Be careful not to bend any of the pins when removing the processor. Bending the pins can permanently damage the processor.
 - 9 Unpack the new processor.

If any of the pins on the processor appear bent, see "Getting Help."

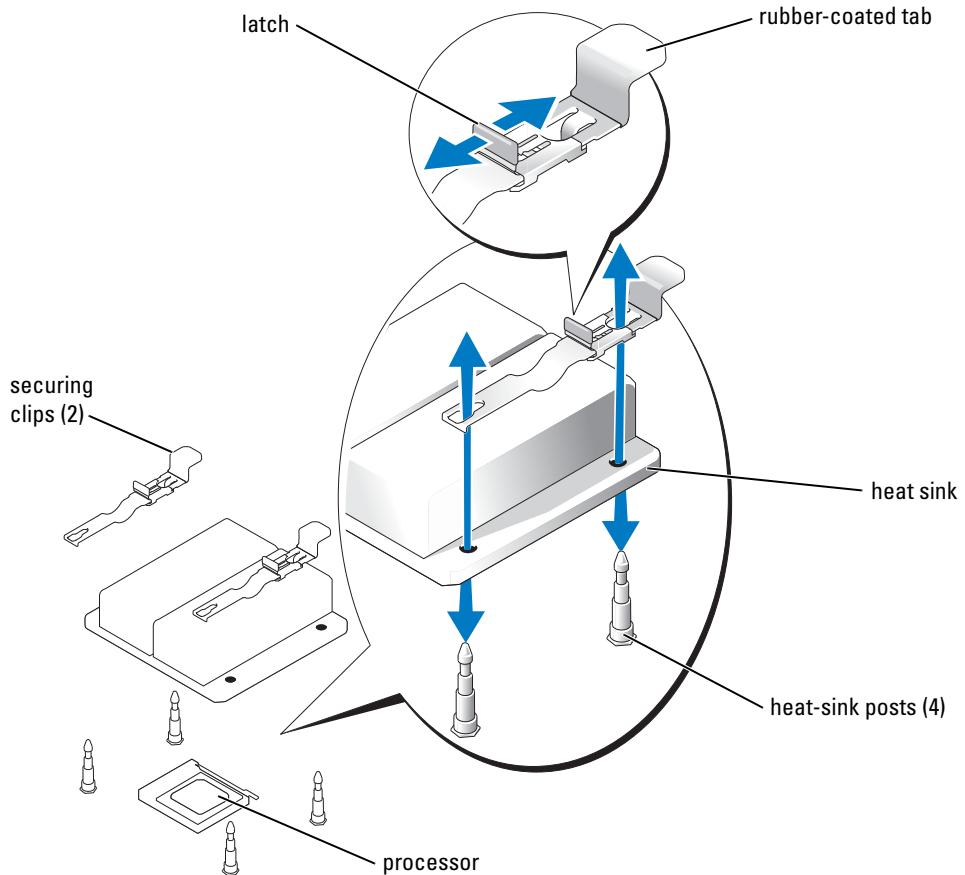Figure 6-14. Installing and Removing the Securing Clip


- 10** Align the pin-1 corner of the processor with the pin-1 corner of the ZIF socket. See Figure 6-15.

NOTE: Identifying the pin-1 corners is critical to positioning the processor correctly.

Identify the pin-1 corner of the processor by locating the tiny gold triangle on one corner of the processor. Place this corner in the same corner of the ZIF socket identified by a corresponding triangle.

- 11** Install the processor in the socket.

Figure 6-15. Installing and Removing the Processor in the Socket

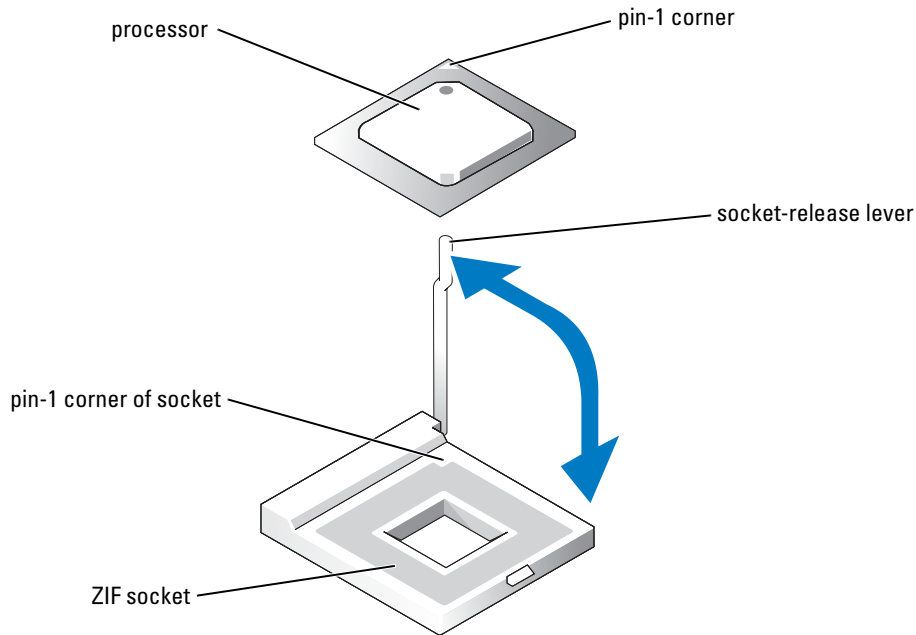

➔ **NOTICE:** Positioning the processor incorrectly can permanently damage the processor and the system when you turn it on. When placing the processor in the socket, be sure that all of the pins on the processor enter the corresponding holes. Be careful not to bend the pins.


If the release lever on the processor socket is not positioned all the way up, move it to that position.

With the pin-1 corners of the processor and socket aligned, set the processor lightly in the socket, making sure all pins are matched with the correct holes in the socket. Because the system uses a ZIF processor socket, do not use force, which could bend the pins if the processor is misaligned. When the processor is positioned correctly, it drops down into the socket with minimal pressure.

When the processor is fully seated in the socket, rotate the socket release lever back down until it snaps into place, securing the processor.


12 Install the heat sink.

a Using a clean lint-free cloth, remove the existing thermal grease from the heat sink.

 **NOTE:** Use the heat sink that you removed in step 6.

b Apply thermal grease evenly to the top of the processor.

c Align the holes on both sides of the heat sink with the heat-sink posts on the system chassis. See Figure 6-14.

- 13 Orient the securing clips so that the rubber-coated tabs are toward the back of the chassis.
 -  **NOTE:** If the securing clips are installed so that the rubber-coated tabs are toward the front of the system, the cooling shroud cannot be installed correctly.
- 14 Lower the end opposite of the rubber-coated tab of each securing clip over the heat-sink post, and then slide the securing clip toward the heat-sink post. See Figure 6-14.
- 15 While holding down the rubber-coated tab with one hand, push the latch on the securing clip toward the heat-sink post until it locks the clip onto the post.
- 16 Repeat step 14 and step 15 for the other securing clip.
- 17 Install the cooling shroud. See "Installing the Cooling Shroud."
- 18 Close the system. See "Closing the System" in "Troubleshooting Your System."

As the system boots, it detects the presence of the new processor and automatically changes the system configuration information in the System Setup program.
- 19 Press <F2> to enter the System Setup program, and check that the processor information matches the new system configuration.

See your *User's Guide* for instructions about using the System Setup program.
- 20 Run the system diagnostics to verify that the new processor operates correctly.

See "Running the System Diagnostics" for information about running the diagnostics and troubleshooting processor problems.

System Board

This section contains information on installing and removing the main system board. The system board and system board tray are removed and replaced as a single assembly.

Removing the System Board Assembly


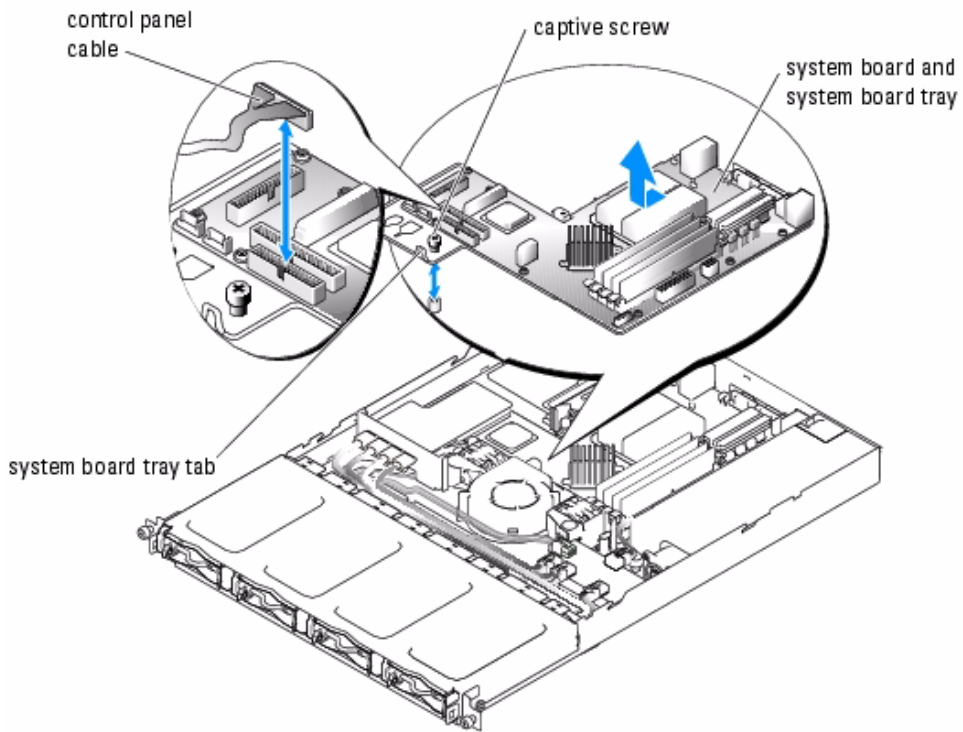




-  **CAUTION:** See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.
- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
 - 2 Dismount the system from the rack.
 - 3 Remove the bezel.
 - a Push the bezel release latches inward.
 - b Pull the bezel away from the system.
 - 4 Open the system.
 - a Loosen the two captive screws at the back of the system.

Figure 6-16. Removing the System Board and System Board Tray

Installing the System Board Assembly

⚠ CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Unpack the new system board assembly.
- 2 Align the system board tray so that the tabs on the chassis floor slide into the notches in the system board tray.
- 3 Slide the system board tray backward until it stops.
- 4 Using a #2 Phillips screwdriver, tighten the captive screw that secures the system board tray to the chassis. See Figure 6-16.
- 5 Install the power supply.
- 6 Install the fan assembly.

- 7 Connect the riser board.
- 8 Using a #2 Phillips screwdriver, tighten the two captive screws that secure the riser board to the system board.
- 9 Install any PCI expansion cards that you removed.
- 10 If this is a software RAID or external storage configuration system, install the daughter card.
- 11 Connect the hard-drive interface cables:
 - a If this is a software RAID or external storage configuration system, connect the cables from the daughter card.
 - b If this is a hardware RAID system, connect the cables from the CERC SATA RAID controller.
- 12 Install the processor.
- 13 Install the heat sink.
 - a Using a lint-free cloth, remove the existing thermal grease from the processor and heat sink.
 **NOTE:** Use the same heat sink that you removed from the processor.
 - b Apply thermal grease evenly to the top of the processor.
 - c Align the holes on both sides of the heat sink with the heat-sink posts on the system chassis.
- 14 Orient the securing clips so that the rubber-coated tabs are toward the back of the chassis.
 **NOTE:** If the securing clips are installed so that the rubber-coated tabs are toward the front of the system, the cooling shroud cannot be installed correctly.
- 15 Lower the end opposite of the rubber-coated tab of each securing clip over the heat-sink post, and then slide the securing clip toward the heat-sink post until they snap onto the post.
- 16 While holding down the rubber-coated tab with one hand, push the latch on the securing clip toward the heat-sink post until it locks the clip onto the post.
- 17 Repeat step 15 and step 16 for the other securing clip.
- 18 Install the memory modules.
 **NOTE:** Install the memory modules as noted in step 7 of the procedure in "Removing the System Board Assembly."
- 19 Connect the LED cable to the daughter card on software RAID or external storage configurations, or the CERC SATA RAID controller on hardware RAID systems.
- 20 Connect the control panel interface cable to the J7 connector on the system board.
- 21 Install the cooling shroud.
 **NOTE:** When installing the cooling shroud, ensure that the two tabs on the cooling shroud are inserted into the two retaining slots in the back panel.

- 22** Close the system.
 - a** Ensure that you did not leave tools or parts inside the system.
 - b** Place the cover over the sides of the chassis, and slide the cover forward.
 - c** Tighten the two captive screws at the back of the system to secure the cover.
- 23** Reconnect the system to the electrical outlet, and turn on the system.
- 24** Replace the bezel.
 - a** Push the latches on the bezel inward.
 - b** Place the panel on the front of the system and release the latches.

Installing Drives

The hard-drive bays provide space for up to four SATA hard drives. The hard drives must be connected to a CERC SATA RAID controller card or SATA daughter card.

Configuring the Boot Drive

The drive or device from which the system boots is determined by the boot order specified in the System Setup program. See "Using the System Setup Program" in your *User's Guide*. To boot the system from a hard drive or drive array, the drive(s) must be connected to the appropriate controller.


Removing a Hard Drive



CAUTION: See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.


- 1 Remove the bezel. See "Removing and Replacing the Bezel" in "Troubleshooting Your System."
- 2 Pull the release lever to the right and pull down the horizontal bar on the front of the carrier. See Figure 7-1.

Figure 7-1. Removing the Hard-Drive Carrier

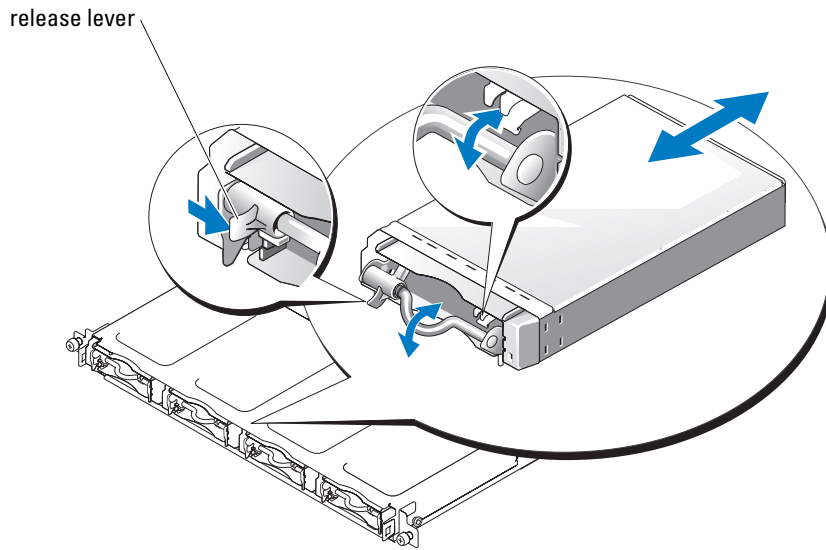

- 3** Slide the hard-drive carrier out of the chassis.
- 4** Using a #2 Phillips screwdriver, remove the four screws on the bottom of the carrier that secure the hard drive and remove the drive from the carrier. See Figure 7-2.

Figure 7-2. Removing the Hard Drive From the Drive Carrier

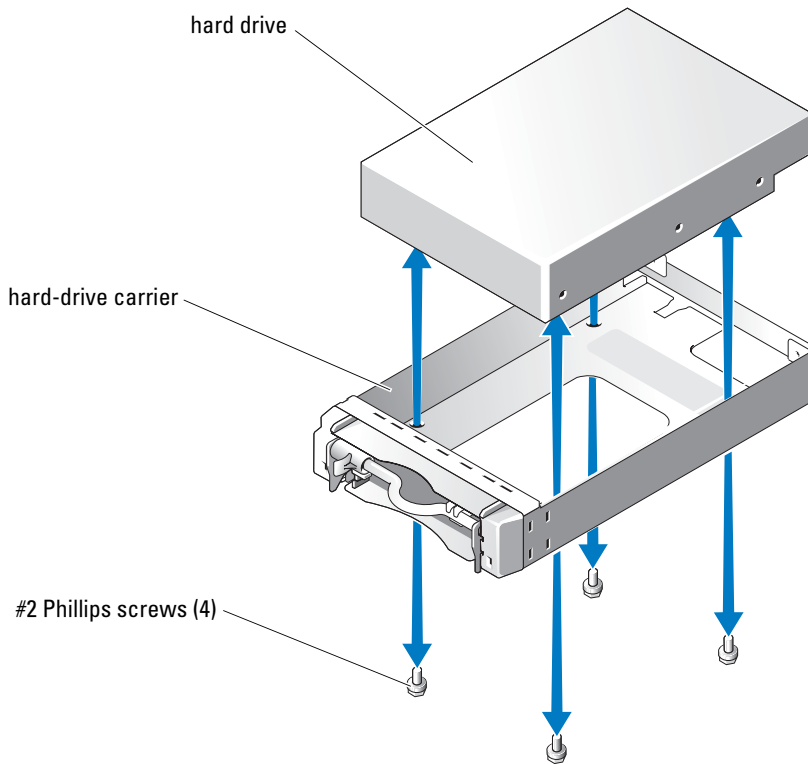

Installing a Hard Drive

- 1 Align the hard-drive mounting holes with the holes in the drive carrier.
- 2 Using a #2 Phillips screwdriver, install the four screws that secure the hard drive to the carrier. See Figure 7-2.
- 3 Align the hard-drive carrier in the hard drive bay of the chassis and slide the carrier forward until it stops.
- 4 Push the horizontal bar on the front of the carrier to the upright position.
- 5 Replace the bezel. See "Removing and Replacing the Bezel" in "Troubleshooting Your System."

Connecting Hard Drives for RAID

Your system supports the following three types of RAID configurations:

- Software RAID on the internal drives — This configuration requires a daughter card.
- Hardware RAID on the internal drives — This configuration requires the CERC SATA RAID controller.
- Hardware RAID on external SCSI drives and software RAID on the internal drives — This configuration requires a daughter card and a PERC 4/SC or 4/DC RAID controller card.



NOTE: The RAID configurations (software, hardware/internal, hardware/external) are preinstalled by Dell and cannot be changed.

Software RAID

Software RAID requires a daughter card to be installed on the system. See "Installing a Daughter Card."

Hardware RAID (Internal Drives)

Hardware RAID on the internal drives requires that you install the CERC SATA controller. See "Installing an Expansion Card." A daughter card is not required for this configuration.

Hardware RAID (External Drives) and Software RAID (Internal Drives)

Hardware RAID on external drives requires that you install the PERC 4/SC or 4/DC RAID controller. See "Installing an Expansion Card." When utilizing hardware RAID on external drives, you can run only software RAID on the internal drives, which requires a daughter card. See "Installing a Daughter Card."



NOTE: In a configuration that uses hardware RAID on external drives, the only internal drives you can use are drive 0 and drive 1. These drives contain the operating system and a mirror of the operating system, respectively. Do not use these drives to store data.

Getting Help

Technical Assistance

If you need assistance with a technical problem, perform the following steps:

- 1 Complete the procedures in "Troubleshooting Your System."
- 2 Run the system diagnostics and record any information provided.
- 3 Use Dell's extensive suite of online services available at Dell Support at support.dell.com for help with installation and troubleshooting procedures.

For more information, see "Online Services."

- 4 If the preceding steps have not resolved the problem, call Dell for technical assistance.

NOTE: Call technical support from a phone near or at the system so that technical support can assist you with any necessary procedures.

NOTE: Dell's Express Service Code system may not be available in all countries.

When prompted by Dell's automated telephone system, enter your Express Service Code to route the call directly to the proper support personnel. If you do not have an Express Service Code, open the **Dell Accessories** folder, double-click the **Express Service Code** icon, and follow the directions.

For instructions on using the technical support service, see "Technical Support Service" and "Before You Call."

NOTE: Some of the following services are not always available in all locations outside the continental U.S. Call your local Dell representative for information on availability.

Online Services

You can access Dell Support at support.dell.com. Select your region on the **WELCOME TO DELL SUPPORT** page, and fill in the requested details to access help tools and information.

You can contact Dell electronically using the following addresses:

- World Wide Web
www.dell.com/
www.dell.com/ap/ (Asian/Pacific countries only)
www.dell.com/jp (Japan only)

www.euro.dell.com (Europe only)

www.dell.com/la (Latin American countries)

www.dell.ca (Canada only)

- Anonymous file transfer protocol (FTP)

ftp.dell.com/

Log in as user : `anonymous`, and use your e-mail address as your password.

- Electronic Support Service

support@us.dell.com

apsupport@dell.com (Asian/Pacific countries only)

support.jp.dell.com (Japan only)

support.euro.dell.com (Europe only)

- Electronic Quote Service

sales@dell.com

apmarketing@dell.com (Asian/Pacific countries only)

sales_canada@dell.com (Canada only)

- Electronic Information Service

info@dell.com

AutoTech Service

Dell's automated technical support service—AutoTech—provides recorded answers to the questions most frequently asked by Dell customers about their portable and desktop computer systems.

When you call AutoTech, use your touch-tone telephone to select the subjects that correspond to your questions.

The AutoTech service is available 24 hours a day, 7 days a week. You can also access this service through the technical support service. See the contact information for your region.

Automated Order-Status Service

To check on the status of any Dell™ products that you have ordered, you can go to support.dell.com, or you can call the automated order-status service. A recording prompts you for the information needed to locate and report on your order. See the contact information for your region.

Technical Support Service

Dell's technical support service is available 24 hours a day, 7 days a week, to answer your questions about Dell hardware. Our technical support staff use computer-based diagnostics to provide fast, accurate answers.

To contact Dell's technical support service, see "Before You Call" and then see the contact information for your region.

Dell Enterprise Training and Certification

Dell Enterprise Training and Certification is available; see www.dell.com/training for more information. This service may not be offered in all locations.

Problems With Your Order

If you have a problem with your order, such as missing parts, wrong parts, or incorrect billing, contact Dell for customer assistance. Have your invoice or packing slip available when you call. See the contact information for your region.

Product Information

If you need information about additional products available from Dell, or if you would like to place an order, visit the Dell website at www.dell.com. For the telephone number to call to speak to a sales specialist, see the contact information for your region.

Returning Items for Warranty Repair or Credit

Prepare all items being returned, whether for repair or credit, as follows:

- 1 Call Dell to obtain a Return Material Authorization Number, and write it clearly and prominently on the outside of the box.
For the telephone number to call, see the contact information for your region.
- 2 Include a copy of the invoice and a letter describing the reason for the return.
- 3 Include a copy of any diagnostic information indicating the tests you have run and any error messages reported by the system diagnostics.
- 4 Include any accessories that belong with the item(s) being returned (such as power cables, media such as CDs and diskettes, and guides) if the return is for credit.
- 5 Pack the equipment to be returned in the original (or equivalent) packing materials.

You are responsible for paying shipping expenses. You are also responsible for insuring any product returned, and you assume the risk of loss during shipment to Dell. Collect-on-delivery (C.O.D.) packages are not accepted.

Returns that are missing any of the preceding requirements will be refused at our receiving dock and returned to you.

Before You Call

NOTE: Have your Express Service Code ready when you call. The code helps Dell's automated-support telephone system direct your call more efficiently.

If possible, turn on your system before you call Dell for technical assistance and call from a telephone at or near the computer. You may be asked to type some commands at the keyboard, relay detailed information during operations, or try other troubleshooting steps possible only at the computer system itself. Ensure that the system documentation is available.

 **CAUTION:** Before servicing any components inside your computer, see your *System Information Guide* for important safety information.

Contacting Dell

To contact Dell electronically, you can access the following websites:

- www.dell.com
- support.dell.com (technical support)
- premiersupport.dell.com (technical support for educational, government, healthcare, and medium/large business customers, including Premier, Platinum, and Gold customers)

For specific web addresses for your country, find the appropriate country section in the table below.

NOTE: Toll-free numbers are for use within the country for which they are listed.

When you need to contact Dell, use the electronic addresses, telephone numbers, and codes provided in the following table. If you need assistance in determining which codes to use, contact a local or an international operator.

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Anguilla	General Support	toll-free: 800-335-0031
Antigua and Barbuda	General Support	1-800-805-5924
Argentina (Buenos Aires)	Website: www.dell.com.ar	
International Access Code: 00	Tech Support and Customer Care	toll-free: 0-800-444-0733
Country Code: 54	Sales	0-810-444-3355
City Code: 11	Tech Support Fax	11 4515 7139
	Customer Care Fax	11 4515 7138

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Aruba	General Support	toll-free: 800-1578
Australia (Sydney)	E-mail (Australia): au_tech_support@dell.com	
International Access Code: 0011	E-mail (New Zealand): nz_tech_support@dell.com	
Country Code: 61	Home and Small Business	1-300-65-55-33
City Code: 2	Government and Business	toll-free: 1-800-633-559
	Preferred Accounts Division (PAD)	toll-free: 1-800-060-889
	Customer Care	toll-free: 1-800-819-339
	Corporate Sales	toll-free: 1-800-808-385
	Transaction Sales	toll-free: 1-800-808-312
	Fax	toll-free: 1-800-818-341
Austria (Vienna)	Website: support.euro.dell.com	
International Access Code: 900	E-mail: tech_support_central_europe@dell.com	
Country Code: 43	Home/Small Business Sales	0820 240 530 00
City Code: 1	Home/Small Business Fax	0820 240 530 49
	Home/Small Business Customer Care	0820 240 530 14
	Preferred Accounts/Corporate Customer Care	0820 240 530 16
	Home/Small Business Technical Support	0820 240 530 14
	Preferred Accounts/Corporate Technical Support	0660 8779
	Switchboard	0820 240 530 00
Bahamas	General Support	toll-free: 1-866-278-6818
Barbados	General Support	1-800-534-3066
Belgium (Brussels)	Website: support.euro.dell.com	
International Access Code: 00	E-mail: tech_be@dell.com	
Country Code: 32	E-mail for French Speaking Customers: support.euro.dell.com/be/fr/emaildell/	
City Code: 2	Technical Support	02 481 92 88
	Customer Care	02 481 91 19
	Corporate Sales	02 481 91 00
	Fax	02 481 92 99
	Switchboard	02 481 91 00
Bermuda	General Support	1-800-342-0671

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Bolivia	General Support	toll-free: 800-10-0238
Brazil	Website: www.dell.com/br	
International Access Code: 00	Customer Support, Technical Support	0800 90 3355
Country Code: 55	Tech Support Fax	51 481 5470
City Code: 51	Customer Care Fax	51 481 5480
	Sales	0800 90 3390
British Virgin Islands	General Support	toll-free: 1-866-278-6820
Brunei	Customer Technical Support (Penang, Malaysia)	604 633 4966
Country Code: 673	Customer Service (Penang, Malaysia)	604 633 4949
	Transaction Sales (Penang, Malaysia)	604 633 4955
Canada (North York, Ontario)	Online Order Status: www.dell.ca/ostatus	
International Access Code: 011	AutoTech (automated technical support)	toll-free: 1-800-247-9362
	TechFax	toll-free: 1-800-950-1329
	Customer Care (Home Sales/Small Business)	toll-free: 1-800-847-4096
	Customer Care (med./large business, government)	toll-free: 1-800-326-9463
	Technical Support (Home Sales/Small Business)	toll-free: 1-800-847-4096
	Technical Support (med./large bus., government)	toll-free: 1-800-387-5757
	Sales (Home Sales/Small Business)	toll-free: 1-800-387-5752
	Sales (med./large bus., government)	toll-free: 1-800-387-5755
	Spare Parts Sales & Extended Service Sales	1 866 440 3355
Cayman Islands	General Support	1-800-805-7541
Chile (Santiago)	Sales, Customer Support, and Technical Support	toll-free: 1230-020-4823
Country Code: 56		
City Code: 2		

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
China (Xiamen) Country Code: 86 City Code: 592	Tech Support website: support.ap.dell.com/china Tech Support E-mail: cn_support@dell.com Tech Support Fax Home and Small Business Technical Support Corporate Accounts Technical Support Customer Experience Home and Small Business Preferred Accounts Division Large Corporate Accounts GCP Large Corporate Accounts Key Accounts Large Corporate Accounts North Large Corporate Accounts North Government and Education Large Corporate Accounts East Large Corporate Accounts East Government and Education Large Corporate Accounts Queue Team Large Corporate Accounts South Large Corporate Accounts West Large Corporate Accounts Spare Parts	818 1350 toll-free: 800 858 2437 toll-free: 800 858 2333 toll-free: 800 858 2060 toll-free: 800 858 2222 toll-free: 800 858 2557 toll-free: 800 858 2055 toll-free: 800 858 2628 toll-free: 800 858 2999 toll-free: 800 858 2955 toll-free: 800 858 2020 toll-free: 800 858 2669 toll-free: 800 858 2222 toll-free: 800 858 2355 toll-free: 800 858 2811 toll-free: 800 858 2621
Colombia	General Support	980-9-15-3978
Costa Rica	General Support	0800-012-0435
Czech Republic (Prague) International Access Code: 00 Country Code: 420 City Code: 2	Website: support.euro.dell.com E-mail: czech_dell@dell.com Technical Support Customer Care Fax TechFax Switchboard	02 2186 27 27 02 2186 27 11 02 2186 27 14 02 2186 27 28 02 2186 27 11

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Denmark (Copenhagen) International Access Code: 00 Country Code: 45	Website: support.euro.dell.com E-mail Support (portable computers): den_nbk_support@dell.com E-mail Support (desktop computers): den_support@dell.com E-mail Support (servers): Nordic_server_support@dell.com	
	Technical Support	7023 0182
	Customer Care (Relational)	7023 0184
	Home/Small Business Customer Care	3287 5505
	Switchboard (Relational)	3287 1200
	Fax Switchboard (Relational)	3287 1201
	Switchboard (Home/Small Business)	3287 5000
	Fax Switchboard (Home/Small Business)	3287 5001
Dominica	General Support	toll-free: 1-866-278-6821
Dominican Republic	General Support	1-800-148-0530
Ecuador	General Support	toll-free: 999-119
El Salvador	General Support	01-899-753-0777
Finland (Helsinki) International Access Code: 990 Country Code: 358 City Code: 9	Website: support.euro.dell.com E-mail: fin_support@dell.com E-mail Support (servers): Nordic_support@dell.com	
	Technical Support	09 253 313 60
	Technical Support Fax	09 253 313 81
	Relational Customer Care	09 253 313 38
	Home/Small Business Customer Care	09 693 791 94
	Fax	09 253 313 99
	Switchboard	09 253 313 00

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
France (Paris) (Montpellier) International Access Code: 00 Country Code: 33 City Codes: (1) (4)	Website: support.euro.dell.com E-mail: support.euro.dell.com/fr/fr/emaildell/ Home and Small Business Technical Support Customer Care Switchboard Switchboard (calls from outside of France) Sales Fax Fax (calls from outside of France) Corporate Technical Support Customer Care Switchboard Sales Fax	 0825 387 270 0825 823 833 0825 004 700 04 99 75 40 00 0825 004 700 0825 004 701 04 99 75 40 01 0825 004 719 0825 338 339 01 55 94 71 00 01 55 94 71 00 01 55 94 71 01
Germany (Langen) International Access Code: 00 Country Code: 49 City Code: 6103	Website: support.euro.dell.com E-mail: tech_support_central_europe@dell.com Technical Support Home/Small Business Customer Care Global Segment Customer Care Preferred Accounts Customer Care Large Accounts Customer Care Public Accounts Customer Care Switchboard	 06103 766-7200 0180-5-224400 06103 766-9570 06103 766-9420 06103 766-9560 06103 766-9555 06103 766-7000

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Greece	Website: support.euro.dell.com	
International Access Code: 00	E-mail: support.euro.dell.com/gr/en/emaildell/	
Country Code: 30	Technical Support	080044149518
	Gold Technical Support	08844140083
	Switchboard	2108129800
	Sales	2108129800
	Fax	2108129812
Grenada	General Support	toll-free: 1-866-540-3355
Guatemala	General Support	1-800-999-0136
Guyana	General Support	toll-free: 1-877-270-4609
Hong Kong	Website: support.ap.dell.com	
International Access Code: 001	E-mail: ap_support@dell.com	
Country Code: 852	Technical Support (Dimension™ and Inspiron™)	2969 3189
	Technical Support (OptiPlex™, Latitude™, and Dell Precision™)	2969 3191
	Technical Support (PowerApp™, PowerEdge™, PowerConnect™, and PowerVault™)	2969 3196
	Gold Queue EEC Hotline	2969 3187
	Customer Advocacy	3416 0910
	Large Corporate Accounts	3416 0907
	Global Customer Programs	3416 0908
	Medium Business Division	3416 0912
	Home and Small Business Division	2969 3105
India	Technical Support	1600 33 8045
	Sales	1600 33 8044

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Ireland (Cherrywood)	Website: support.euro.dell.com	
International Access Code: 16	E-mail: dell_direct_support@dell.com	
Country Code: 353	Technical Support	1850 543 543
City Code: 1	U.K. Technical Support (dial within U.K. only)	0870 908 0800
	Home User Customer Care	01 204 4014
	Small Business Customer Care	01 204 4014
	U.K. Customer Care (dial within U.K. only)	0870 906 0010
	Corporate Customer Care	1850 200 982
	Corporate Customer Care (dial within U.K. only)	0870 907 4499
	Ireland Sales	01 204 4444
	U.K. Sales (dial within U.K. only)	0870 907 4000
	Fax/SalesFax	01 204 0103
	Switchboard	01 204 4444
Italy (Milan)	Website: support.euro.dell.com	
International Access Code: 00	E-mail: support.euro.dell.com/it/it/emaildell/	
Country Code: 39	Home and Small Business	
City Code: 02	Technical Support	02 577 826 90
	Customer Care	02 696 821 14
	Fax	02 696 821 13
	Switchboard	02 696 821 12
	Corporate	
	Technical Support	02 577 826 90
	Customer Care	02 577 825 55
	Fax	02 575 035 30
	Switchboard	02 577 821
Jamaica	General Support (dial from within Jamaica only)	1-800-682-3639

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Japan (Kawasaki)	Website: support.jp.dell.com	
International Access Code: 001	Technical Support (servers)	toll-free: 0120-198-498
Country Code: 81	Technical Support outside of Japan (servers)	81-44-556-4162
City Code: 44	Technical Support (Dimension™ and Inspiron™)	toll-free: 0120-198-226
	Technical Support outside of Japan (Dimension and Inspiron)	81-44-520-1435
	Technical Support (Dell Precision™, OptiPlex™, and Latitude™)	toll-free:0120-198-433
	Technical Support outside of Japan (Dell Precision, OptiPlex, and Latitude)	81-44-556-3894
	Technical Support (Axim™)	toll-free: 0120-981-690
	Technical Support outside of Japan (Axim)	81-44-556-3468
	Faxbox Service	044-556-3490
	24-Hour Automated Order Service	044-556-3801
	Customer Care	044-556-4240
	Business Sales Division (up to 400 employees)	044-556-1465
	Preferred Accounts Division Sales (over 400 employees)	044-556-3433
	Large Corporate Accounts Sales (over 3500 employees)	044-556-3430
	Public Sales (government agencies, educational institutions, and medical institutions)	044-556-1469
	Global Segment Japan	044-556-3469
	Individual User	044-556-1760
	Switchboard	044-556-4300
Korea (Seoul)	Technical Support	toll-free: 080-200-3800
International Access Code: 001	Sales	toll-free: 080-200-3600
Country Code: 82	Customer Service (Seoul, Korea)	toll-free: 080-200-3800
City Code: 2	Customer Service (Penang, Malaysia)	604 633 4949
	Fax	2194-6202
	Switchboard	2194-6000

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Latin America	Customer Technical Support (Austin, Texas, U.S.A.)	512 728-4093
	Customer Service (Austin, Texas, U.S.A.)	512 728-3619
	Fax (Technical Support and Customer Service) (Austin, Texas, U.S.A.)	512 728-3883
	Sales (Austin, Texas, U.S.A.)	512 728-4397
	SalesFax (Austin, Texas, U.S.A.)	512 728-4600 or 512 728-3772
Luxembourg	Website: support.euro.dell.com	
International Access Code: 00	E-mail: tech_be@dell.com	
Country Code: 352	Technical Support (Brussels, Belgium)	3420808075
	Home/Small Business Sales (Brussels, Belgium)	toll-free: 080016884
	Corporate Sales (Brussels, Belgium)	02 481 91 00
	Customer Care (Brussels, Belgium)	02 481 91 19
	Fax (Brussels, Belgium)	02 481 92 99
	Switchboard (Brussels, Belgium)	02 481 91 00
Macao	Technical Support	toll-free: 0800 582
Country Code: 853	Customer Service (Penang, Malaysia)	604 633 4949
	Transaction Sales	toll-free: 0800 581
Malaysia (Penang)	Technical Support	toll-free: 1 800 888 298
International Access Code: 00	Customer Service	04 633 4949
Country Code: 60	Transaction Sales	toll-free: 1 800 888 202
City Code: 4	Corporate Sales	toll-free: 1 800 888 213
Mexico	Customer Technical Support	001-877-384-8979
International Access Code: 00		or 001-877-269-3383
Country Code: 52	Sales	50-81-8800
		or 01-800-888-3355
	Customer Service	001-877-384-8979
		or 001-877-269-3383
	Main	50-81-8800
		or 01-800-888-3355
Montserrat	General Support	toll-free: 1-866-278-6822

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Netherlands Antilles	General Support	001-800-882-1519
Netherlands (Amsterdam)	Website: support.euro.dell.com	
International Access Code: 00	E-mail (Technical Support):	
Country Code: 31	(Enterprise): nl_server_support@dell.com	
City Code: 20	(Latitude): nl_latitude_support@dell.com	
	(Inspiron): nl_inspiron_support@dell.com	
	(Dimension): nl_dimension_support@dell.com	
	(OptiPlex): nl_optiplex_support@dell.com	
	(Dell Precision): nl_workstation_support@dell.com	
	Technical Support	020 674 45 00
	Technical Support Fax	020 674 47 66
	Home/Small Business Customer Care	020 674 42 00
	Relational Customer Care	020 674 4325
	Home/Small Business Sales	020 674 55 00
	Relational Sales	020 674 50 00
	Home/Small Business Sales Fax	020 674 47 75
	Relational Sales Fax	020 674 47 50
	Switchboard	020 674 50 00
	Switchboard Fax	020 674 47 50
New Zealand	E-mail (New Zealand): nz_tech_support@dell.com	
International Access Code: 00	E-mail (Australia): au_tech_support@dell.com	
Country Code: 64	Home and Small Business	0800 446 255
	Government and Business	0800 444 617
	Sales	0800 441 567
	Fax	0800 441 566
Nicaragua	General Support	001-800-220-1006

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Norway (Lysaker)	Website: support.euro.dell.com	
International Access Code: 00	E-mail Support (portable computers):	
Country Code: 47	nor_nbk_support@dell.com	
	E-mail Support (desktop computers):	
	nor_support@dell.com	
	E-mail Support (servers):	
	nordic_server_support@dell.com	
	Technical Support	671 16882
	Relational Customer Care	671 17514
	Home/Small Business Customer Care	23162298
	Switchboard	671 16800
	Fax Switchboard	671 16865
Panama	General Support	001-800-507-0962
Peru	General Support	0800-50-669
Poland (Warsaw)	Website: support.euro.dell.com	
International Access Code: 011	E-mail: pl_support_tech@dell.com	
Country Code: 48	Customer Service Phone	57 95 700
City Code: 22	Customer Care	57 95 999
	Sales	57 95 999
	Customer Service Fax	57 95 806
	Reception Desk Fax	57 95 998
	Switchboard	57 95 999
Portugal	Website: support.euro.dell.com	
International Access Code: 00	E-mail: support.euro.dell.com/pt/en/emaiddell/	
Country Code: 351	Technical Support	707200149
	Customer Care	800 300 413
	Sales	800 300 410 or 800 300 411 or 800 300 412 or 21 422 07 10
	Fax	21 424 01 12
Puerto Rico	General Support	1-800-805-7545
St. Kitts and Nevis	General Support	toll-free: 1-877-441-4731

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
St. Lucia	General Support	1-800-882-1521
St. Vincent and the Grenadines	General Support	toll-free: 1-877-270-4609
Singapore (Singapore)	Technical Support	toll-free: 800 6011 051
International Access Code: 005	Customer Service (Penang, Malaysia)	604 633 4949
Country Code: 65	Transaction Sales	toll-free: 800 6011 054
	Corporate Sales	toll-free: 800 6011 053
South Africa (Johannesburg)	Website: support.euro.dell.com	
International Access Code: 09/091	E-mail: dell_za_support@dell.com	
	Technical Support	011 709 7710
Country Code: 27	Customer Care	011 709 7707
City Code: 11	Sales	011 709 7700
	Fax	011 706 0495
	Switchboard	011 709 7700
Southeast Asian and Pacific Countries	Customer Technical Support, Customer Service, and Sales (Penang, Malaysia)	604 633 4810
Spain (Madrid)	Website: support.euro.dell.com	
International Access Code: 00	E-mail: support.euro.dell.com/es/es/emaildell/	
Country Code: 34	Home and Small Business	
City Code: 91	Technical Support	902 100 130
	Customer Care	902 118 540
	Sales	902 118 541
	Switchboard	902 118 541
	Fax	902 118 539
	Corporate	
	Technical Support	902 100 130
	Customer Care	902 118 546
	Switchboard	91 722 92 00
	Fax	91 722 95 83

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Sweden (Upplands Vasby) International Access Code: 00 Country Code: 46 City Code: 8	Website: support.euro.dell.com E-mail: swe_support@dell.com E-mail Support for Latitude and Inspiron: Swe-nbk_kats@dell.com E-mail Support for OptiPlex: Swe_kats@dell.com E-mail Support for Servers: Nordic_server_support@dell.com Technical Support Relational Customer Care Home/Small Business Customer Care Employee Purchase Program (EPP) Support Fax Technical Support Sales	08 590 05 199 08 590 05 642 08 587 70 527 20 140 14 44 08 590 05 594 08 590 05 185
Switzerland (Geneva) International Access Code: 00 Country Code: 41 City Code: 22	Website: support.euro.dell.com E-mail: swisstech@dell.com E-mail for French-speaking HSB and Corporate Customers: support.euro.dell.com/ch/fr/emaildell/ Technical Support (Home and Small Business) Technical Support (Corporate) Customer Care (Home and Small Business) Customer Care (Corporate) Fax Switchboard	0844 811 411 0844 822 844 0848 802 202 0848 821 721 022 799 01 90 022 799 01 01
Taiwan International Access Code: 002 Country Code: 886	Technical Support (portable and desktop computers) Technical Support (servers) Transaction Sales Corporate Sales	toll-free: 00801 86 1011 toll-free: 0080 60 1256 toll-free: 0080 651 228 toll-free: 0080 651 227
Thailand International Access Code: 001 Country Code: 66	Technical Support Customer Service (Penang, Malaysia) Sales	toll-free: 0880 060 07 604 633 4949 toll-free: 0880 060 09
Trinidad/Tobago	General Support	1-800-805-8035

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Turks and Caicos Islands	General Support	toll-free: 1-866-540-3355
U.K. (Bracknell)	Website: support.euro.dell.com	
International Access Code: 00	Customer Care website: support.euro.dell.com/uk/en/ECare/Form/Home.asp	
Country Code: 44		
City Code: 1344	E-mail: dell_direct_support@dell.com	
	Technical Support (Corporate/Preferred Accounts/PAD [1000+ employees])	0870 908 0500
	Technical Support (direct/PAD and general)	0870 908 0800
	Global Accounts Customer Care	01344 373 186
	Home and Small Business Customer Care	0870 906 0010
	Corporate Customer Care	01344 373 185
	Preferred Accounts (500–5000 employees) Customer Care	0870 906 0010
	Central Government Customer Care	01344 373 193
	Local Government & Education Customer Care	01344 373 199
	Health Customer Care	01344 373 194
	Home and Small Business Sales	0870 907 4000
	Corporate/Public Sector Sales	01344 860 456
	Home and Small Business Fax	0870 907 4006
Uruguay	General Support	toll-free: 000-413-598-2521

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
U.S.A. (Austin, Texas)	Automated Order-Status Service	toll-free: 1-800-433-9014
International Access Code: 011 Country Code: 1	AutoTech (portable and desktop computers) Consumer (Home and Home Office) Technical Support Customer Service DellNet™ Service and Support Employee Purchase Program (EPP) Customers Financial Services website: www.dellfinancialservices.com Financial Services (lease/loans) Financial Services (Dell Preferred Accounts [DPA]) Business Customer Service and Technical Support Employee Purchase Program (EPP) Customers Projectors Technical Support Public (government, education, and healthcare) Customer Service and Technical Support Employee Purchase Program (EPP) Customers Dell Sales Dell Outlet Store (Dell refurbished computers) Software and Peripherals Sales Spare Parts Sales Extended Service and Warranty Sales Fax Dell Services for the Deaf, Hard-of-Hearing, or Speech-Impaired	toll-free: 1-800-247-9362 toll-free: 1-800-624-9896 toll-free: 1-800-624-9897 toll-free: 1-877-Dellnet (1-877-335-5638) toll-free: 1-800-695-8133 toll-free: 1-877-577-3355 toll-free: 1-800-283-2210 toll-free: 1-800-822-8965 toll-free: 1-800-695-8133 toll-free: 1-877-459-7298 toll-free: 1-800-456-3355 toll-free: 1-800-234-1490 toll-free: 1-800-289-3355 or toll-free: 1-800-879-3355 toll-free: 1-888-798-7561 toll-free: 1-800-671-3355 toll-free: 1-800-357-3355 toll-free: 1-800-247-4618 toll-free: 1-800-727-8320 toll-free: 1-877-DELLTTY (1-877-335-5889)
U.S. Virgin Islands	General Support	1-877-673-3355
Venezuela	General Support	8001-3605

Jumpers, Switches, and Connectors

This section provides specific information about the system jumpers. It also provides some basic information on jumpers and switches and describes the connectors on the various boards in the system.


Jumpers—A General Explanation

Jumpers provide a convenient and reversible way of reconfiguring the circuitry on a printed circuit board. When reconfiguring the system, you may need to change jumper settings on circuit boards or drives.

Jumpers

Jumpers are small blocks on a circuit board with two or more pins emerging from them. Plastic plugs containing a wire fit down over the pins. The wire connects the pins and creates a circuit. To change a jumper setting, pull the plug off its pin(s) and carefully fit it down onto the pin(s) indicated. Figure A-1 shows an example of a jumper.

Figure A-1. Example Jumper

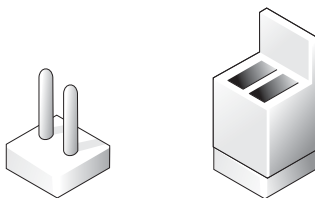

A jumper is referred to as open or unjumped when the plug is pushed down over only one pin or if there is no plug at all. When the plug is pushed down over two pins, the jumper is referred to as jumped. The jumper setting is often shown in text as two numbers, such as 1–2. The number 1 is printed on the circuit board with a triangle so that you can identify each pin number based on the location of pin 1.

Figure A-2 shows the location and default settings of the server-module jumper blocks. See Table A-1 for the designations, default settings, and functions of the jumpers.

System Board Jumpers

Figure A-2 shows the location of the configuration jumpers on the system board. Table A-1 lists the jumper settings.

Figure A-2. System Board Jumpers

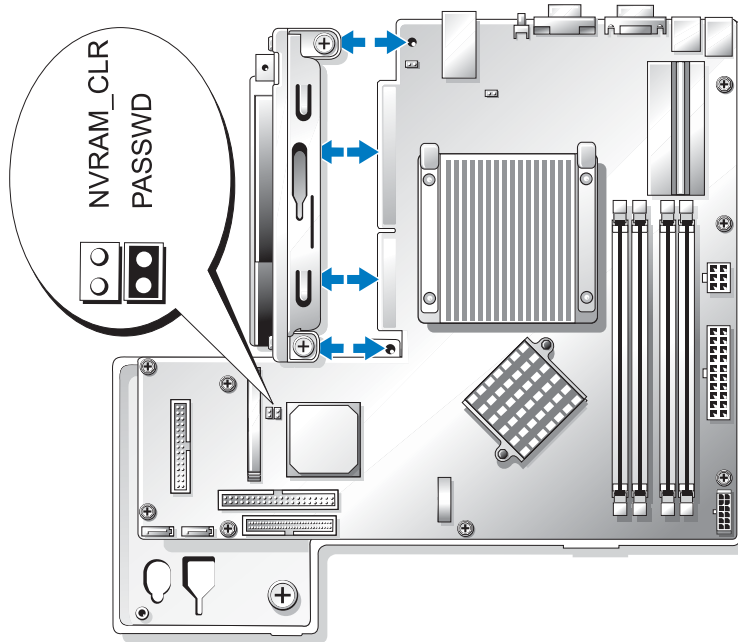








Table A-1. System Board Jumper Settings

Jumper	Setting	Description
PASSWD	 (default)	The password feature is enabled. You can set the password in System Setup only when the password feature is enabled. See your <i>User's Guide</i> for information.
		The password feature is disabled.
NVRAM_CLR	 (default)	The configuration settings in NVRAM are retained at system boot.
		The configuration settings in NVRAM are cleared at next system boot.
 jumpered  unjumpered		

System Board Connectors

See Figure A-3 and Table A-2 for the location and description of the system board connectors.

Figure A-3. System Board Connectors

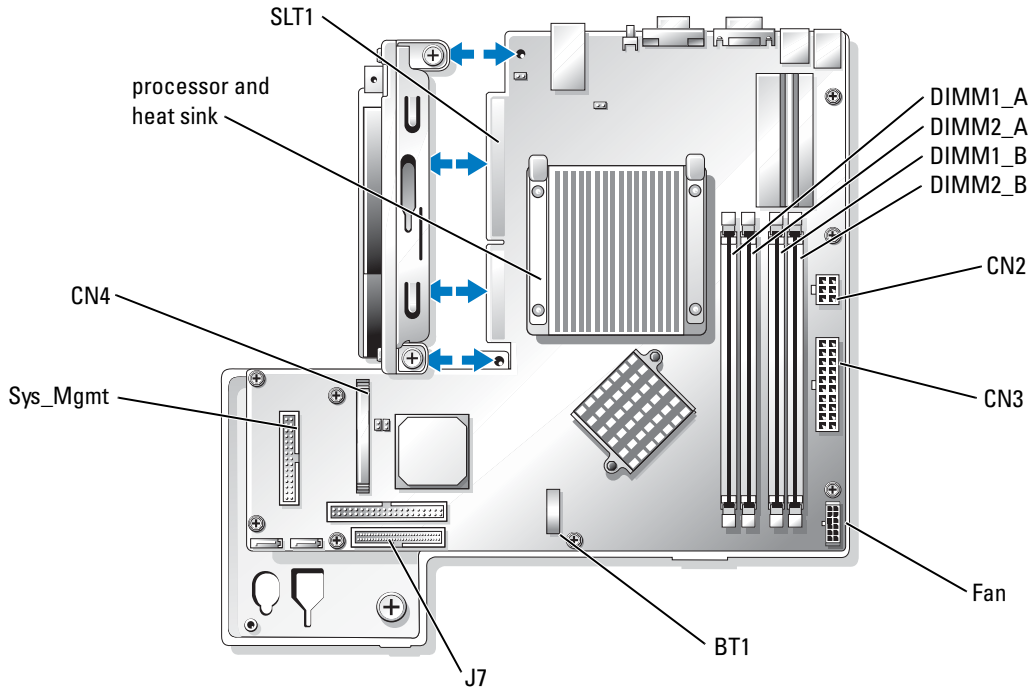


Table A-2. System Board Connectors

Connector	Description
BT1	Connector for the 3.0-V coin battery
CN2	12-V and 3.3-V power connector for the system board
CN3	+5-V and -12-V power connector for the system board
CN4	Daughter card connector
DIMM n_x	Memory modules (4)
Fan	Power connector for the fan assembly
J7	Control panel interface connector


Table A-2. System Board Connectors (continued)

Connector	Description
SLT1	Riser board interface connector
Sys_Mgmt	Connector for the remote access controller (RAC)

Riser Board Connectors

See Figure A-4 and Table A-3 for the location and description of the backplane board connectors.

NOTE: The connectors for 64-bit cards are longer than the PCI 32-bit connector. However, as long as the card is installed properly, the card will still function.

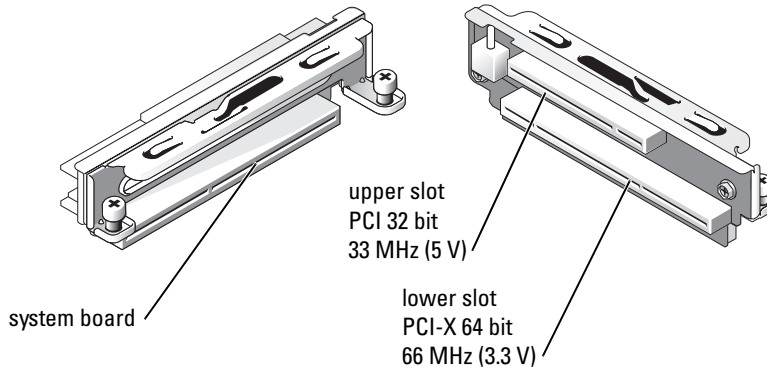Figure A-4. Riser Board Connectors**Table A-3. Riser Board Connectors**

Connector	Description
Upper slot PCI 32 bit, 33 MHz (5 V)	The RAC must be installed in the upper slot.
Lower slot PCI-X 64 bit, 66 MHz (3.3 V)	For optimal performance, install RAID and SCSI controllers in the lower slot.
System board	System board interface connector.

Disabling a Forgotten Password

The system's software security features include a system password and a setup password, which are discussed in detail in "Using the System Setup Program" in your *User's Guide*. The password jumper enables these password features or disables them and clears any password(s) currently in use.


 **CAUTION:** See your *System Information Guide* for complete information about safety precautions, working inside the computer, and protecting against electrostatic discharge.

- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Open the system. See "Opening the System" in "Troubleshooting Your System."
- 3 Remove the password jumper plug.

See Figure A-2 to locate the password jumper on the system board.

- 4 Close the system. See "Closing the System" in "Troubleshooting Your System."
- 5 Reconnect the system to the electrical outlet, and turn on the system.

The existing passwords are not disabled (erased) until the system boots with the password jumper plug removed. However, before you assign a new system and/or setup password, you must install the jumper plug.

 **NOTE:** If you assign a new system and/or setup password with the jumper plug still removed, the system disables the new password(s) the next time it boots.

- 6 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
 - 7 Open the system.
 - 8 Install the password jumper plug.
- See Figure A-2 to locate the password jumper on the system board.
- 9 Close the system, reconnect the system to the electrical outlet, and turn on the system.
 - 10 Assign a new system and/or setup password.

To assign a new password using the System Setup program, see "Using the System Setup Program" in your *User's Guide*.

I/O Connectors

I/O Connectors

I/O connectors are the gateways that the system uses to communicate with external devices, such as a keyboard, mouse, printer, or monitor. This section describes the various connectors on your system. If you reconfigure the hardware connected to the system, you may also need the pin number and signal information for these connectors. Figure B-1 illustrates the connectors on the system.

Figure B-1. I/O Connectors

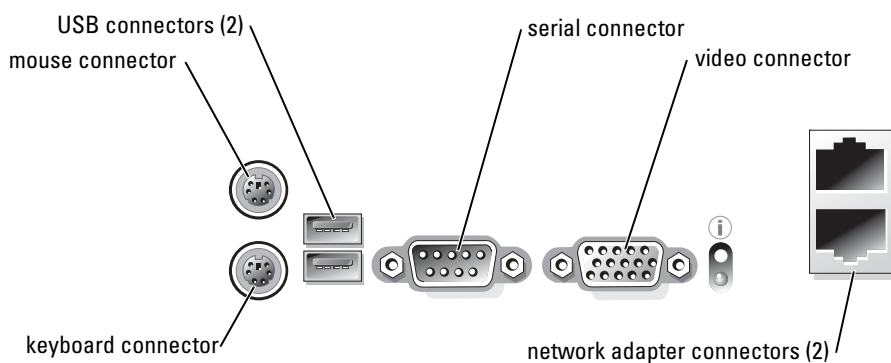







Table B-1 shows the icons used to label the connectors on the system.

Table B-1. I/O Connector Icons

Icon	Connector
10101	Serial connector
	Mouse connector
	Keyboard connector
	Video connector
	USB connector
	Network adapter connector

Serial Connector

Serial connectors support devices such as external modems, printers, and mice that require serial data transmission. Serial connectors are also used for console redirection. The serial connector uses a 9-pin D-subminiature connector.

Serial Connector Autoconfiguration

The default designation of the integrated serial connector is COM1. When you add an expansion card containing a serial connector that has the same designation as the integrated connector, the system's autoconfiguration feature remaps (reassigns) the integrated serial connector to the next available designation. Both the new and the remapped COM connectors share the same IRQ setting. COM1 and COM3 share IRQ4, while COM2 and COM4 share IRQ3.

NOTE: If two COM connectors share an IRQ setting, you may not be able to use them both at the same time. In addition, if you install one or more expansion cards with serial connectors designated as COM1 and COM3, the integrated serial connector is disabled.

Before adding a card that remaps the COM connectors, check the documentation that came with the software to make sure that the software can accommodate the new COM connector designation.

Figure B-2 illustrates the pin numbers for the serial connector and Table B-2 defines the pin assignments for the connector.

Figure B-2. Serial Connector Pin Numbers

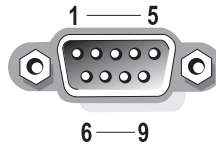


Table B-2. Serial Connector Pin Assignments

Pin	Signal	I/O	Definition
1	DCD	I	Data carrier detect
2	SIN	I	Serial input
3	SOUT	O	Serial output
4	DTR	O	Data terminal ready
5	GND	N/A	Signal ground
6	DSR	I	Data set ready
7	RTS	O	Request to send

Table B-2. Serial Connector Pin Assignments (continued)

Pin	Signal	I/O	Definition
8	CTS	I	Clear to send
9	RI	I	Ring indicator
Shell	N/A	N/A	Chassis ground

PS/2-Compatible Keyboard and Mouse Connectors

The PS/2-compatible keyboard and mouse cables attach to 6-pin, miniature DIN connectors. Figure B-3 illustrates the pin numbers for these connectors and Table B-3 defines the pin assignments for these connectors.

Figure B-3. PS/2-Compatible Keyboard and Mouse Connector Pin Numbers

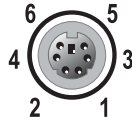


Table B-3. Keyboard and Mouse Connector Pin Assignments

Pin	Signal	I/O	Definition
1	KBDATA or MFDATA	I/O	Keyboard data or mouse data
2	NC	N/A	No connection
3	GND	N/A	Signal ground
4	FVcc	N/A	Fused supply voltage
5	KBCLK or MFCLK	I/O	Keyboard clock or mouse clock
6	NC	N/A	No connection
Shell	N/A	N/A	Chassis ground

Video Connector

You can attach a VGA-compatible monitor to the system's integrated video controller using a 15-pin high-density D-subminiature connector. Figure B-4 illustrates the pin numbers for the video connector and Table B-4 defines the pin assignments for the connector.


 **NOTE:** Installing a video card automatically disables the system's integrated video controller.

Figure B-4. Video Connector Pin Numbers

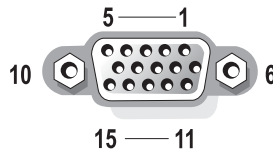


Table B-4. Video Connector Pin Assignments

Pin	Signal	I/O	Definition
1	RED	O	Red video
2	GREEN	O	Green video
3	BLUE	O	Blue video
4	NC	N/A	No connection
5-8, 10	GND	N/A	Signal ground
9	VCC	N/A	Vcc
11	NC	N/A	No connection
12	DDC data out	O	Monitor detect data
13	HSYNC	O	Horizontal synchronization
14	VSYNC	O	Vertical synchronization
15	NC	N/A	No connection

USB Connector

The system's USB connectors support USB-compliant peripherals such as keyboards, mice, and printers and may also support USB-compliant devices such as diskette drives and CD drives. Figure B-5 illustrates the pin numbers for the USB connector and Table B-5 defines the pin assignments for the connector.

NOTICE: Do not attach a USB device or a combination of USB devices that draw a maximum current of more than 500 mA per channel or +5 V. Attaching devices that exceed this threshold may cause the USB connectors to shut down. See the documentation that accompanied the USB devices for their maximum current ratings.

Figure B-5. USB Connector Pin Numbers



Table B-5. USB Connector Pin Assignments

Pin	Signal	I/O	Definition
1	Vcc	N/A	Supply voltage
2	DATA	I	Data in
3	+DATA	O	Data out
4	GND	N/A	Signal ground

Integrated Network Adapter Connector

The system's integrated network adapters function as separate network expansion cards while providing fast communication between servers and workstations. Figure B-6 illustrates the pin numbers for the network connector and Table B-6 defines the pin assignments for the connector.

Figure B-6. Network Adapter Connector

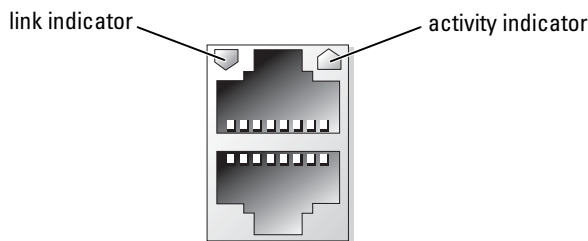



Table B-6. Network Adapter Connector Pin Assignments

Pin	Signal	I/O	Definition
1	TD+	O	Data out (+)
2	TD-	O	Data out (-)
3	RD+	I	Data in (+)
4	NC	N/A	No connection
5	NC	N/A	No connection
6	RD-	I	Data in (-)
7	NC	N/A	No connection
8	NC	N/A	No connection

Network Cable Requirements

The network adapters support a UTP Ethernet cable equipped with a standard RJ-45-compatible plug. Observe the following cabling restrictions.

 **NOTICE:** To avoid line interference, voice and data lines must be in separate sheaths.

- Use Category 5 or greater wiring and connectors.
- Do not exceed a cable run length (from a workstation to a hub) of 100 m (328 ft).

For detailed guidelines about the operation of a network, see "Systems Considerations of Multi-Segment Networks" in the IEEE 802.3 standard.

Abbreviations and Acronyms

A

ampere(s)

AC

alternating current

ANSI

American National Standards Institute

BIOS

basic input/output system

C

Celsius

CD

compact disc

cm

centimeter(s)

CMOS

complementary metal-oxide semiconductor

CPU

central processing unit

DC

direct current

DHCP

Dynamic Host Configuration Protocol

DIMM

dual in-line memory module

DMA

direct memory access

DMI

desktop management interface

dpi

dots per inch

DRAM

dynamic random-access memory

DRAC III/XT

Dell Remote Access Card III/XT

ECC

error checking and correction

EDO

extended-data out

EMI

electromagnetic interference

EEPROM

electrically erasable programmable read-only memory

ESD

electrostatic discharge

ESDI

enhanced small-device interface

ESM

embedded server management

F

Fahrenheit

FAT

file allocation table

FCC
Federal Communications Commission

ft
feet

g
gram(s)

GB
gigabyte(s)

GUI
graphical user interface

Hz
hertz

I/O
input/output

ID
identification

IDE
integrated drive electronics

IPX
Internet packet exchange

IRQ
interrupt request

KB
kilobyte(s)

KB/sec
kilobyte(s) per second

kg
kilogram(s)

kHz
kilohertz

L2
Level 2

LAN
local area network

lb
pound(s)

LED
light-emitting diode

LVD
low voltage differential

m
meter(s)

mA
milliampere(s)

mAh
milliampere-hour(s)

MB
megabyte(s)

MHz
megahertz

mm
millimeter(s)

ms
millisecond(s)

MS-DOS®
Microsoft® Disk Operating System

mV

millivolt(s)

NAS

network attached storage

NIC

network interface controller

NIS

network information service

NiCad

nickel cadmium

NMI

nonmaskable interrupt

ns

nanosecond(s)

NTFS

NT File System

NVRAM

nonvolatile random-access memory

PCI

Peripheral Component Interconnect

PDU

power distribution unit

PGA

pin grid array

POST

power-on self-test

RAC

remote access controller

RAID

redundant array of independent disks

RAM

random-access memory

RAS

remote access services

ROM

read-only memory

rpm

revolutions per minute

RTC

real-time clock

SATA

serial ATA

sec

second(s)

SDRAM

synchronous dynamic random-access memory

SMBus

system management bus

SNMP

Simple Network Management Protocol

SDRAM

synchronous dynamic random-access memory

TCP/IP

Transmission Control Protocol/Internet Protocol

UART

universal asynchronous receiver-transmitter

UPS
uninterruptible power supply

UTP
unshielded twisted pair

V
volt(s)

VAC
volt(s) alternating current

VDC
volt(s) direct current

VGA
video graphics array

VRAM
video random-access memory

W
watt(s)

WH
watt-hour(s)

ZIF
zero insertion force

Index

A

application conflicts
software, 28

B

back panel
features, 13
indicators, 13

basic power problems, 35

batteries
troubleshooting, 45

battery, 55
removing or replacing, 55

beep codes, 23

boot drive
configuring, 81

C

checking equipment, 36

configuring
boot drive, 81
software, 27

connectors
keyboard, 113
mouse, 113
network adapters, 115
riser board, 108
serial, 112
system board, 107

USB, 115
video, 114

cooling fan
troubleshooting, 46

cooling shroud, 54
installing, 55
removing, 54

D

damaged systems
troubleshooting, 44

Dell
contacting, 88

diagnostics
advanced testing options, 33
features, 31
running, 32
testing options, 33
using Server Administrator, 31
when to use, 32

diagnostics messages, 26

E

expansion cards, 61
installing, 61
removing, 64
troubleshooting, 48

F

fan assembly, 56
installing, 58
removing, 57

features
back panel, 13
front panel, 11

front panel
features, 11
indicators, 11

H

hard drives
installing, 83
removing, 81
troubleshooting, 47

I

I/O connectors
location, 111

indicators
back panel, 13
front panel, 11

installation guidelines
memory, 67

installing
cooling shroud, 55
expansion cards, 61
fan assembly, 58

- hard drives, 83
- memory, 68
- processor, 72
- riser board, 65
- software, 27

IRQs

- avoiding conflicts, 28
- line assignments, 28

J

jumpers

- about, 105
- system board, 106

K

keyboard

- connector, 113
- troubleshooting, 37

M

memory

- installing, 68
- system, 67
- troubleshooting, 49

memory modules

- installation guidelines, 67
- removing, 69

messages

- beep codes, 23
- diagnostics, 26
- system, 16
- systems management, 40
- warning, 26

mouse

- connector, 113
- troubleshooting, 37

N

network adapters

- connectors, 115
- network cable requirements, 116
- troubleshooting, 39

P

password

- disabling, 109

power supply

- troubleshooting, 46

processor

- removing, 72
- troubleshooting, 50
- upgrades, 72

R

removing

- cooling shroud, 54
- expansion cards, 64
- fan assembly, 57
- hard drives, 81
- memory, 69
- processor, 72
- riser board, 64

riser board, 40

- connectors, 108
- installing, 65

removing, 64

S

safety, 35

serial

- connector, 112

serial I/O device

- troubleshooting, 38

Server Administrator

- using diagnostics, 31

software

- application conflicts, 28
- configuring, 27
- input errors, 28
- installing, 27
- software problems, 27
- troubleshooting errors, 27

startup routine, 35

support

- contacting Dell, 88

system board

- connectors, 107
- jumpers, 106
- troubleshooting, 51

system board components, 53

system cooling

- troubleshooting, 46

system diagnostics

- see *diagnostics*

system messages, 16

T

technical assistance, 10

troubleshooting

- basic I/O, 38
- battery, 45
- cooling fan, 46
- damaged system, 44
- expansion cards, 48
- hard drives, 47
- keyboard, 37
- memory, 49
- mouse, 37
- network adapter, 39
- power supply, 46
- processor, 50
- serial I/O device, 38
- startup routine, 35
- system board, 51
- system cooling, 46
- system specific problems, 35
- USB device, 39
- video, 36
- wet system, 44

- connector, 114
- troubleshooting, 36

W

warning messages, 26

warranty, 9

wet system

- troubleshooting, 44

U

upgrades

- processor, 72

USB

- connector, 115

USB device

- troubleshooting, 39

V

video

Figures

Figure 2-1.	Front-Panel Features	12
Figure 2-2.	Back-Panel Features	14
Figure 2-3.	Network Adapter Indicators	15
Figure 2-4.	Front-Panel USB Connector	15
Figure 5-1.	Inside the System	41
Figure 5-2.	Installing and Removing the Bezel	42
Figure 5-3.	Installing and Removing the System Cover	43
Figure 6-1.	System Board Components and Connectors	54
Figure 6-2.	Installing and Removing the Cooling Shroud	55
Figure 6-3.	Replacing the Battery	56
Figure 6-4.	Installing and Removing the Fan Assembly	57
Figure 6-5.	Removing the Power Distribution Board	59
Figure 6-6.	Installing and Removing the Power Supply	60
Figure 6-7.	Installing and Removing Expansion Cards	62
Figure 6-8.	Installing and Removing a CERC SATA RAID Controller	63
Figure 6-9.	Installing and Removing a Remote Access Controller	63
Figure 6-10.	Installing and Removing the Riser Board	65
Figure 6-11.	Installing and Removing a Daughter Card	66
Figure 6-12.	Installing and Removing a Memory Module	69
Figure 6-13.	Control Panel Removal	71
Figure 6-14.	Installing and Removing the Securing Clip	74
Figure 6-15.	Installing and Removing the Processor in the Socket	75
Figure 6-16.	Removing the System Board and System Board Tray	78
Figure 7-1.	Removing the Hard-Drive Carrier	82
Figure 7-2.	Removing the Hard Drive From the Drive Carrier . . .	83

Figure A-1.	Example Jumper	105
Figure A-2.	System Board Jumpers	106
Figure A-3.	System Board Connectors	107
Figure A-4.	Riser Board Connectors	108
Figure B-1.	I/O Connectors	111
Figure B-2.	Serial Connector Pin Numbers	112
Figure B-3.	PS/2-Compatible Keyboard and Mouse Connector Pin Numbers	113
Figure B-4.	Video Connector Pin Numbers	114
Figure B-5.	USB Connector Pin Numbers	115
Figure B-6.	Network Adapter Connector	115

Tables

Table 2-1.	Front-Panel Indicator Codes	12
Table 2-2.	Back-Panel LED Codes	16
Table 2-3.	System Messages	16
Table 2-4.	Server Module Beep Codes	23
Table 3-1.	IRQ Assignment Defaults	28
Table 4-1.	System Diagnostics Testing Options	33
Table 5-1.	Start-Up Routine Indications	36
Table 6-1.	Sample Memory Module Configurations	67
Table A-1.	System Board Jumper Settings	106
Table A-2.	System Board Connectors	107
Table A-3.	Riser Board Connectors	108
Table B-1.	I/O Connector Icons	111
Table B-2.	Serial Connector Pin Assignments	112
Table B-3.	Keyboard and Mouse Connector Pin Assignments	113
Table B-4.	Video Connector Pin Assignments	114
Table B-5.	USB Connector Pin Assignments	115
Table B-6.	Network Adapter Connector Pin Assignments . . .	116

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>