


WASHER OPERATING INSTRUCTIONS

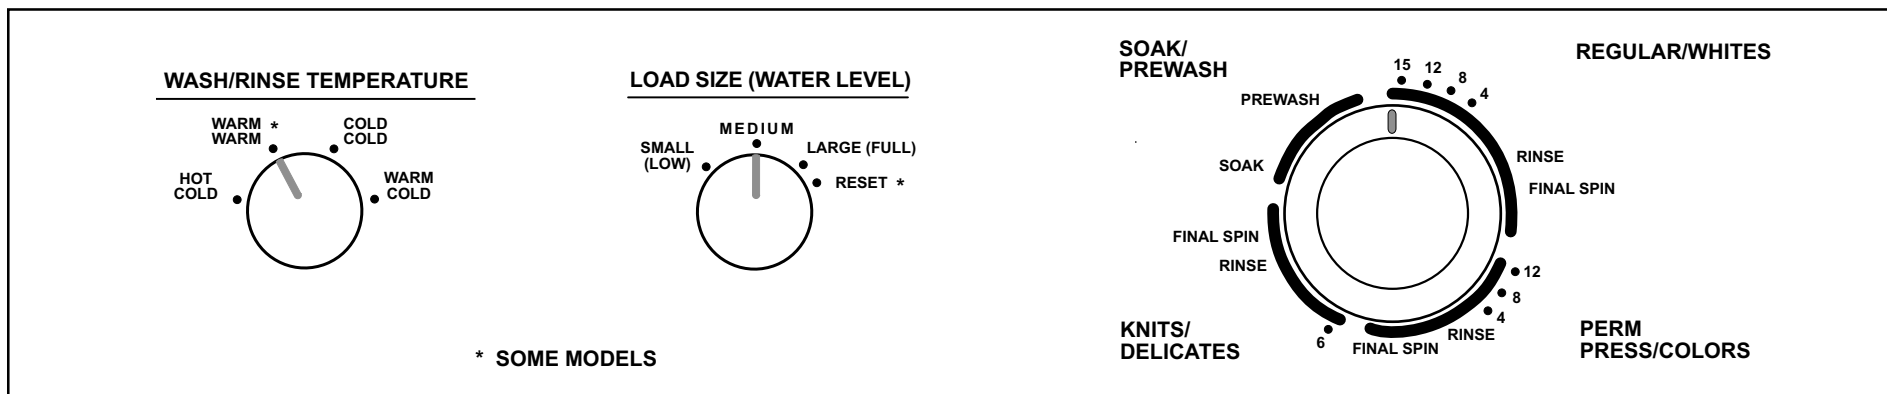

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación. Solicite la P/N 131921400.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best washing results.

WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance.

Operating Steps

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to the washer before adding the laundry load.
- If desired, add liquid bleach to the Bleach Dispenser.
- Add the laundry load to the wash tub.
- If desired, add liquid fabric softener to the Fabric Softener Dispenser on some models or during the final rinse.
- Set washer controls according to type, size, and soil level of the load:
 - Wash/Rinse Temperature
 - Load Size/Water Level
- Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See Cycle Selection for cycle descriptions and

Control Settings Chart for suggested cycle settings.

- Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed. To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.
- Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the end of the spin cycle.

Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the Control Settings Chart (reverse side) if the care label is not available.

The Regular, Perm Press and Knits / Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

(continued, reverse side)

P/N 131921300(9912)

Cycle Selection (continued)

Regular/Whites Cycle

Up to 15 minutes of normal agitation followed by a fast spin for most fabrics.

Perm Press/Colors Cycle

Up to 12 minutes of normal agitation followed by a fast spin for cottons and blends with a no-iron finish.

Knits/Delicates Cycle

Six minutes of gentle agitation followed by a slow spin for knit and delicate items.

Soak/Prewash Cycle

• **Soak** - The Soak setting can be used to treat heavily soiled or stained items. It provides 2 minutes of agitation and 12 minutes of soaking time, then advances to the Prewash portion of the cycle. Use the amount of detergent recommended for a normal wash cycle. For colorfast items, bleach or a soaking agent may also be used. Follow manufacturer's directions on the product label.

• **Prewash** - When soaking is not necessary, the Prewash setting can be used alone to help remove protein-based stains such as milk, grass and blood and to help loosen soils before washing. During Prewash, the washer will agitate the load for 2 minutes, then drain, spin and shut off. Use the amount of detergent and other laundry products recommended for a normal wash cycle.

Note:

- The Soak water temperature is the same as the rinse water temperature selected; the Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.

- These cycle settings should always be followed by a complete wash cycle using the recommended amount of detergent.

WASH/RINSE TEMPERATURE determines water temperatures for washing and rinsing.

LOAD SIZE/WATER LEVEL determines the amount of wash and rinse water used for the wash load. To increase the water level after the wash cycle begins, turn the Load Size control to "Reset" and hold. When water begins to enter the tub, turn the control to the desired setting.

Controls

Select the desired control settings according to load size, fabric type and degree of soiling. See **Control Settings Chart** below for detailed information on choosing control settings.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle setting.

This is only a general guide. For best results, follow label directions on specific items to be washed.

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
REGULAR/WHITES				
Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	15
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular	8 to 12
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	4 to 8
PERM PRESS/COLORS				
White or Heavily Soiled	Hot or Warm	Cold	Perm Press	8 to 12
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press	4 to 8
KNITS/DELICATES				
Knitted Fabrics	Cold	Cold	Knits/Delicates	6
Delicates	Cold	Cold	Knits/Delicates	6
Washable Woolens	Warm	Warm or Cold	Knits/Delicates	6

P/N 131921300(9912)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>