



# SPARC Enterprise M8000/M9000 Servers Getting Started Guide

---

## Accessing the Documentation Files

The documentation set for SPARC Enterprise M8000/M9000 servers is available on the following websites:

**Global Site**

<http://www.fujitsu.com/sparcenterprise/manual/>

**Japanese Site**

<http://jp.fujitsu.com/platform/server/sparcenterprise/manual/>

---

**Note** – For late-breaking information about the SPARC Enterprise M8000/M9000 servers hardware, software, or documentation, refer to the *SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Product Notes* at: <http://www.fujitsu.com/sparcenterprise/manual/>

---

---

# SPARC Enterprise M8000/M9000 Servers Documents



## System planning and installation preparation

- SPARC Enterprise M8000/M9000 Servers Overview Guide
- SPARC Enterprise M8000/M9000 Servers Site Planning Guide



## System installation and component addition/removal

### Manuals related to the SPARC Enterprise M8000/M9000 servers installation:

- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Important Legal and Safety Information
- SPARC Enterprise M8000/M9000 Servers Getting Started Guide
- SPARC Enterprise M8000/M9000 Servers Unpacking Guide
- SPARC Enterprise M8000/M9000 Servers Installation Guide
- SPARC Enterprise M8000/M9000 Servers Safety and Compliance Guide
- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Administration Guide
- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide

### Manuals related to SPARC Enterprise M8000/M9000 servers expansion (active, cold, and hot expansion):

- SPARC Enterprise M8000/M9000 Servers Service Manual



## Operation and management

- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Product Notes
- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Administration Guide
- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide
- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF Reference Manual
- SPARC Enterprise M4000/M5000/M8000/M9000 Servers Dynamic Reconfiguration (DR) User's Guide



## Repair and troubleshooting

- SPARC Enterprise M8000/M9000 Servers Service Manual
- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Administration Guide



## Globalization

- For SPARC Enterprise M8000/M9000 servers, the documents of localized versions will be offered on the website:  
<http://www.fujitsu.com/sparcenterprise/manual/>

# Installation Steps for SPARC Enterprise M8000/M9000 Servers



- 
- Step 1**
- Check the power source, air conditioning equipment, and location of the installation site. For details, see the *SPARC Enterprise M8000/M9000 Servers Site Planning Guide*.
- 
- Step 2**
- Unpack the product package by referencing the *SPARC Enterprise M8000/M9000 Servers Unpacking Guide*, which comes with the server.
- 
- Step 3**
- Install the main unit. If there is an expansion cabinet to be connected to the SPARC Enterprise M9000 server, or a power supply cabinet to be mounted in the SPARC Enterprise M8000 server or SPARC Enterprise M9000 server, connect each of them to the relevant cabinet. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 4**
- Connect the input power cables to the main unit. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 5**
- Connect the console to the main unit. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 6**
- Turn on the main line switch of the main unit. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 7**
- Set necessary information for hardware. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 8**
- Turn on the power to the main unit. POST is automatically executed after power-on. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 9**
- Set a LAN port on the XSCF unit and connect it. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide* and the *SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide*.
- 
- Step 10**
- If you are installing other peripheral devices in the main unit, proceed to Step 11.
  - If you are not installing peripheral devices in the main unit, proceed to Step 14.
- 
- Step 11**
- Turn off the power to the main unit. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 12**
- Install other peripheral devices. For details, see manuals supplied with each peripheral device.
- 
- Step 13**
- Turn on the power to the main unit. POST is automatically executed after power-on. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 14**
- Check the network connection of domain. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide*.
- 
- Step 15**
- Confirm the operation by using Oracle VTS. For details, see the *SPARC Enterprise M8000/M9000 Servers Installation Guide* and the *Oracle VTS User's Guide*.
- 
- Step 16**
- Perform the setup required for the operation of the system. For details, see the *SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers Administration Guide*.
-

## Accessing Important Information for SPARC Enterprise Series Servers

Before you deploy your server, check for the Product Notes for your server and other important information on the following websites:

### Global Site

<http://www.fujitsu.com/sparcenterprise/manual/notes/>

### Japanese Site

<http://jp.fujitsu.com/platform/server/sparcenterprise/manual/notes>

## Accessing Documentation

The following websites provide the latest versions of SPARC Enterprise Series manuals:

### Global Site

<http://www.fujitsu.com/sparcenterprise/manual/>

### Japanese Site

<http://jp.fujitsu.com/platform/server/sparcenterprise/manual/>

## Documentation Feedback

If you have any comments or requests regarding this document, go to the following website and state the manual code, documentation title, and your points specifically:

[http://www.fujitsu.com/global/contact/computing/sparce\\_index.html](http://www.fujitsu.com/global/contact/computing/sparce_index.html)

Copyright © 2007, 2012, Fujitsu Limited. All rights reserved. Oracle and/or its affiliates provided technical input and review on portions of this material.  
Copyright © 2007, 2012, Fujitsu Limited. Tous droits réservés. Entrée et revue technical fournies par Oracle et/ou ses affiliés sur des parties de ce matériel.

FUJITSU LIMITED

Manual Code: C120-E323-05EN,  
January 2012, Revision A

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>