

FOR A GOOD REASON


GRUNDIG

**PROFESSIONAL
MULTI
HAIR TRIMMER**

MT 6741

en



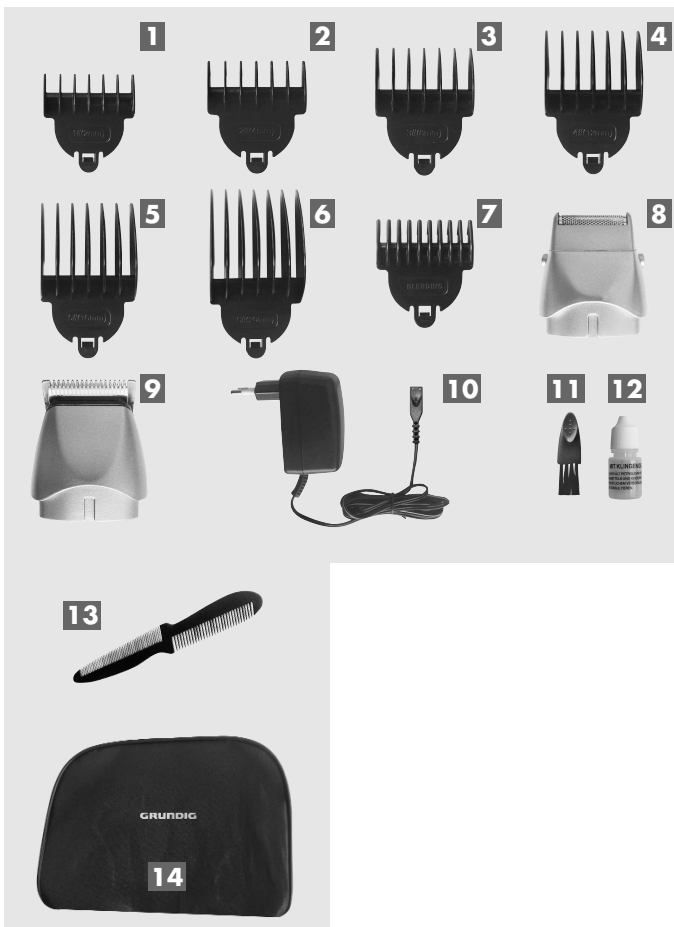

SAFETY

Please note the following instructions when using the appliance.

- The appliance is designed for domestic use only.
- Observe these instructions in order to prevent damage to the appliance or danger arising from improper use. Keep them in a safe place.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.
- Always disconnect the power supply unit if the appliance is not being charged or used.
- Never use the appliance if it is visibly damaged.
- Keep the appliance away from children.
- The appliance may not be used by the following people, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for safety. Children should always be supervised to ensure that they do not play with the appliance.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- Do not drop the appliance.
- If not already present, for additional protection it is recommended to install a residual-current-operated protective device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your electrician for advice.
- Do not open the appliance under any circumstances. No warranty claims are accepted for damage resulting from improper handling.

OVERVIEW

Dear customer,

Congratulations on the purchase of your MT 6741 multi-hair trimmer.

Read the following user notes carefully to ensure you can enjoy your quality product from Grundig for many years to come.

The high-quality and professional styling appliances in the new product range fulfil the highest standards for salon results at home.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.
For a good reason. Grundig.

Special features

This appliance has five separate functions:

- precise hair cutting at a width of 38 mm.
- precise beard trimming at a width of 30 mm.
- hair or beard trimming with various cutting lengths (2, 4, 8, 12, 16, 20 mm) at widths of 38 mm or 30 mm.
- thinning out hair.
- close shaving.

OVERVIEW

Controls

See the illustrations on pages 2 and 3.

- A** Professional cutting head made from ceramic/stainless steel (width 38 mm).
- B** Side catches for removing attachments.
- C** On/off switch.
- D** Charging display (LED). Lights up red when charging and green when it is fully charged.
- E** Socket for plugging into the charging unit or connecting the power supply unit.
- F** Charging unit.

Accessories

- 1** Six comb attachments for various cutting lengths
- 6** (2 to 20 mm), suitable for both cutting heads.
- 7** Attachment for thinning out hair.
- 8** Shaving attachment with single blade foil for a smooth shave.
- 9** Beard trimming attachment (width 30 mm).
- 10** Power supply unit.
- 11** Cleaning brush.
- 12** Oil.
- 13** Comb.
- 14** Storage case.

POWER SUPPLY

Rechargeable battery operation

When operating the appliance with the built-in nickel metal hydride battery, only use the power unit supplied for charging.

Check that the voltage indicated on the type plate of the power supply unit corresponds to your local power supply.

- 1 Plug the power cord into the appliance socket **E** and the power supply unit into the wall socket.



Notes

- Charge up the batteries completely before you use them for the first time or if you have not used them for a long time (approx. 24 hours' timer-controlled charging).
 - The charging display **D** lights up red when charging and changes to green when it is fully charged.
- After the batteries are first charged, the charging time is approx. 12 hours when the appliance is switched off. If you switch on the appliance while it is charging, charging will stop.
 - The charging display **D** goes out.
- The ambient temperature should be between 5 °C and 40 °C.
- When fully charged, the appliance works for about 40 to 60 minutes.

This depends on the attachment being used. It is not advisable to charge the batteries after every use, especially if you do not use the appliance for the full 30 minutes.

Charge the batteries at your convenience only when they are completely discharged. This increases their service life. Avoid charging every day.

POWER SUPPLY

Using the charging unit

- 1 Plug the socket **E** of the appliance into the charging unit.
- 2 Plug the power cord into the socket on the charging unit.
- 3 Plug the power supply unit into the wall socket.

Mains operation (with the power supply unit)

Check that the voltage indicated on the type plate of the power supply unit corresponds to your local power supply.

The only way to disconnect the appliance from the power supply is to unplug the power supply unit.

- 1 Insert the power cord into the socket **E** on the appliance.
- 2 Plug the power supply unit into the wall socket.

Caution

- When in the bathroom or next to a water connection, you must only use the appliance in battery mode; never run it from the mains.

OPERATION

Cutting hair ...

... using the ceramic/stainless steel cutting head **A** (width 38 mm).



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.



- 2 Insert ceramic/stainless steel cutting head **A** carefully at the top and press down until it clicks into place.



- 3 Place a towel around the neck and shoulders of the person whose hair you are trimming.
- 4 Make sure the person is seated so that their head is roughly at your eye level. Before trimming, comb the hair so that it falls naturally and you can see the direction in which it grows.
- 5 Press the **C** button to switch on the appliance.
- 6 Begin use.
- 7 Press the **C** button to switch off the appliance after use.

OPERATION

Beard trimming ...

... using the beard trimming attachment **9** (width 30 mm).



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert beard trimming attachment **9** carefully at the top and press down until it clicks into place.
- 3 Loosen the beard hair by combing the beard in the direction the hair grows.
- 4 Press the **C** button to switch on the appliance.
- 5 Begin use.
- 6 Press the **C** button to switch off the appliance after use.

Trimming hair or beards to a certain length ...

... using the comb attachments **1** to **6**.

Comb #1	2 mm
Comb #2	4 mm
Comb #3	8 mm
Comb #4	12 mm
Comb #5	16 mm
Comb #6	20 mm
Comb #7*	

* is designed for thinning out hair.

- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert attachment **A** (width 38 mm) or **8** (width 30 mm) carefully at the top and press down until it clicks into place.



OPERATION

Note

- The comb attachments fit both cutting heads.
- 3 Push the comb attachment carefully and firmly onto the rounded rear half of the cutting head from above and let it click into place.
 - 4 Press the **C** button to switch on the appliance.
 - 5 Begin use.
 - 6 Press the **C** button to switch off the appliance after use.
 - 7 After use, remove the comb attachment **1** to **6** by pressing the locking tab at the back and removing the comb attachment.

Thinning out hair ...

... using the comb attachment **7** (thinning to a length of 2 mm).

- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert attachment **A** (width 38 mm) or **8** (width 30 mm) carefully at the top and press down until it clicks into place.
- 3 Push the comb attachment **7** carefully and firmly onto the rounded rear half of the cutting head from above and let it click into place.
- 4 Press the **C** button to switch on the appliance.
- 5 Begin use.
- 6 Press the **C** button to switch off the appliance after use.
- 7 After use, remove the comb attachment **7** by pressing the locking tab at the back and removing the attachment.

OPERATION

Close shaving ...

... using the shaving attachment **8**.



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert shaving attachment **8** carefully at the top and press down until it clicks into place.
- 3 Press the **C** button to switch on the appliance.
- 4 Begin use.
- 5 Press the **C** button to switch off the appliance after use.

Note

- Do not apply strong pressure when shaving, as this could damage the single blade foil.

Note

- You can remove the single blade foil of the shaving attachment. To do this, press both side catches on the shaving attachment. Clean the blade head with the cleaning brush supplied.

CLEANING AND CARE

Cleaning and care

- Switch off the appliance and unplug the power supply unit from the mains.
- Remove the attachment and clean the blade head with the brush supplied.

Caution

- If cleaning with the brush is not sufficient, you can also rinse the attachment under running water. However, only do this once the attachment has been removed.
- The cutting head on the attachment does not normally need to be oiled. If you clean the attachment under running water regularly but you also want to maintain the original condition of the cutting head for as long as possible, it is worth oiling it at regular intervals with the oil provided.
- Use a soft, dry cloth or the brush supplied to clean the appliance housing and the charging unit.

Caution

- Never put the appliance, charging unit or power supply unit in water or any other liquid.
- Before using the appliance again, ensure that all attachments have been carefully dried using a soft towel.
- Do not use cleaning agents.

Note

- Remove any clippings after each use.

CLEANING AND CARE

Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- 1 Make sure it is unplugged, has completely cooled down and all the accessories are completely dry.
- 2 Store the parts in the original box in a cool, dry place.
- 3 Make sure the appliance is kept out of reach of children.

Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not dispose of the product along with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

Technical data



This product fulfils the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power supply

Batteries: Nickel metal hydride

Mains adapter:

100 – 240 V~, 50/60 Hz

3.4 V DC 1000 mA



Ni-MH



Technical and design modifications are reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>