

CREST



RCP1F MANUAL

OVERVIEW

The Crest TV Full remote control with exclusive Dynamic Database Technology is designed to be a complete replacement remote control for your Television.

The remote control requires installing two (2) new AAA batteries (not-included) and some easy programming to control your TV.

For best results, please read and perform all instructions listed here. Also, keep this guide for future reference.

INSTALLING BATTERIES

1. Pull back the remote control's battery cover and remove it.
2. Insert the two (2) AAA batteries according to the + and - marks in the battery case.
3. Push the battery cover back into place.
4. Test the unit by pressing the Power key. If batteries are inserted correctly, the Red light will light.

NOTE: When the batteries need to be replaced, the remote control will stop working. Replace the old batteries and the unit will be restored to its full functionality, complete with your favorite settings.

FEATURES AND FUNCTIONS

Press Power once to turn on or off the TV

Use Setup for all programming sequences

Press 16:9 to change the aspect ratio/picture format on your TV. (Not available for TV's)

Press SLEEP to activate the internal Sleep timer of your TV (Not available for TV's)

The digit keys are used to program the remote control and operate identically as your original remote control.

Use the AV Key to change the Video inputs on your TV. (Not available on all TV's)

Use the +/- key to switch between 1 and 2 digit channel entry.

Press Mute once to turn sound off or on.

Use VOL+ (or VOL-) to raise (or lower) the sound volume.

Press the Return key to switch between the channel selected and the last channel viewed.

Use CH+ (or CH-) to select the next higher (or lower) channel.

Use the CURSOR and OK key's to navigate and select items in the on screen menu.

Use the MENU key to access the on screen menu of your TV

The Red, Green, Blue and Yellow Keys will allow you to access the Fast-Text functions of your TV (NOTE: Fast-text is not available on all TV's, please consult the user manual of your TV for complete operation)

The Teletext keys are used to access the teletext features of your TV. (NOTE: Teletext is not available on all TV's, please consult the user manual of your TV for complete operation)

PROGRAMMING YOUR TV

The CREST TV FULL Universal remote is preprogrammed with codes for the most popular remote controlled TV's manufactured for use in Australia.

On the back side of the instruction sheet you will find the Set-Up code list. This section lists the codes for your TV by brand name.

1. Turn on the TV
NOTE: Please read steps 2 to 6 completely before proceeding. Highlight or write down the codes for the TV you wish to program before moving on to step 2.
2. Press and hold Setup until the red light , blinks twice and then release Setup.
3. Locate the code for your device in Manufacturer's Codes on the back of this user guide. Brands are listed in alphabetical order.
4. Using the DIGIT keys enter in the first 4 digit code listed for your brand of TV. The red light will flash twice.
5. Aim the remote control at your TV and press Power once. The device should turn off. If the TV does not respond, repeat steps 2 to 5, trying each code listed for your brand until you find one that works. If it still does not work, try Searching For Your Code.
6. For future reference, write your device code in the appropriate boxes below:
TV Code:

SEARCHING FOR YOUR CODE

If your Television does not respond to the remote control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

1. Turn on the TV
2. Press and hold Setup until the red light , blinks twice and then release Setup.
3. Press and release the MUTE and OK keys simultaneously, the RED Light will flash twice and stay lit.
4. Aim the remote controls at the Television and press and release the CURSOR UP,
Continue pressing and releasing the CURSOR UP key until your Television turns off and stop immediately.
5. Press and release the OK key to store the code.

TROUBLESHOOTING

PROBLEM: The Red LED does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AAA batteries.

PROBLEM: During programming, a red light does not flash twice after entering the code.

SOLUTION: An invalid entry has occurred. Check the code to be entered and try programming again.

PROBLEM: The red light blinks when you press a key, but the TV does not respond.

SOLUTION: Make sure the remote control is aimed at your TV and is not farther than 15 feet away.

PROBLEM: The remote control does not control the TV or the commands are not working properly.

SOLUTION: Try all listed codes for the TV brand being set up. Make sure they can be operated with an infrared remote control.

30-Day Limited Double Your Money Back Guarantee for the RCP1F

Crest Electronics guarantees for a period of 30 days from date of the original purchase to the original consumer purchaser.

That the RCP1F Universal Remote Control will control any INFRARED remote- controlled TV manufactured for retail sale in Australia.

In the event that your RCP1F Universal Remote Control will not control your TV, you must call our National Toll-Free Number 1 800 812 261 and provide the following information:

- a) Date of Original Purchase.
- b) Name of Retail Location.
- c) Manufacturer's Name and Model number of the device(s) that the RCP 1F Universal Remote Control will not control.

Upon receipt of the above information Crest Electronics, will determine at that time if we can provide you with another Universal Remote Control that will control your TV. If we can provide you with another universal remote control that will control all of your devices, we will ask you to: Return to Crest Electronics the RCP 1F Universal Remote Control (in good working condition) together with the original packaging and all materials, along with your proof of retail purchase the, original manufacturers' remote and model number of the TV the RCP 1F Universal Remote Control will not control.

Upon receipt of your RCP 1F Universal Remote Control and original TV remote control , Crest Electronics will send you another remote control to control your devices.

If Crest Electronics determines that it cannot provide you with a remote control that will control all of your devices you will be required to:

Upon receipt of your RCP 1F Universal Remote Control and, Crest Electronics will send you a cheque for double the retail amount paid by you for the purchase of the RCP 1F Universal Remote Control.

The Following Important Information:

a). This guarantee shall only be applicable for retail purchasers of INFRARED remote-controlled Televisions manufactured for retail sale in Australia or New Zealand

b). This guarantee does not apply to any defective product (to which our normal warranty applies) and any product damaged by accident, misuse, abuse, improper battery installation, fire, water, lightning, or other acts of God. This guarantee does not cover cartons, carrying cases, batteries, broken or marred cabinets, missing packaging or missing instructions.

c). This guarantee only applies to the original purchaser of the RCP 1F Universal Remote Control and does not apply to any product after the initial 30 days from the date of retail purchase to the original retail purchaser and this offer is limited to one (1) refund per family.

This guarantee specifically excludes:

- Non-remote operated Televisions,
- Wired remote operated Televisions
- All Televisions manufactured for sale outside Australia
- Products that operate over 100kHz (Bang & Olufsen)
- Any peculiarity due to the original manufacturer's design such as channel up and down on some models of TV
- Only basic TV functions are applicable TV: volume up, volume down, channel up, channel down, mute, power, digits 0-9, AV, Menu and Navigation Keys

NB: The above "basic functions" are only applicable where the original remote had identical function

• Commercial use of product (eg. Retail outlets, hotels/motels, schools etc.)

The original place of purchase is not responsible for the Double Money Back refund. Crest Electronics is the sole authorised agent for this refund. Any other exchange must be obtained from the original place of purchase to normal company policy.

THIS GUARANTEE IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES. GUARANTEES, INCLUDING WITHOUT LIMITATIONS, WARRANTIES OF MERCHANTABILITY OR FITNESS OR ANY PARTICULAR PURPOSE. IN NO EVENT SHALL CREST ELECTRONICS BE LIABLE FOR LIQUIDATED, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. THE GUARANTEE PROVIDED BY CREST ELECTRONICS WILL CONTINUE UNTIL THE 31ST DAY OF DECEMBER 2006 OR UNTIL CREST ELECTRONICS REVOKES OR TERMINATES THIS GUARANTEE WHICH MAY BE DONE SOLELY AT THE DISCRETION OF CREST ELECTRONICS AND WITHOUT FURTHER NOTICE.

If you have any questions about the operation of your new RCP 1F Universal Remote Control, you may call our consumer help-line for assistance. Before calling, please read this manual carefully to find an answer to your question.

If you cannot find a solution in this manual, please complete the information below.

Date of purchase: / /
Day / Month / Year

In Australia

Tel. 1800 812 261
Opening hours: 8.00am - 5.00pm
(Mon-Fri.)

For WEB SUPPORT:
www.Crestonline.biz

MANUFACTURER'S CODES

Setup Codes For TV's

ACEC	0171
Admiral	0083, 0107, 0178
AEA	0188
Agashi	0083
Aiko	0082, 0083, 0105, 0136
AIM	0188
Akai	0029, 0081, 0082, 0083, 0101, 0105, 0109, 0111, 0136, 0138, 0187, 0188, 1090, 1096
Akiba	0103, 0169, 0170
Akura	0083, 0084, 0113, 0140, 0169, 0170
Alaron	0086
Alba	0082, 0087, 0090, 0102, 0107, 0113, 0121, 0148
Amplivision	0121, 0131
Amstrad	0082, 0083, 0084, 0137, 0166
Anitech	0083, 0092
Ansonic	0110, 0116, 0121, 0125, 0127, 0171
Apollo	0134
Aristona	0171
ASA	0094, 0126, 0129
Asberg	0092
Astra	0188
Asuka	0083, 0170
ATD	0187
Atlantic	0125, 0131
Audiosonic	0083, 0096, 0104, 0121, 0128
Audioton	0082, 0121, 0128
Autovox	0092, 0132
AWA	0030, 0031, 0084, 0085, 0109, 0148, 0149
Baird	0096, 0098, 0105, 0108
Barco	0130
Base	0183, 0184, 0186, 0192
Baseline	0188
Basic Line	0135, 0170
Baur	0093, 0123, 0124, 0132, 0136, 0174, 0179, 0180
Beko	0109, 0121, 0128, 0188
Benq	0018, 0019, 0020, 0022
Beon	0107
Best	0104, 0121
Blaupunkt	0123, 0124
Blue Sky	0103, 0113, 0169, 0170
BPL	0170
Brandt	0096, 0099, 0100, 0117
Brinkman	0107, 0175
Brionvega	0137
Bush	0082, 0083, 0987, 0088, 0090, 0106, 0113, 0132, 0136, 00147, 0148, 0170, 0175, 0188
Carena	0103
Celestial	0007, 0155
Centrex	0026, 0187, 0192, 0194, 0195
CGE	0092, 0107, 0121
Changhong	0043, 0044, 0045
Clarivox	0107, 0129
Clatronic	0082, 0083, 0092, 0102, 0116, 0121, 0131
Condor	0107, 0110, 0116, 0121, 0131
Conia	0189
Contec	0148, 0149
Continental Edison	0096, 0099, 0100, 0147
Cosmel	0104
Crosley	0092
Crown	0092, 0102, 0107, 0121,

	0128, 0140, 0141, 0147
Curtis Mathis	0159, 0178
Daewoo	0146, 0173
Dansai	0083
Dantax	0121, 0128
De Graaf	0138, 0164, 0165
DEC	0187
Decca	0105, 0106
Deitron	0188
Denko	0083
Diamond	0187
Digital Life	0035, 0036
Digisonic	0187
Digitor	0187, 0188
Digitrex	0192, 0194
DL	0192, 0194
Dual	0093, 0098, 0125, 0132, 0175
Dumont	0105, 0126, 0129
Dux	0171
DVX	0192
Elbe	0091, 0110, 0121, 0125, 0127, 0127, 0150
Elcit	0116
Elekta	0082, 0170
Elin	0126, 0132, 0136, 0138
Elite	0116, 0169
Elta	0083
Emerson	0082, 0086, 0129, 0131, 0166, 0170
Erres	0171
Eurofeel	0083
Euroman	0082, 0121
Europhon	0116
Expert	0125
Ferguson	0096, 0100, 0108, 0117, 0188
Fidelity	0082, 0083
Finlandia	0094, 0136, 0138, 0140, 0154
Finlux	0086, 0092, 0094, 0105, 0110, 0116, 0126, 0129
Firstline	0087, 0088, 0089, 0105, 0110, 0113, 0116, 0132
Fisher	0093, 0105, 0132, 0153, 0154
Forment	0092
Former	0131
Friac	0116
Frontech	0083, 0132
Fujitsu	0086, 0105, 0116, 0182
Funai	0083, 0086, 0088
Galaxis	0107, 0116, 0121
GE	0096, 0098, 0100, 0105, 0117, 0136, 0170
GEC	0132, 0158
General	0096, 0100, 0118, 0151
Genesis	0188
Genexxa	0084
Goldcrest	0188
Goldstar	0111, 0188
Goodmans	0082, 0083, 0086, 0087, 0098, 0105, 0117, 0148, 0173, 0188
Gorenje	0121
GP	0188
Gradiente	0141, 0152
Graetz	0082, 0136
Granada	0092, 0105, 0115, 0117, 0119, 0133, 0134, 0140, 0153, 0167, 0171
Grandig	0131
Grandin	0091, 0103, 0170
Grundig	0092, 0123, 0124, 0129, 0176, 0188
Haaz	0187
Haier	0028, 0187, 0192
Halifax	0083

Hanimex	0088
Hanseatic	0088, 0121, 0127, 0131, 0132, 0136, 0170, 0175
Hantarex	0116
Harwood	0084
HCM	0083, 0084, 0107
Hifi vox	0096, 0099
Hinari	0086, 0087, 0088, 0090, 0120, 0154
Hisawa	0103
Hisense	0012, 0046
Hitachi	0032, 0033, 0098, 0105, 0158, 0159, 0160, 0161, 0162, 0163
HMV	0188
Hornophone	0171
Hoshai	0103
Huanyu	0146
Hypson	0083, 0103
Hyundai	0187
ICE	0082, 0083
Imperial	0092, 0107, 0121, 0132
Ingelen	0091
Inno Hit	0092, 0105
Interfunk	0096, 0099, 0121, 0136, 0171, 0174
Intervision	0082, 0083, 0103, 0111, 0116, 0121, 0128, 0147, 0170, 0175
Irradio	0092
ITT	0086, 0094, 0132, 0135, 0136, 0138
ITT Nokia	0086, 0091, 0094, 0109, 0132, 0134, 0136, 0138
ITV	0083
JNL	0187, 0188
JVC	0013, 0014, 0082, 0141, 0142, 0187
Kaisui	0103
Kambrook	0188
Kapsch	0125, 0126, 0136
Karcher	0083, 0091, 0116, 0121
Kendo	0087, 0091, 0110, 0111, 0116, 0121, 0137, 0175
Kneissel	0091, 0110, 0125, 0127, 0132, 0150
Kolster	0116
Konka	0043, 0044, 0045, 0082, 0188, 0189
Korting	0121, 0131
Kotron	0083, 0084
Kyoshu	0083, 0084, 0107
Lenco	0083, 0088, 0102, 0105, 0126
LG	0041, 0042, 0111, 0121, 0136, 0145, 0187
Lifetec	0083, 0113, 0169, 0174, 0175
Loewe	0121, 0127, 0174
Logik	0082, 0188
Logix	0113
Lowre	0187
Luma	0110, 0125, 0137, 0182
Lumatron	0083, 0125, 0136, 0137
Luxor	0086, 0094, 0114, 0132, 0133, 0134, 0136, 0138, 0187
MAG	0016, 0017, 0021
Magnadyne	0116
Magnafon	0092, 0116
Magnavox	0034, 0086, 0194, 0196
Manesth	0083, 0087, 0088, 0131
Mark	0194
Masuda	0082, 0188
Matsui	0082, 0087, 0088, 0090, 0102, 0103, 0105, 0106, 0117, 0120, 0123, 0132, 0148, 0152, 0166
Mediator	0171, 0176

Medion	0113
Melectronic	0094, 0096, 0098, 0110, 0126, 0132, 0174
Memorex	0143
Memphis	0104, 0105
Metz	0122, 0123, 0124, 0177
Micromaxx	0113
Minerva	0092, 0123, 0124, 0129
Minoka	0084, 0140
Mitsubishi	0119
Mivar	0092, 0112, 0121, 0127
MTC	0121, 0132, 0174
MTEC	0106
Multitech	0113, 0116, 0121, 0128, 0132
NEC	0037, 0038, 0103, 0188, 0191
Neckerman	0107, 0110, 0121, 0124, 0132, 0152, 0176, 0179, 0180
NEI	0082, 0104
Nuefunk	0091, 0176
Nikkai	0083, 0104, 0105
Noblex	0083
Nogamatic	0096, 0099
Nokia	0094, 0109, 0132, 0134, 0136, 0138, 0140, 0192
Normende	0096, 0098, 0099, 0100, 0117, 0123
Nu-Tec	0188
Oceanic	0088, 0135, 0136, 0154, 0162
Okano	0188
Omega	0083
Omni	0035, 0187, 0192, 0194, 0195
Onwa	0081, 0082, 0187
Optimus	0143
Orion	0083, 0084, 0086, 0087, 0089, 0090, 0116, 0120, 0131
Osaki	0083, 0084, 0105, 0106
Osume	0105, 0149
Otto Versande	0087, 0088, 0093, 0096, 0123, 0124, 0131, 0132, 0136, 0167, 0176, 0179
Palladium	0107, 0110, 0121, 0124, 0132, 0179, 0180
Palsonic	0083, 0084, 0111, 0187, 0188
Panama	0083
Panasonic	0143, 0144, 0167
Panavision	0110
Panda	0192
Pathe Marconi	0096, 0099
Perdio	0105, 0131
Philco	0092, 0107, 0121, 0159
Philips	0098, 0124, 0171, 0176, 0188
Phonola	0171
Pioneer	0096, 0098, 0121, 0136
Premier	0188
Pretech	0083, 0104, 0107, 0113, 0116, 0132
Prima	0083
Princess	0187, 0192
Princeton	0187
Profitonic	0116
Proline	0089, 0105, 0171
Prosonic	0082, 0102, 0113, 0121, 0146
Protech	0187
Proview	0016, 0017, 0021
Provision	0173
Quasar	0143, 0188
Quelle	0083, 0096, 0113, 0123, 0124, 0126, 0129, 0132, 0136, 0149, 0174

Radiomarelli	0115
Radiotone	0083, 0084, 0102, 0107, 0121
RCA	0117, 0178, 0188
Rediffusion	0115, 0136, 0138
Revox	0121
Rex	0110, 0125, 0182
RFT	0083, 0105, 0121, 0127
Roadstar	0083, 0107
Rowa	0193
Royal Lux	0084, 0121
Saba	0096, 0098, 0099, 0100, 0117, 0136, 0138
Sagem	0091, 0103
Saisho	0083, 0087, 0166
Salora	0114, 0132, 0133, 0136, 0138, 0140
Sambers	0092, 0116
Samsung	0079, 0080, 0083, 0105, 0145, 0188
Sansui	0082, 0196
Sanyo	0010, 0011, 0012, 0105, 0126, 0127, 0153, 0154, 0196
Schuab Lorenz	0109, 0132, 0138
Schneider	0082, 0093, 0098, 0113, 0125, 0132, 0136, 0171
Scott	0086
SEG	0083, 0113, 0116, 0137, 0145
SEI	0088, 0116, 0132, 0137
Seleco	0110, 0125, 0137
Sharp	0004, 0088, 0181
Siemens	0123, 0124, 0149
Siera	0171
Singer	0187, 0188
Siesta	0121
Silver	0086, 0136
Sinudyne	0087, 0088, 0116, 0132, 0136, 0166
Skantic	0133
Skysonic	0190
Skyworth	0043, 0044, 0045
Solavox	0105, 0136, 0138
Sonitron	0121
Sonoko	0083, 0170
Sonolor	0135, 0136, 0138, 0179
Sontec	0088, 0121
Sonwa	0187
Sony	0001, 0002, 0179, 0180
Sound & Vision	0116
Soundesign	0086
Soundwave	0107, 0131
Starlite	0083
Sunkai	0087, 0088, 0089, 0090, 0103
Sunstar	0082, 0102
Super Tech	0176
Susumu	0117
Tandberg	0096, 0104, 0110, 0122, 0136, 0137
Tandy	0105
Tashiko	0140, 0148, 0152
Tatung	0105, 0106
TCL	0023, 0024, 0043, 0044, 0045
Teac	0083, 0084, 0085, 0103, 0168, 0172, 0187, 0188, 0193
TEC	0104, 0117, 0118, 0125
Tedelex	0035, 0190, 0192
Tekinka	0086
Teleavia	0096, 0099, 0100
Telefunken	0095, 0096, 0097, 0098, 0099, 0100, 0117, 0118, 0128, 0187, 0188, 0192, 0193
Telegazi	0083, 0125

Telemeister	0131
Teletech	0104, 0113
Teleton	0132, 0148, 0182
Televideon	0131
Tempest	0188
Tensai	0082, 0088, 0111, 0126, 0131
Tevion	0039, 0113, 0175, 0189
Thomson	0015, 0096, 0098, 0099, 0100, 0117, 0118, 0195
Thorn	0106, 0108, 0117, 0126, 0140, 0173
Tokai	0104, 0105, 0106
Tongtel	0035, 0194
Toshiba	0007, 0008, 0009, 0046, 0155, 0156
Towada	0116, 0132
Toyoda	0188
Trakton	0083
Transonic	0040, 0103, 0177, 0193, 0194
Triumph	0094, 0157, 0166
Uher	0092, 0093, 0107, 0121, 0125, 0128, 0131, 0146, 0182
Ultravox	0116
Universum	0083, 0088, 0092, 0096, 0104, 0107, 0110, 0113, 0121, 0123, 0126, 0129, 0132, 0134, 0136, 0137, 0149, 0166
Univox	0104
Vestel	0006, 0139
Victor	0141, 0142
Videoton	0133
Vidikron	0116
Vidtech	0148
Vision	0131
Vistar	0136
Voxson	0092, 0107,
VUE	0188
Waltham	0100, 0107, 0133
Watson	0102, 0113, 0131, 0175
White Westing	0003, 0104
Winco	0084
Wintel	0192
Xlogic	0187
XMS	0187
Yamaha	0187
Yamishi	0103
Yoko	0083, 0121
Yoshita	0187
Zanussi	0182
Zenith	0187

This warranty does not cover damage or failures caused by products or services not supplied by Crest Electronics, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God.

This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets, or any other items used in connection with the product.

There are no express warranties except as listed above. CREST SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof of the date of original purchase.

In Australia:
Crest Electronics
Importers & National Distributors
165 South Pine Road
P.O. Box 5658
Brendale - BC
4500 Queensland

IMPORTANT:
IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem. IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD, please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per area.)

NOTHING IN THIS GUARANTEE

AFFECTS YOUR STATUTORY RIGHTS.

DDB is a trademark of CREST.

Copyright 2006 by Crest

All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language or computer language, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of Crest Electronics.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>