

Gefen TOOLBOX

USB 2.0 LR 4-Port Extender

GTB-USB2.0-4LR
User Manual



www.gefentoolbox.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100
(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM (PST) Monday thru Friday Pacific Time.

Write To:

Gefen, LLC
c/o Customer Service
20600 Nordhoff St
Chatsworth, CA 91311

www.gefentoolbox.com
support@gefentoolbox.com

Notice

Gefen, LLC reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

USB 2.0 LR 4-Port Extender is a trademark of Gefen, LLC

© 2010 Gefen, LLC, All Rights Reserved
All trademarks are the property of their respective companies

Rev A4

CONTENTS

- 1 Introduction
- 2 Operation Notes
- 3 Features
- 4 Sender Panel Layout
- 5 Sender Panel Descriptions
- 6 Receiver Panel Layout
- 7 Receiver Panel Descriptions
- 8 Connecting And Operating The USB 2.0 LR 4-Port Extender
- 9 Troubleshooting
- 10 Network Cable Wiring Diagram
- 11 Wiring Diagram
- 12 Specifications
- 13 Warranty

INTRODUCTION

Congratulations on your purchase of the GefenToolBox USB 2.0 LR 4-Port Extender. Your complete satisfaction is very important to us.

About Gefen

We specialize in total integration for your home theater, while also focusing on going above and beyond customer expectations to ensure you get the most from your hardware. We invite you to explore our distinct product line. Please visit <http://www.gefen.com> for the latest offerings in High-Definition signal solutions or call us between the hours of 8:00 am and 5:00 pm Monday-Friday, Pacific Standard Time for assistance with your A/V needs. We'll be happy to assist you.

Why GefenToolBox?

The GefenToolBox line offers portable and easy-to-install solutions for common A/V system integration setups using HDMI connectivity. GefenToolBox products are wall-mountable and small in size. GefenToolBox products are easily transported in the field and are ready for immediate and simple installations in working environments.

The GefenToolBox USB 2.0 LR 4-Port Extender

The USB 2.0 LR 4-Port Extender extends a USB source up to 330 feet (100 meters) using a single CAT-5 cable. This product supports USB 2.0 with data rates up to 480 Mbps in addition to backward-compatibility with USB 1.1. The Receiver Unit allows the connections of up to four (4) USB devices, providing access to printers, scanners, cameras, external storage media, digital signage, and automated control systems.

How It Works

Use the supplied USB cable to connect the USB 2.0 LR 4-Port Sender Unit to the USB host (source) device. Connect the USB devices to the Receiver Unit. Use a CAT-5 cable to connect the Sender Unit to the Receiver Unit. Connect the included locking power supply to the Receiver Unit, then connect the power cord to an available electrical outlet. The LED indicators on the Sender Unit and the Receiver Unit provide status on power and data transmission activity.

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE USB 2.0 LR 4-PORT EXTENDER

- Use industry standard CAT-5, CAT-5e or CAT-6. Gefen recommends using solid core cabling for maximum performance.
- The USB 2.0 LR 4-Port Extender is backward-compatible with USB 1.1.
- The USB 2.0 LR 4-Port Extender can extend USB a maximum of 330 ft (100 m)
- Use only the AC adapter supplied with the USB 2.0 LR 4-Port Extender. Use of substitute adapters may cause permanent damage to the system and will void the warranty.

FEATURES

Features


- Extends USB 2.0 up to 330 feet (100 meters)
- Supports 480 Mbps using USB 2.0
- Backward-compatible with USB 1.1 devices
- Receiver supports up to four (4) USB devices
- Uses industry-standard CAT-5, CAT-5e, or CAT-6 cable
- Plug-and-Play
- Works with PC and Mac computers
- Energy Star compliant
- Locking Power Connectors

Package Includes


- (1) GefenToolBox USB 2.0 LR 4-Port Extender - Sender Unit
- (1) GefenToolBox USB 2.0 LR 4-Port Extender - Receiver Unit
- (1) 6 ft. USB cable (A-B)
- (1) 5 V DC Locking Power Supply
- (1) User Manual

SENDER UNIT LAYOUT

Front Panel

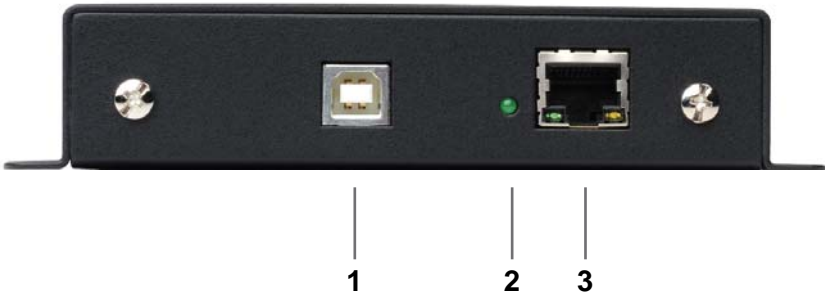

Top Panel

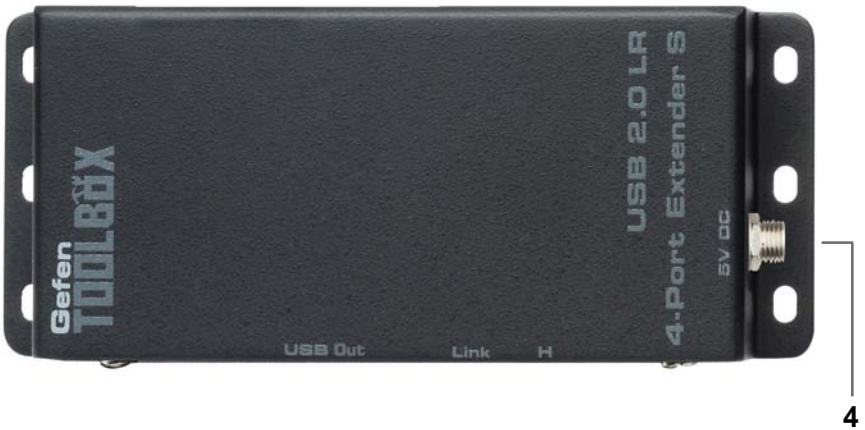

SENDER UNIT DESCRIPTIONS

1 USB Input Port

Connect the USB host device to this port.

2 Host Connection Indicator

This LED will turn bright green once the host USB device has been connected to the Sender Unit.

3 CAT-5 Output Jack

Connects the Sender Unit to the Receiver Unit using CAT-5 cabling.

4 5V DC Locking Power Connector


This receptacle can be used to connect an additional 5V DC locking power supply (sold separately) if the host computer does not provide enough power for operation. Normally, only the Receiver is powered by an external 5V DC locking power supply (included).

RECEIVER UNIT LAYOUT

Front Panel



Top Panel

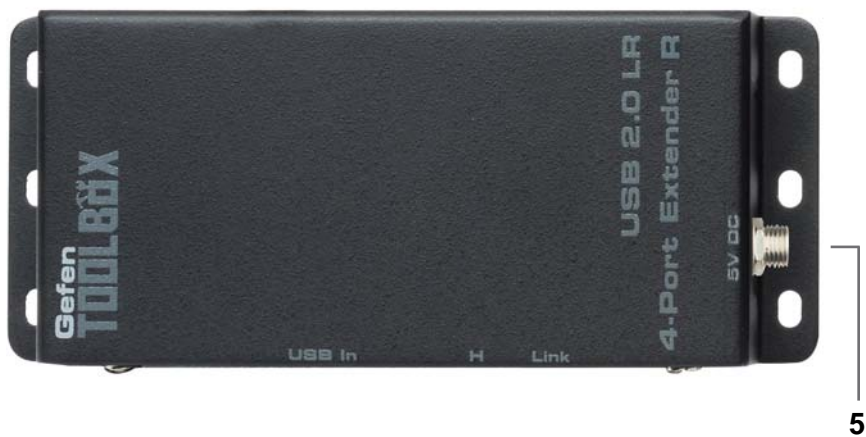

RECEIVER UNIT DESCRIPTIONS

1 USB Output Port (1 - 4)

Connect the USB devices to these ports.

2 USB Connection Indicators (1 - 4)

These LEDs will turn bright green when a USB device has been connected.

3 CAT-5 Input Jack

Connects the Receiver Unit to the Sender Unit using CAT-5 cabling.

4 Host Connection Indicator

This LED will turn bright green once the host USB device has been connected to the Sender Unit. The Receiver Unit must also be connected to the Sender Unit.

5 5V DC Locking Power Connector

Connect the included 5V DC locking power supply to this connector. Screw in the threaded connector until finger tight.

CONNECTING AND OPERATING THE USB 2.0 LR 4-PORT EXTENDER

How to Connect the USB 2.0 LR 4-Port Extender

1. Connect the USB source to the USB 2.0 LR 4-Port Extender Sender Unit using the supplied USB cable.
2. Connect up to four USB devices to the USB 2.0 LR 4-Port Extender Receiver Unit.

NOTE: Powered USB hubs may be connected to these ports up to a maximum connection of 14 USB peripherals (including hubs). Overall speed and power is divided among the active devices.

3. Connect the USB 2.0 LR 4-Port Extender Sender Unit and Receiver Unit together with a CAT-5, CAT-5e or CAT-6 cable.


NOTE: Do not exceed 330 feet (100 meters).

4. Connect the included 5V DC Locking Power Supply to the Receiver Unit. Do not overtighten the threaded locking connectors. Plug the power supply into an available electrical outlet using the included AC power cord.

Wiring Diagram for the USB 2.0 LR 4-Port Extender

**Gefen
TOOLBOX**

CAT5 LINK CABLE 
(Up to 330 ft)
USB 2.0 CABLE 

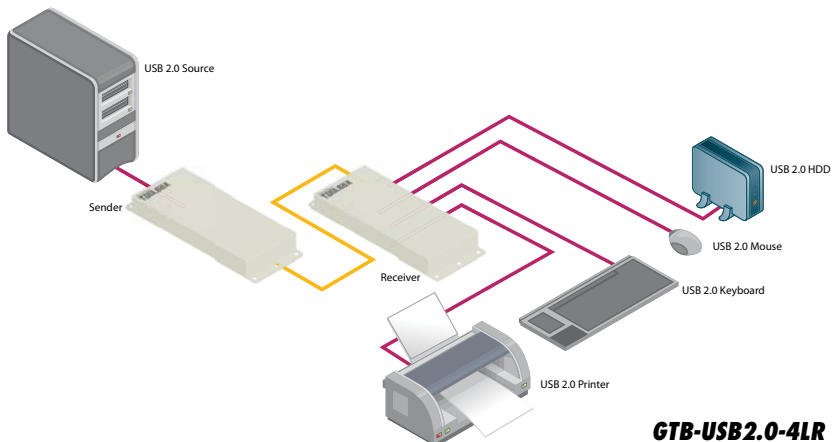

GTB-USB2.0-4LR

TROUBLESHOOTING

Using the LED Indicators

Power LED

The power LED indicators should be active once the included 5V DC power supply has been properly connected between the Receiver unit and an open wall power socket. A non-active LED can indicate a power problem. If the host device is not providing enough power to the Sender Unit, an additional power supply will need to be purchased from Gefen. Contact Gefen Technical Support for assistance.

Host LED

The host LED indicators should be active once a valid USB source/output device has been properly connected to the sending/receiving unit. On the Sender Unit, the LED indicator will only be active once the source device is on. A non-active LED may indicate that the source device is not on or properly connected. On the Receiver, the LED indicator will only be active when a USB device is properly connected and is recognized by the source. A non-active LED may indicate that a USB device is not properly connected or recognized by the source. Please check all USB cables and install the proper drivers for the connected USB device. Devices requiring more power such as hard drives and cameras may require a powered USB hub.

Link LED


The link LED indicators should be active once a valid connection has been made between the Sender Unit and Receiver Unit. A non-active LED may indicate a problem with the CAT-5 cabling. Please check terminations, patch panels, and cables. Use other CAT-5 cables and test the units without using any patch panels.

Checking the Installation

On the Sender Unit and Receiver Unit, check that the Power, Host and Link LEDs are on and that the Activity LED is blinking. If the Link LED and Activity LED are permanently off then the CAT-5 / CAT-6 cabling between the Sender Unit and Receiver Unit is not installed properly or is defective.


- For Windows users, open Device Manager to confirm that the USB 2.0 LR 4-Port Extender has installed correctly. Expand the entry for Universal Serial Bus controllers by clicking the + sign. If the USB 2.0 LR 4-Port Extender has been installed correctly you should find it listed as a Generic USB Hub.
- For Mac OS X users open the System Profiler to confirm that the USB 2.0 LR 4-Port Extender has installed correctly. In the left hand column under Hardware, select "USB" and inspect the right hand panel. If the USB 2.0 LR 4-Port Extender has been installed correctly you should find it listed as a Hub under the USB High-Speed Bus/USB Bus.

NETWORK CABLE WIRING DIAGRAM

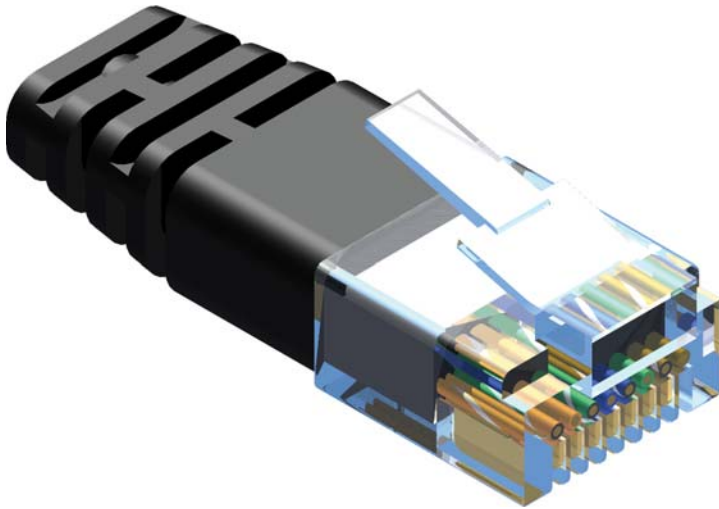

Gefen recommends the TIA/EIA-568-B wiring option. Please adhere to the table below when field terminating cable for use with Gefen products.

Pin	Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

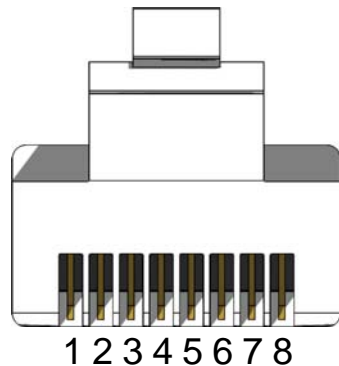

CAT-5, CAT-5e, and CAT-6 cabling comes in stranded and solid core types. Gefen recommends using solid core cabling. CAT-6 cable is also recommended.

It is recommended to use one continuous run from one end to the other. In some cases, connecting through a patch might not work.

SPECIFICATIONS

USB 2.0 Speed	480 Mbps
USB Connector (Sender Unit)	Type B
USB Connectors (Receiver Unit)	(4) Type A
Link Connectors (Sender Unit / Receiver Unit)	RJ-45
Power Supply	5 V / 4 A DC
Power Connectors	Locking
Operating Temperature	0 - 40 °C
Dimensions (Sender Unit / Receiver Unit)	5.75" W x 1.25" H x 2.5" D
Shipping Weight	2 lbs.

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, please visit Gefen's Warranty web page at <http://www.gefen.com/kvm/aboutus/warranty.jsp>

PRODUCT REGISTRATION

Please register your product online by visiting Gefen's web site at <http://www.gefen.com/kvm/Registry/Registration.jsp>



20600 Nordhoff St., Chatsworth CA 91311

1-800-545-6900 818-772-9100 fax: 818-772-9120

www.gefen.com support@gefen.com



This product uses UL listed power supplies.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>