


Care and General Maintenance of your Bissell Cleaner

CONTENTS PAGE


BS-7920F Pro Heat Pro-Tech.....	Page 2
BS-1694F Powerwash Delux.....	Page 4
BS-1950F Quickwash.....	Page 6
BS- 3750F Lift Off.....	Page 7

BS-7920F Pro Heat Pro-Tech

Cleaning of the Red Lint Filter

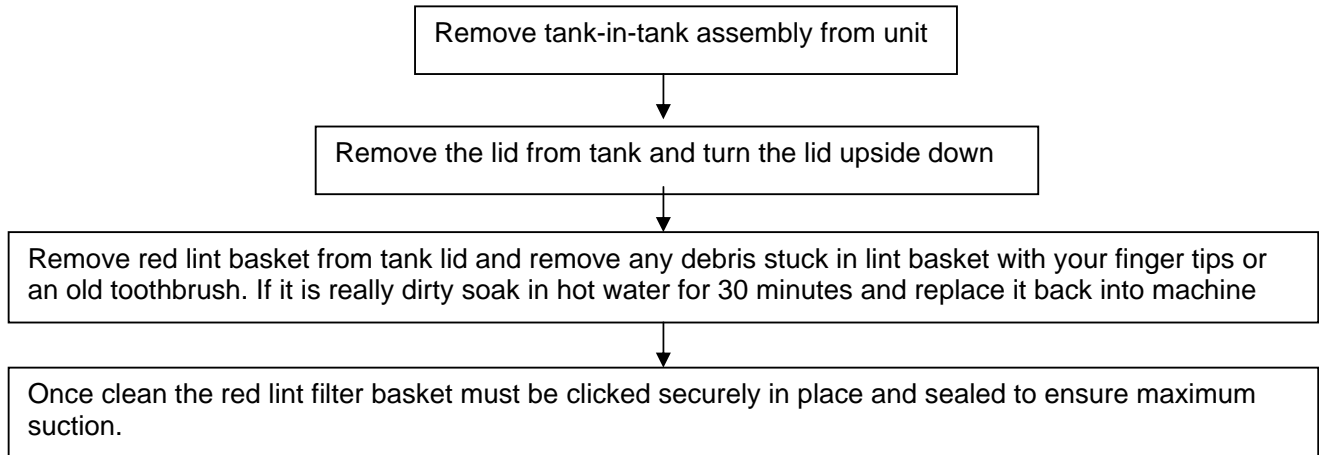

Prevent solution build up in the machine by flushing the machine after cleaning your carpet.

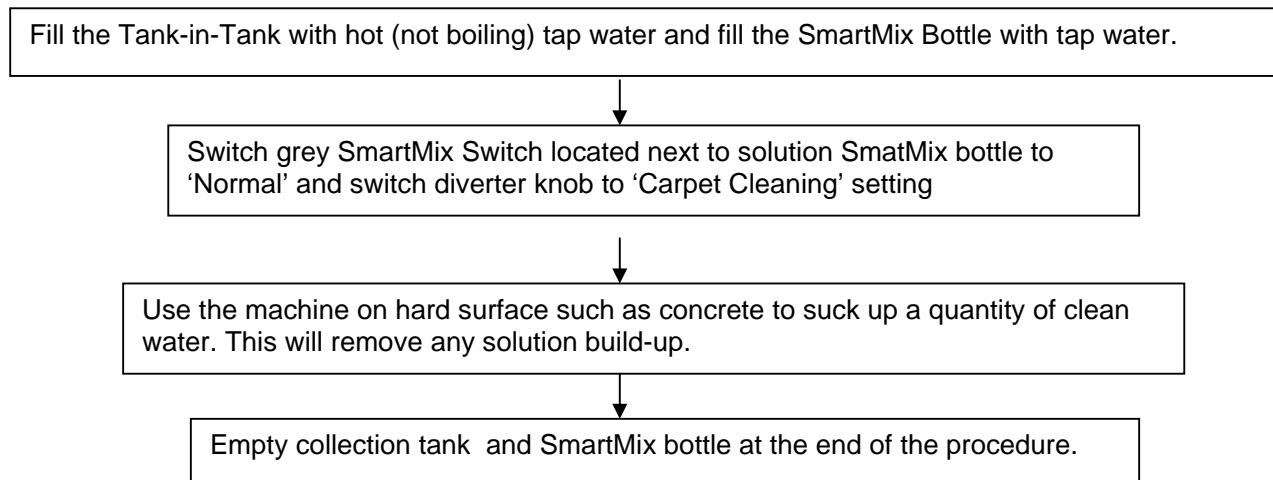

Cleaning of front window nozzle

Fill the Tank-in-Tank with clean tap water and fill the SmartMix Bottle with hot (not boiling) tap water.

Switch grey SmartMix Switch located next to solution SmartMix bottle to 'Normal' and switch diverter knob to 'Carpet Cleaning' setting

Use the machine on hard surface such as concrete to suck up a quantity of clean water. This will remove any solution build-up.

Empty Collection Tank and SmartMix bottle at the end of the procedure.

For any difficult to remove debris that is trapped in the front window nozzle after flushing the machine, it is advisable to use a thin piece of flexible plastic to dislodge the debris.


Cleaning underneath the front window nozzle

Wipe underneath surface with a soft cloth


Ensure after each use that hair and debris are removed from the brush roller using your fingertips or a pair of scissors, paying particular attention to the lever arms. This will prolong the life of the brush belt.

BS-1694F Powerwash Delux


Cleaning of the Red Lint Filter

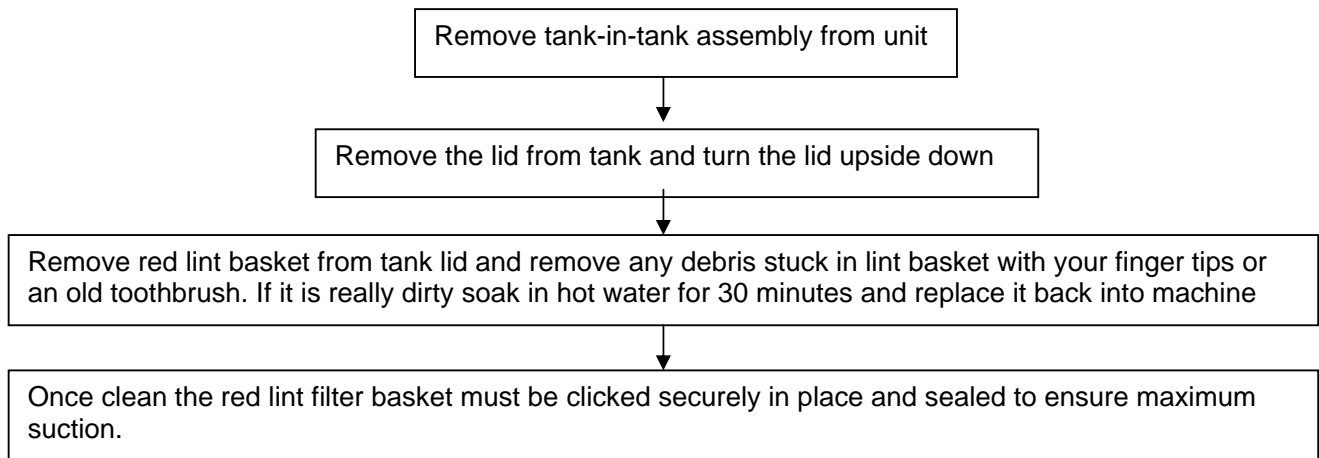


Prevent solution build up in the machine by flushing the machine after cleaning your carpet.

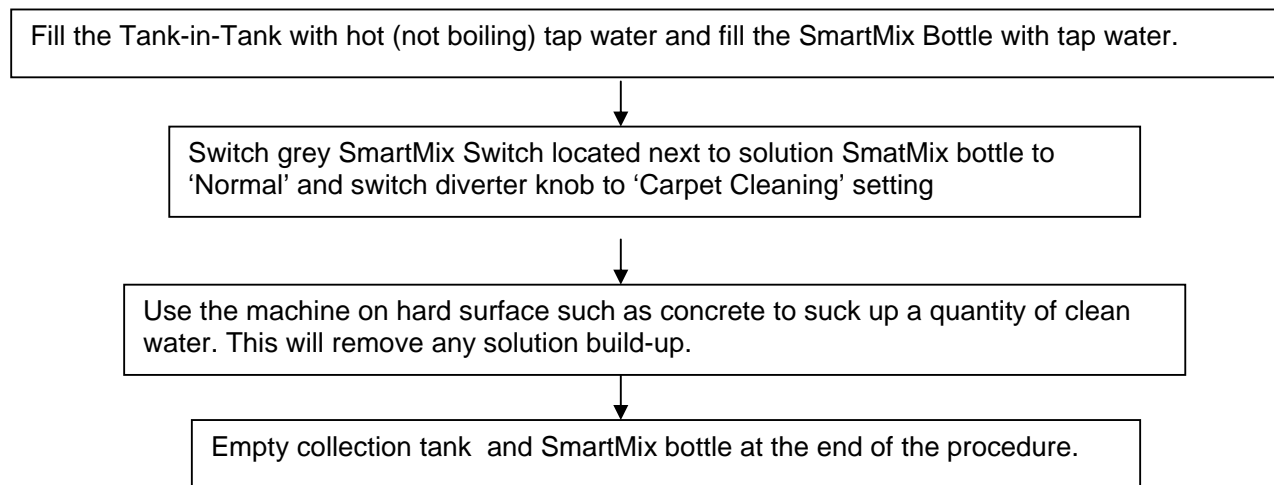

Cleaning of front window nozzle

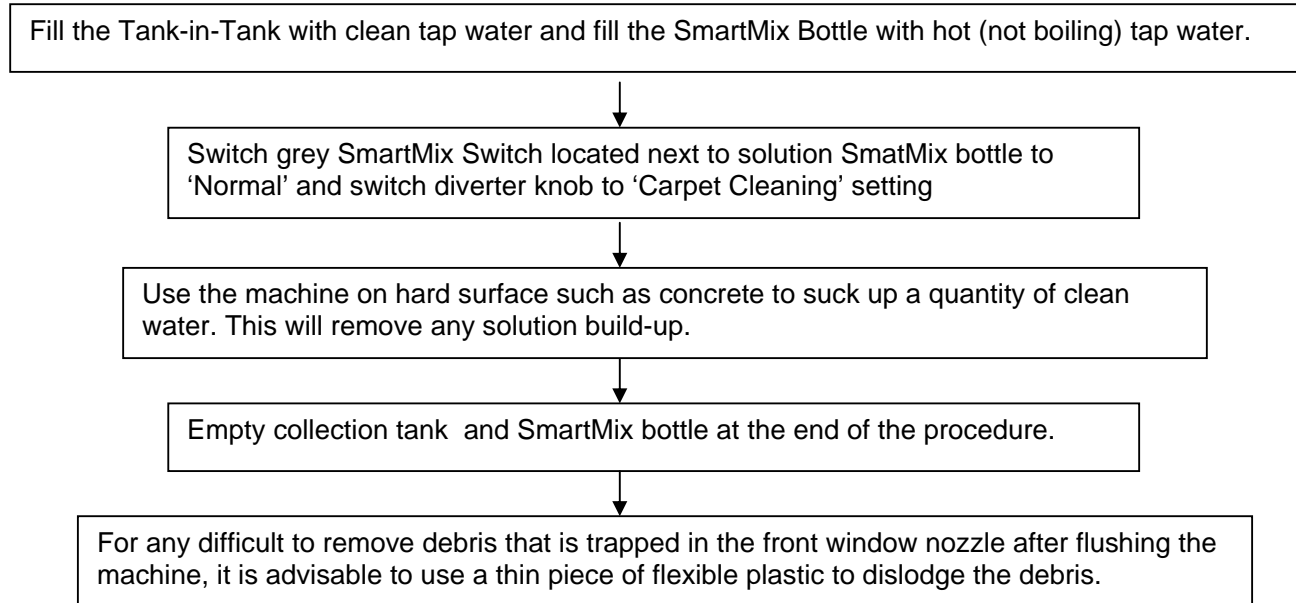

Cleaning underneath the front window nozzle

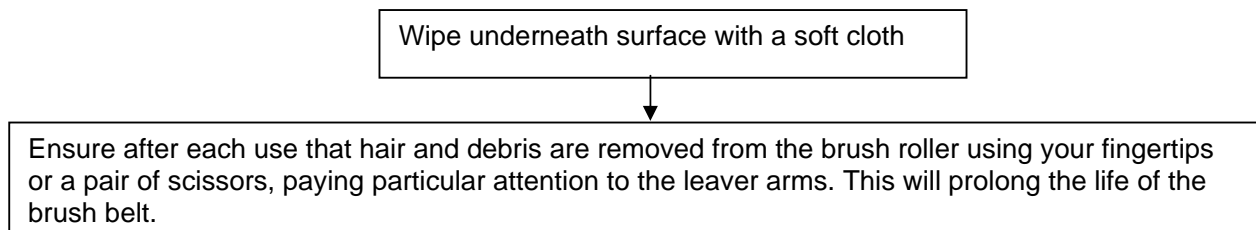

BS-1950F Quickwash

Cleaning Delivery Tank

Remove delivery tank and thoroughly rinse using hot (not boiling) tap water

Cleaning underneath the front window nozzle

Fill delivery tank with clean water only.

Use machine on concrete to suck up a quantity of clean water.

Wipe underneath surface with a soft cloth

Ensure after each use that hair and debris are removed from the brush. This will prolong the life of the brush.

Remove and empty Dirty Water Tank

Press detent pedal and tip handle back, laying unit flat on the floor


Release dirty water tank latches (grey latches, 1 on each side of unit) by pulling up from the bottom of the latch and then out

Carefully lift blue dirty water tank from the lower body. Empty tank and rinse thoroughly with hot (not boiling) tap water

Replace blue dirty water tank on lower body of unit and secure with latches

BS- 3750F Lift Off – Refer to Yellow piece of paper supplied with machine

Empty the clear plastic Dirt Container

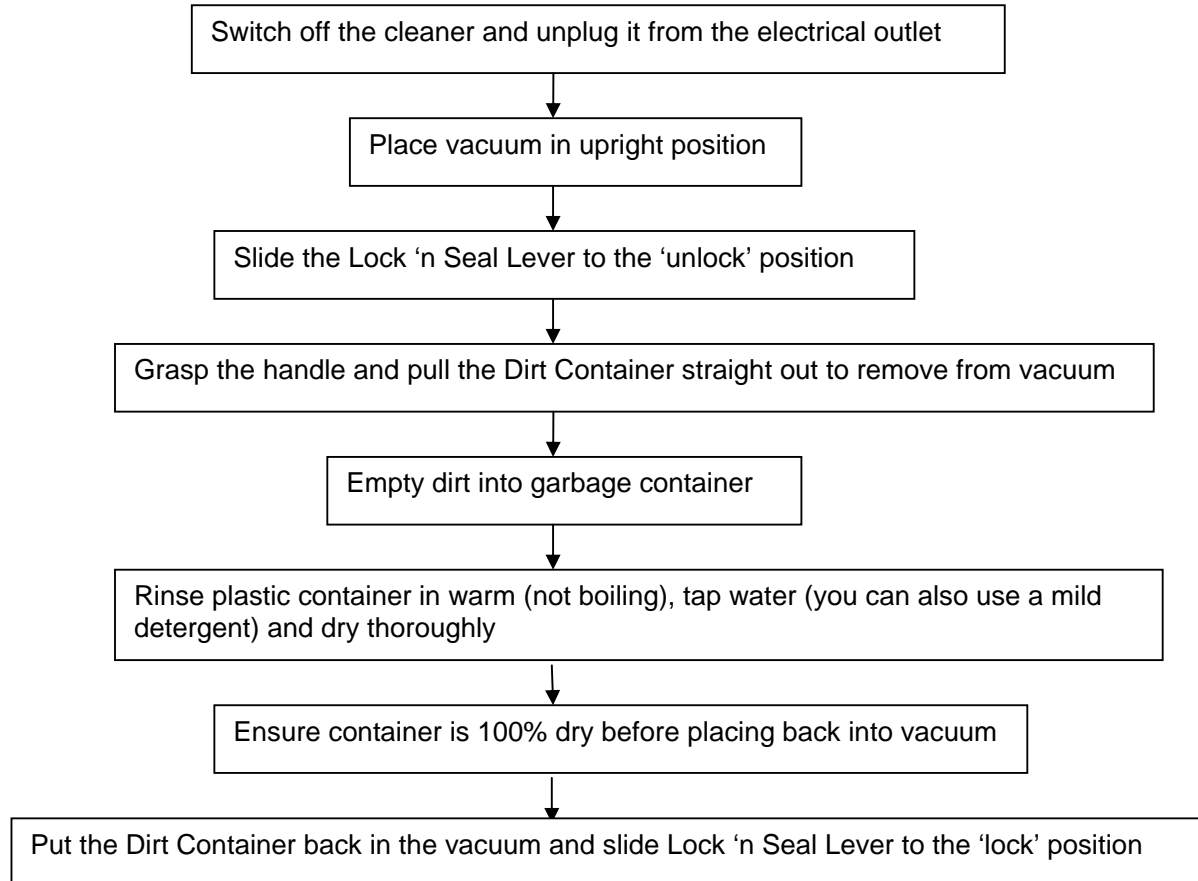

Clean the filters

1. Upper-tank Filter

Switch off the cleaner and unplug it from the electrical outlet

The upper tank filter can be reached by removing the Dirt Container, reaching in underneath the Upper Tank and turning the rim of the red Filter Frame to unlock. Pull it straight down to remove.

Brush the dirt off the Upper Tank and Louvers.

The foam Upper Tank filter may be removed and hand washed in cold tap water with a mild detergent. Rinse well and then air dry thoroughly. **Ensure filter is 100% dry before placing back into vacuum

The Upper Tank and Louvers may be wiped clean using a damp cloth and then dried using a dry cloth.

****NOTE:** For easier access the entire Upper Tank may be removed by turning the red knob on the back of the cleaner to 'unlock' position and pulling the entire tank straight out. Ensure the knob is turned back to 'lock' when Upper Tank is replaced back in cleaner.

2. Pre-motor Filter

Pull out the black slide-out tray located underneath the Dirt Container

Lift out the foam filter

The foam filter may be hand washed in cold tap water with a mild detergent. Rinse well and then air dry thoroughly. **Ensure filter is 100% dry before placing back into vacuum

3. Hepa 12 Media Post-Motor Filter

The HEPA Filter is located on the back of the cleaner behind the white door

Open the door, pulling it downwards, remove the filter and gently tap it against the palm of your hand to remove excess dust and dirt.

Replace filter if necessary

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>