

# ACURITE®

## Digital Window Thermometer

## Digital Window Thermometer

MODEL # 00603



If at any time in the future you need to dispose of this product please note that: Waste electrical products should not be disposed together with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice



PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY IN ACCORDANCE WITH YOUR LOCAL REGULATIONS

**Do not return product to retail store. For Technical Assistance and product return information, please call Customer Care:**

**877-221-1252**

**HOURS: Monday through Friday from 8:00 a.m. to 4:45 pm CST.**



### LIMITED WARRANTY – INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send product, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

Chaney Instrument Company  
965 Wells Street  
Lake Geneva, Wisconsin 53147

www.chaneyinstrument.com  
Tel: 877-221-1252  
Made in China

### 1 CHECK PACKAGE CONTENTS

- (1) Digital Window thermometer
- (1) Instruction manual

Thank You! We appreciate you for purchasing the Acu-rite Digital Window Thermometer. This instrument is designed and engineered with state-of-the-art technology and components. It will provide the current temperature and low and high temperature records for wherever it is placed.

This thermometer can be mounted and used in almost any location by utilizing the rotating suction cups. The suction cups rotate 270° from front to back, allowing the thermometer to adhere to any clean, flat surface.

## 2 READ

Please read this entire manual carefully before you set up the thermometer and begin to use it. In this way you can become familiar with the features and get the most benefit from it.

## 3 ACTIVATE BATTERY

**(1) CR2032 "coin-style" lithium battery is included and pre-installed.**

A protective strip that prevents the battery from draining during shipping must be removed from the battery compartment before you can begin using your Digital Window Thermometer.

- 1) Remove the two small Phillips type screws with a small Phillips screwdriver
- 2) Remove the battery compartment carefully as to not loose the screws.
- 3) Remove the small plastic tab from the battery compartment.
- 4) Replace the battery compartment cover and screws, making sure the battery is still installed correctly.

**NOTE: It is recommended that a lithium type battery always be used in the Digital Window Thermometer to ensure a long battery life and better cold weather operation than regular alkaline batteries.**


## 4 CHOOSE WHERE TO USE THE WINDOW THERMOMETER

The Acu-Rite® Digital Window Thermometer can be used almost anywhere a reliable temperature reading is needed. When choosing where to place the thermometer, keep the following in mind:


- When placing, **clean the surface area** where the suction cups will adhere to thoroughly. The suction cups will adhere to surfaces like glass or smooth plastic best.
- For the most accurate reading, place the thermometer in an area **OUT OF DIRECT SUNLIGHT**.
- The Digital Window Thermometer is weather-resistant, but is not **WATERPROOF**. Place in an area out of direct weather elements, such as under an overhang or on a recessed or inset window surface when placing outdoors.
- In the case of very cold temperatures outdoors, the thermometers suction cups may become stiff and loose suction. It is recommended that the window thermometer be brought indoors in extremely cold weather to prevent the unit from falling.
- The suction cup mounting bracket rotates 270° to allow mounting placement on various angles of surfaces. The Digital Window Thermometer can be mounted on any **SMOOTH FLAT SURFACE** and used anywhere a temperature reading is needed, provided the previous mounting suggestions are followed.
- When removing the Digital Window Thermometer from a mounting surface, lift tab of suction cup itself. **DO NOT** pull on the case or the display to remove the thermometer from a mounting surface as this may cause damage to the rotating suction cup bracket.

**After you have decided where to place the unit, be sure the mounting surface is clean before mounting. After the Digital Window Thermometer is mounted, consider rotating the display SLIGHTLY down or up to provide the best viewing angle height for where the location the thermometer will be viewed most from.**

## HOME USE

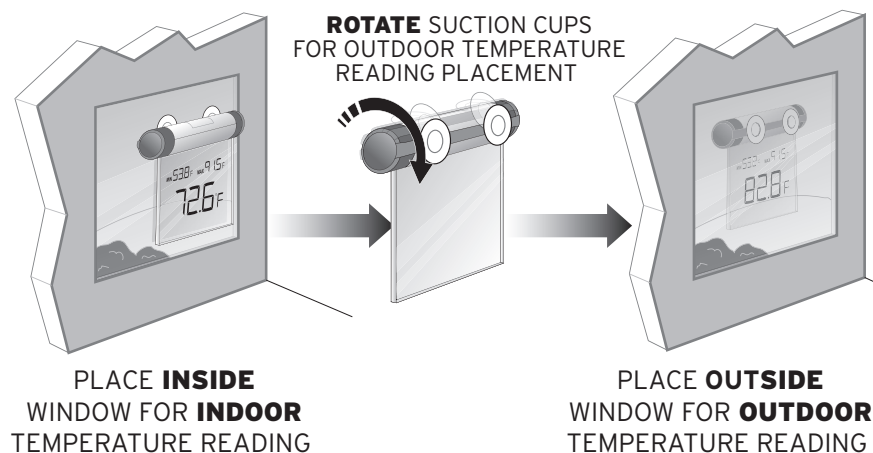

## 5 DIGITAL WINDOW THERMOMETER FEATURES

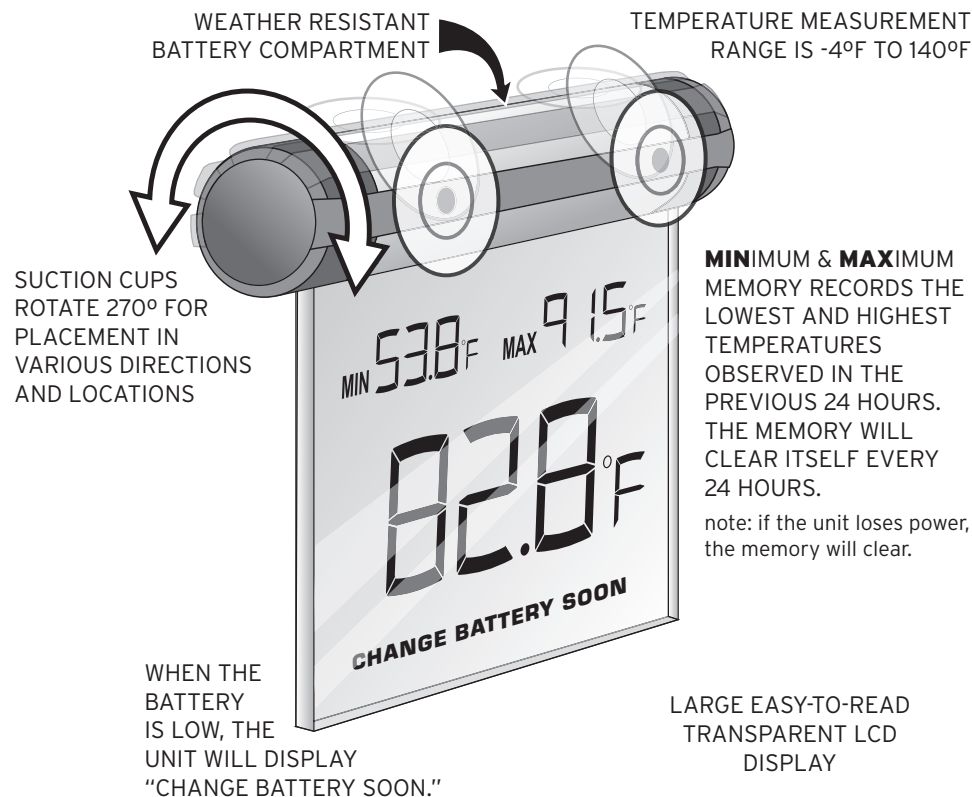

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>