



Cisco MDS 9148 Multilayer Fabric Switch Quick Start Guide

Date: February 2010

Text Part Number: OL-21517-01

- 1 [Overview](#)
- 2 [Verifying Your Shipping Contents](#)
- 3 [Installing the Switch](#)
- 4 [Installing the SFPs](#)
- 5 [Powering Up the Switch](#)
- 6 [Setting Up a Network](#)
- 7 [Connecting Devices](#)
- 8 [Installing Cisco Device Manager](#)
- 9 [Using the Quick Config Wizard](#)
- 10 [Creating VSANs](#)
- 11 [Need Help?](#)

1 Overview


Cisco MDS 9148 Switch

The Cisco MDS 9148 Multilayer Fabric Switch has 48 Fibre Channel ports with speeds of 8, 4, 2, and 1 Gbps. The Cisco MDS 9148 Switch is a top-of-rack (TOR) Fibre Channel switch based on System-on-a-Chip (SOC) technology, which is a Cisco innovation. The Cisco MDS 9148 Multilayer Fabric Switch has these features:

- 16, 32, or 48 default licensed ports and an 8-port on-demand license.
- 8-, 4-, 2-, 1-Gbps full line rates.
- 128 buffers available as a shared pool to each port group: 32 buffers per Fibre Channel (FC) port. A maximum of 125 buffers per port in a port group.
- Fair bandwidth arbiters.
- Device Manager Quick Config Wizard for the Cisco MDS 9148 Switch.
- Redundant power supplies and fans.
- Enterprise class features such as In-Service Software Upgrades (ISSU), Virtual SANs (VSANs), security features, and quality of service (QoS).
- Consistency with NX-OS.


The front of the Cisco MDS 9148 Switch contains the LEDs, the console and management ports, and 48 8-Gbps Fibre Channel Ports. See [Figure 1](#).

Figure 1 Front View of the Cisco MDS 9148 Switch

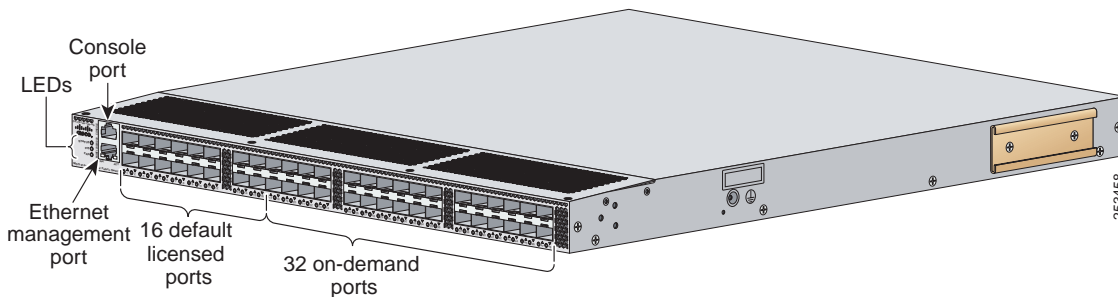

The rear of the Cisco MDS 9148 Switch contains the redundant power supplies, the AC power receptacle, and the fans. See [Figure 2](#).

Figure 2 Rear View of the Cisco MDS 9148 Switch

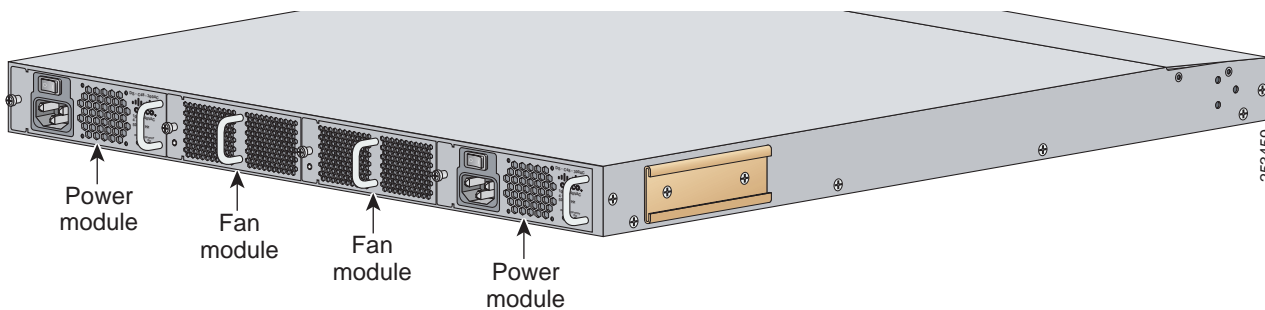

Note

The on-demand ports can be activated in 8-port increments through software licensing.

2 Verifying Your Shipping Contents

Verify that you have received all items, including the following:

- Rack-mount kit
- ESD wrist strap
- Cables and connectors
- Any optional items ordered


3 Installing the Switch

Install the switch in one of the following enclosures:

- An open EIA rack
- A perforated or solid-walled EIA cabinet
- A two-post Telco rack

For an example of a rack mount, see [Figure 3](#).

Figure 3 Example Rack Mount

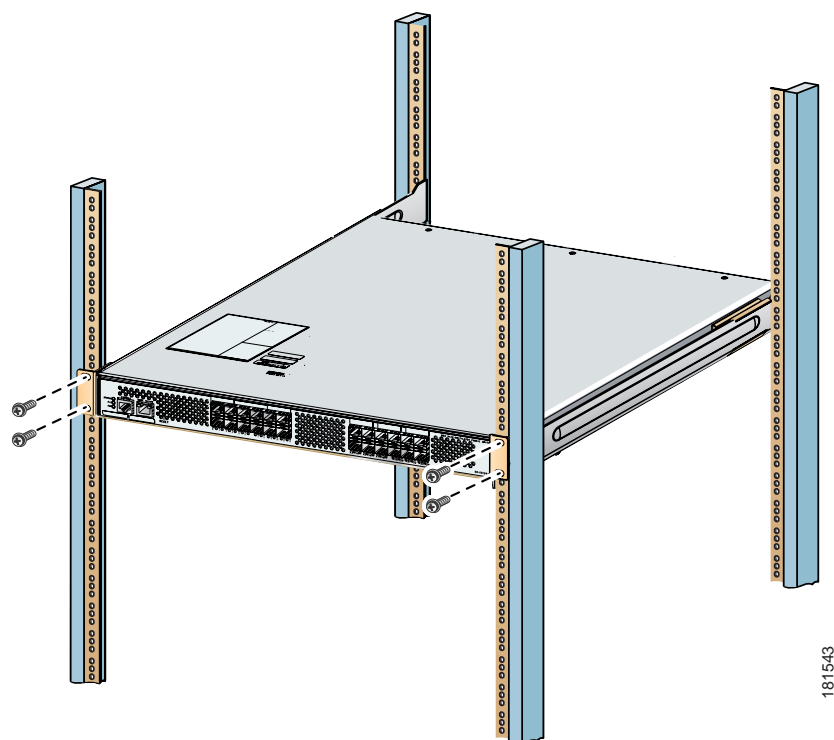

Note Before you install the switch in a rack, you will need to install the rack mount support brackets on the switch.


4 Installing the SFPs

Install one of the following SFPs in each empty port:

- A Fibre Channel Shortwave 1-, 2-, 4-, or 8-Gbps SFP transceiver, part number DS-SFP-FC8G-SW
- A Fibre Channel Long wavelength 1-, 2-, 4-, or 8-Gbps SFP transceiver, part number DS-SFP-FC8G-LW
- A Fibre Channel Short wavelength 1-, 2-, or 4-Gbps SFP transceiver, part number DS-SFP-FC4G-SW

For SFP installation, see [Figure 4](#).

Figure 4 SFP Installation

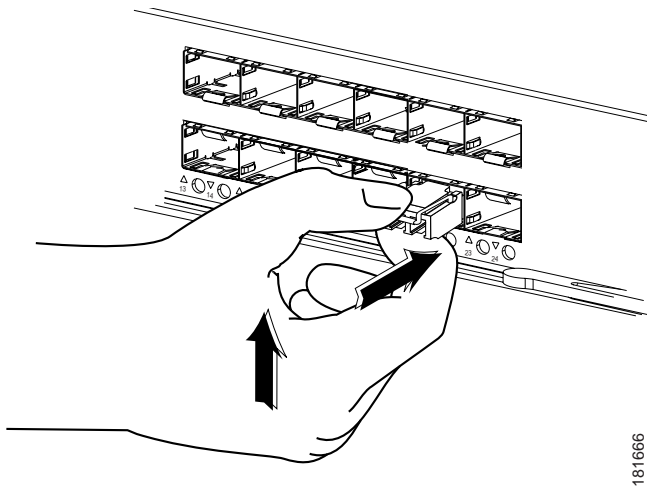


5 Powering Up the Switch

To power up the switch, follow these steps:

Step 1 Ground the switch, as shown in [Figure 5](#).

Figure 5 Switch Ground

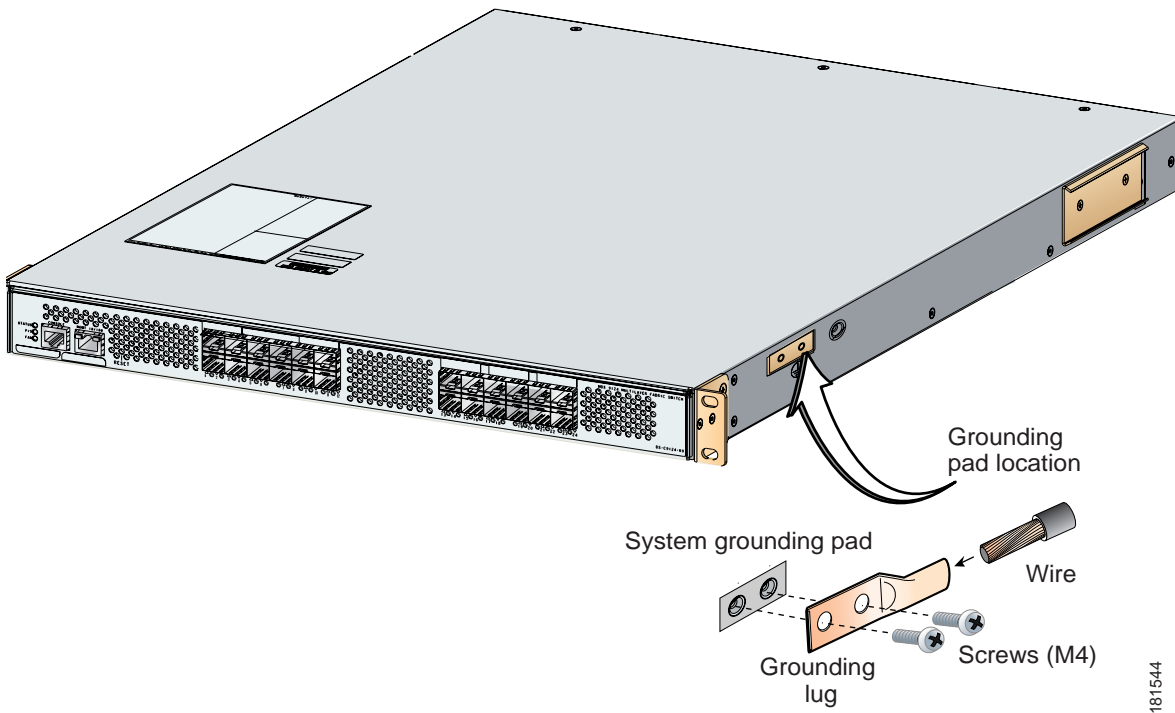


Step 2 Connect the power cable to the AC power receptacle, and then plug it in (see [Figure 6](#)).

The Cisco MDS 9148 Switch supports only AC power supply. The power supply status is indicated on a front panel LED.

The Cisco MDS 9148 Switch includes a front panel reset button that resets the switch without cycling the power.

Step 3 Power up the switch (see [Figure 6](#)).

Figure 6 Power Receptacle and On/Off Switch on Cisco MDS 9148 Switch

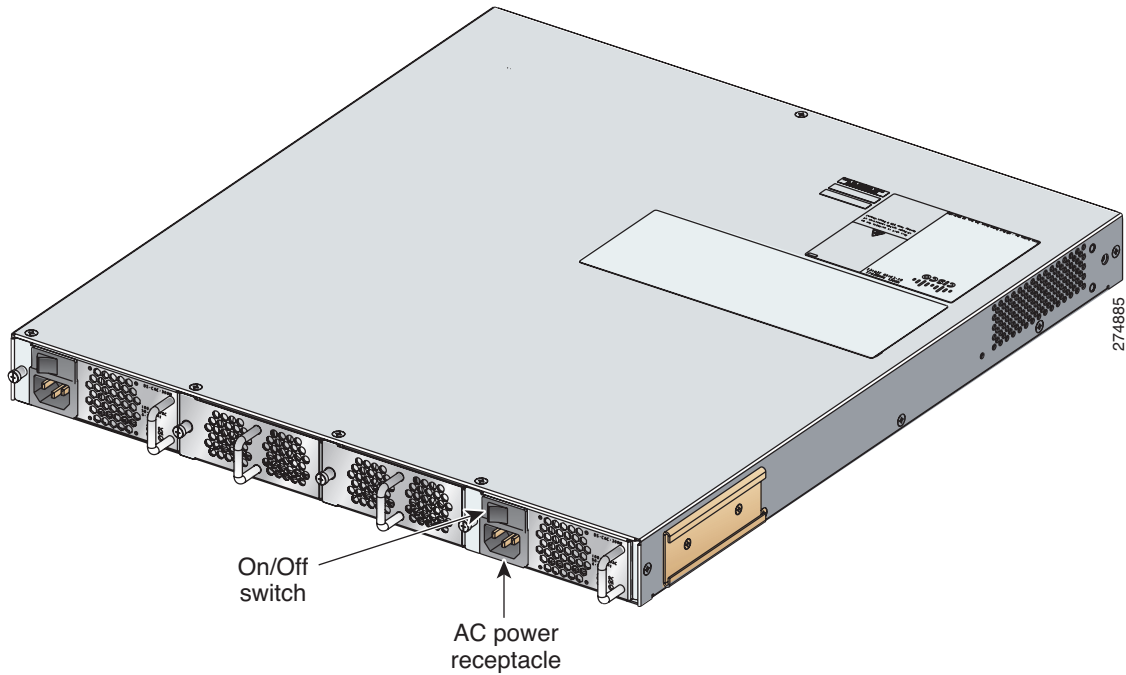


6 Setting Up a Network

To set up a network, follow these steps:

- Step 1** Ensure that the Mgmt0 port is connected to the management network.
- Step 2** Ensure that the console port is connected to the PC serial port (or to a terminal server), as shown in [Figure 7](#). For example, on a Windows PC used as a terminal emulator, you can use HyperTerminal. The default baud rate on the console port is 9600.

Figure 7 Connection to Terminal Emulator.

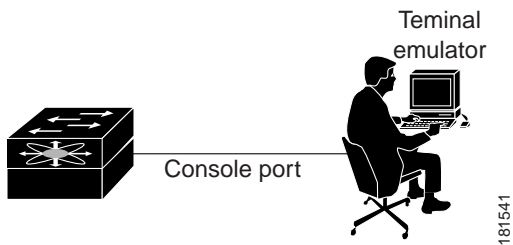


Note

See [Figure 1](#) for the physical location of the Mgmt 0 port and console ports.

Step 3 Use the switch setup utility that appears on the console connection.

Step 4 Use the switch setup utility to do the following:

- a. Set the admin password for the switch.



Caution

Make sure that you configure a strong password. Short, easy-to-decipher passwords are not allowed by Cisco NX-OS software. Strong passwords are at least eight characters long and contain numbers, uppercase letters, and lowercase letters.

- b. Assign an IP address and a netmask to the switch, as shown in Example 1.

Example 1 IP Address Step in the Setup Utility

```
Continue with Out-of-band (mgmt0) management configuration? {yes/no}: yes  
Mgmt0 IPV4 address: 209.165.200.225  
Mgmt0 IPV4 netmask: 255.255.255.224
```

- c. Set up the default gateway.



Note

The switch is now ready to be managed via the Mgmt port using Telnet or Device Manager or Fabric Manager.


7 Connecting Devices

To connect devices, follow these steps:

Step 1 Connect a server to the switch (see [Figure 8](#)).

Step 2 Connect a storage device to the switch (see [Figure 8](#)).

Figure 8 Server and Storage Connection

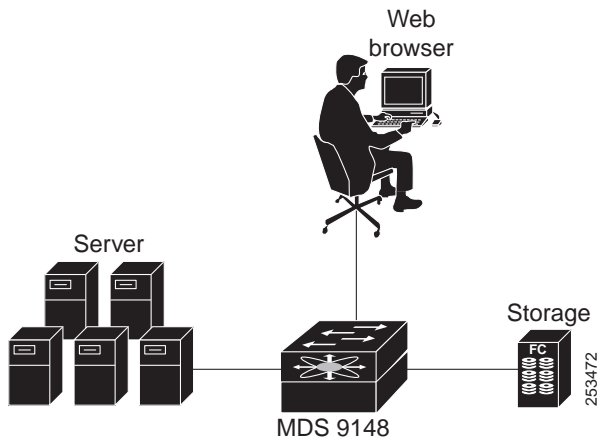

Note

For more information about switch installation and configuration, see the *Cisco MDS 9100 Series Hardware Installation Guide* and the appropriate CISCO MDS 9000 Family NX-OS feature configuration guides.

8 Installing Cisco Device Manager

To install Cisco Device Manager, follow these steps:

- Step 1** Enter the IP address you assigned to your switch in your **Address** field of your browser to begin the Cisco Device Manager installation.
- Step 2** Click the **Device Manager** link, shown in [Figure 9](#).

Figure 9 Cisco Device Manager Installation



- Step 3** Follow the onscreen instructions to install Cisco Device Manager.

9 Using the Quick Config Wizard

To enable ports and assign zone memberships, follow these steps:

- Step 1 Click the **Device Manager** icon on your desktop to log in.
- Step 2 Enter a password in the **Password** field (see [Figure 10](#)).
- Step 3 Click **Open** (see [Figure 10](#)).


Figure 10 Device Manager Login



Step 4 Click **FC**, and then choose **Quick Config**.


Step 5 Enable two ports by checking the two corresponding check boxes in the **Enable** column, as shown in [Figure 11](#).

Figure 11 Enable Zone Ports

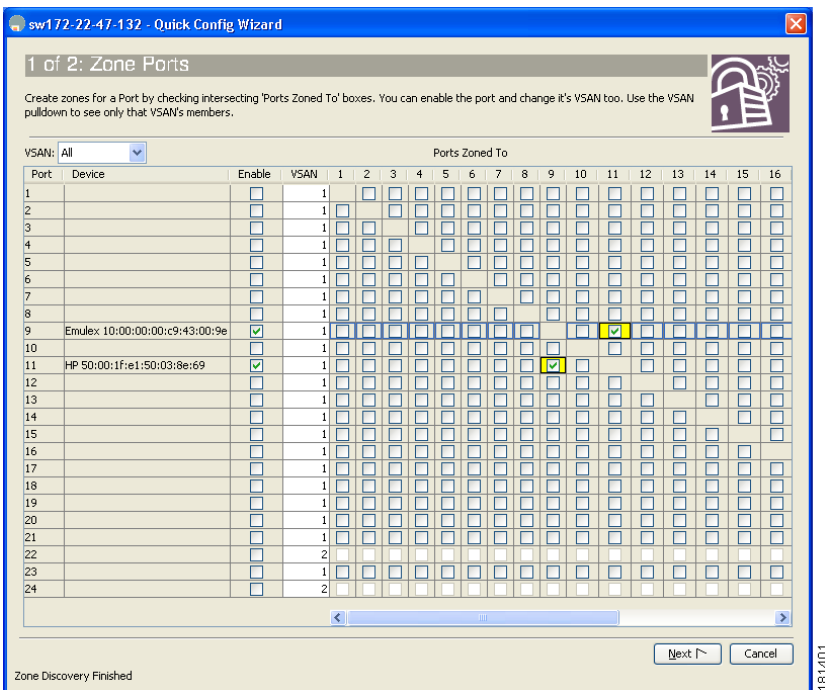

- Step 6 Select one of the two enabled ports that you want in a zone by checking its check box in the **Ports Zoned To** area. When you check this check box, the second enabled port automatically becomes checked. Both ports are now members of the same zone.
- Step 7 Click **Next**. You see a summary of your changes, as shown in [Figure 12](#).

Figure 12 Confirm Changes

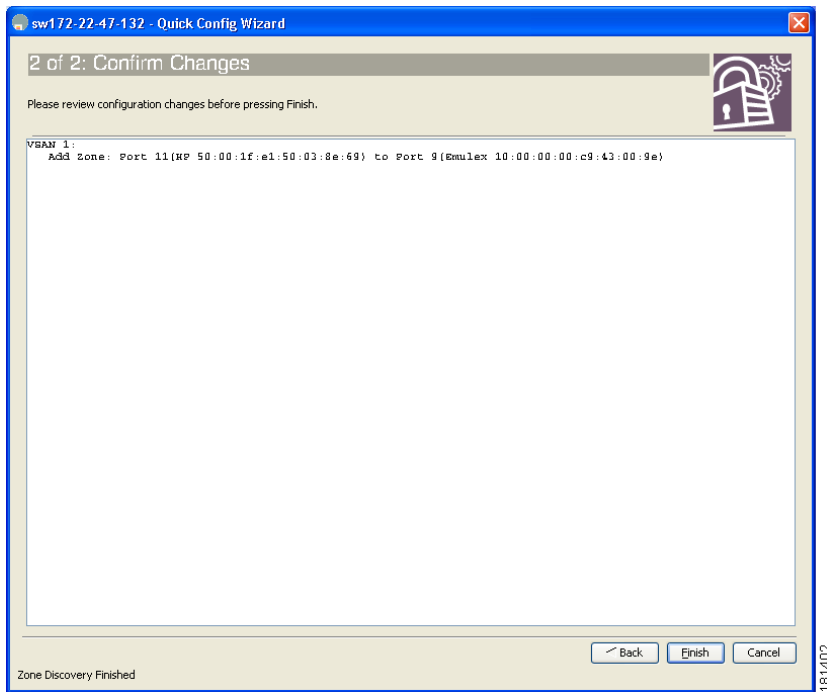

Step 8 Click **Finish** to save your changes.

Step 9 Repeat Steps 2 through 5 to create more zones.



Note A maximum of 12 zones with two ports each can be created with the Quick Config Wizard.



Note For more information about installing Cisco Device Manager and using the Quick Config Wizard, see the *Cisco MDS 9000 Family Fabric Manager Configuration Guide*.

10 Creating VSANs

To create VSANs, follow these steps:

Step 1 Click the **Device Manager** icon on your desktop to log in.

Step 2 Enter a password in the **Password** field (see [Figure 13](#)).

Step 3 Click the **Open** button (see [Figure 13](#)).

Figure 13 Device Manager Login




Step 4 Click **FC**, and then choose **VSANs**.

Step 5 Click **Create**.

Step 6 Use the Create VSAN General dialog box to create a VSAN, as shown in [Figure 14](#).

Figure 14 VSAN Creation

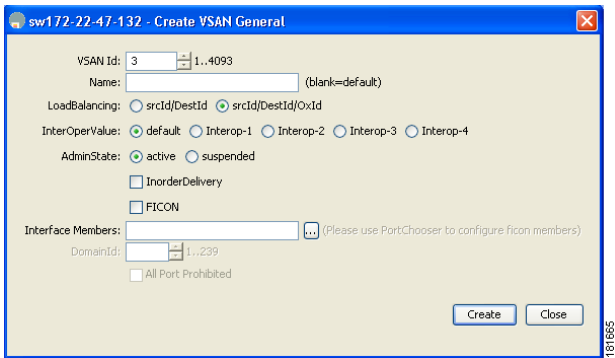

Step 7 Click **Finish** to save your changes.

Step 8 Repeat Step 6 and 7 to create more VSANs.



Note For more information on how to create VSANs, see the *Cisco MDS 9000 Family CLI Configuration Guide*.

This completes the installation of your Cisco MDS 9148. The switch is now ready to use.

11 Need Help?

Obtaining Technical Assistance

Cisco Technical Support provides 24-hour-a-day award-winning technical assistance. The Cisco Technical Support and Documentation website on Cisco.com features extensive online support resources. In addition, if you have a valid Cisco service contract, Cisco Technical Assistance Center (TAC) engineers provide telephone support. If you do not have a valid Cisco service contract, contact your reseller.

Cisco Technical Support and Documentation Website

The Cisco Technical Support and Documentation website provides online documents and tools for troubleshooting and resolving technical issues with Cisco products and technologies. The website is available 24 hours a day at this URL:

<http://www.cisco.com/techsupport>

Access to all tools on the Cisco Technical Support and Documentation website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a user ID or password, you can register at this URL:

<http://tools.cisco.com/RPF/register/register.do>



Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Asia Pacific Headquarters

Cisco Systems, Inc.
168 Robinson Road
#28-01 Capital Tower
Singapore 068912
www.cisco.com
Tel: +65 6317 7777
Fax: +65 6317 7799

Europe Headquarters

Cisco Systems International BV
Haarlerbergpark
Haarlerbergweg 13-19
1101 CH Amsterdam
The Netherlands
www-europe.cisco.com
Tel: 31 0 800 020 0791
Fax: 31 0 20 357 1100

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLynx, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>