



A Sierra Monitor Company

**Driver Manual
(Supplement to the FieldServer Instruction
Manual)**

FS-8700-36 Weigh-Tronix

APPLICABILITY & EFFECTIVITY

Effective for all systems manufactured after May 1, 2001

Instruction Manual Part Number FS-8700-36

Version: N/A

2/18/2004

Table of Contents

- 1. WEIGH-TRONIX DESCRIPTION..... 1**
- 1.1 HARDWARE/SOFTWARE 1
- 2. FIELDSEVER AS A WEIGH-TRONIX CLIENT 2**
- 2.1 HARDWARE CONNECTIONS 2
- 2.1.1 *Setting up the Scale* 2
- 2.1.2 *Configuration File Structure* 3
- 2.1.2.1 Data Arrays..... 3
- 2.1.2.2 Client Side Nodes 4
- 2.1.2.3 Client Side Map Descriptors 5

1. Weigh-Tronix Description

The Weigh-Tronix driver allows the FieldServer to transfer data to and from devices over either RS-232 or RS-485 using Weigh-Tronix protocol. The FieldServer emulates a Client only.

The information that follows describes how to expand upon the factory defaults provided in the configuration files included with the FieldServer.

Devices Supported		
Manuf	Model	Notes
Weigh-Tronix	WI 125	
Weigh-Tronix	WI 127	
Weigh-Tronix	WI 130	
*Other devices – contact FST		

1.1 Hardware/Software

Supplied by FieldServer Technologies.


FieldServer Technologies PART #	DESCRIPTION
FS-8915-10	UTP cable (7 foot) for RS-232 use
FS-8917-01	RJ45 to DB25M connector adapter

Provided by user

PART #	DESCRIPTION
	Weigh-Tronix Simposer Software
	Cables for PC to scale to configure scale

2. FieldServer as a Weigh-Tronix Client

2.1 Hardware Connections

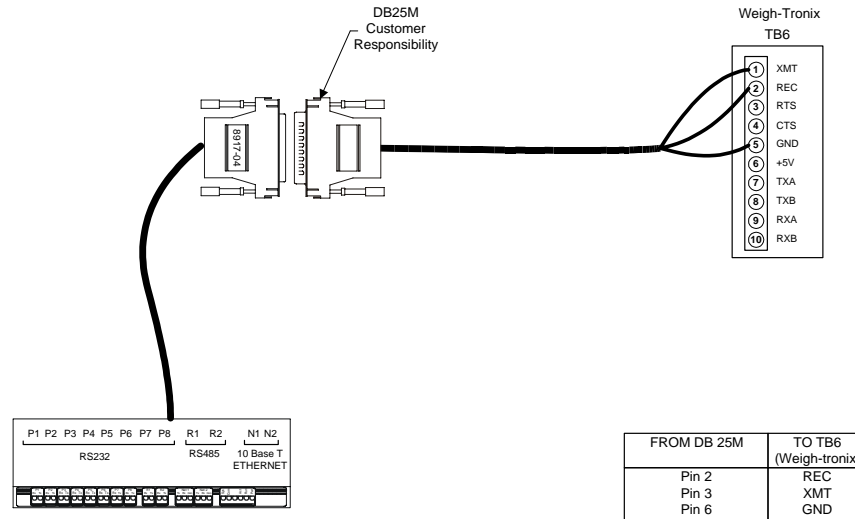

2.1.1 Setting up the Scale

Setting up the scale requires installing and executing Weigh-Tronix Surposer software. This has to be obtained from Weigh-Tronix and installed per their user manual.

The procedure below is just a summary of the steps required to configure the Scale and any technical support regarding the scale should be obtained from Weigh-Tronix.

- a. Install Simposer
- b. Start Weigh-Tronix Simposer
- c. Editors/Configure/Serial Ports/end of message = 05
Serial port = 1
Baud = 9600
Parity = none
Data Bits = 8
Handshake = none
Mode = basic control
- d. Connect computer to scale as instructed by Weigh-Tronix
- e. Editors/Program
Enter the following program
sub com1_message
fmtprint (1)
end sub
getcom\$(1)
end sub
Close editor
- f. Editors/print formats

- G {gross} lb \r\n
- T {tare} lb \r\n\
- N {net} lb \r\n
- Select Print Format = 1
- Select Port = 1
- f. Close editor
- g. Save configuration
- h. Download Com 1 or Com 2
 - Wait for double beep
 - Wait for single beep
- i. Exit WI-130 config
- j. Attach Model FieldServer FieldServer per dwg etc.

2.1.2 Configuration File Structure

Note that * indicates an optional parameter, with the bold legal value being the default.

2.1.2.1 Data Arrays

Section Title		
Data_Arrays		
Column Title	Function	Legal Values
Data_Array_Name	Provide name for Data Array	Up to 15 alphanumeric characters
Data_Format	Provides data format	INT16, INT32, BIT, FLOAT
Data_Array_Length	Number of Data Objects	1-10,000

Example

```
// Data Arrays
Data_Arrays
Data_Array_Name,          Data_Format, Data_Array_Length
DA_AI,                   Float,          100
```

Client Side Connections

Section Title		
Connections		
Column Title	Function	Legal Values
Port	Specify which port the device is connected to the FieldServer	P1-P8, R1-R2
Baud *	Specify baud rate	300-9600-38400
Parity *	Specify parity	Even, Odd, None
Data_Bits	Specify data bits	7, 8
Stop_Bits		
Handshaking	Specify hardware handshaking	RTS, RTS/CTS, None
Timeout	Specify Timeout defaults must not be used	Weigh-Tronix 10.05

Example

```
// Client Side Connections

Connections
Port,      Baud,      Timeout
p8,       9600,      10.0s
```

2.1.2.2 Client Side Nodes

Section Title		
Nodes		
Column Title	Function	Legal Values
Node_Name	Provide name for node	Up to 32 alphanumeric characters
Protocol	Specify protocol used	Weigh-Tronix
Timeout	Specify Timeout defaults must not be used	Weigh-Tronix 10.05

Example

```
// Client Side Nodes

Nodes
Node_Name,      Protocol,      Port
Scale1,        Weigh-Tronix,      P8
```

2.1.2.3 Client Side Map Descriptors

Section Title		
Map_Descriptors		
Column Title	Function	Legal Values
Map_Descriptor_Name	Name of this Map Descriptor	Up to 32 alphanumeric characters
Data_Array_Name	Name of Data Array where data is to be stored in the FieldServer	One of the Data Array names from "Data Array" section above
Data_Array_Offset	Starting location in Data Array	0 to maximum specified in "Data Array" section above
Function	Function of Client Map Descriptor	RDBC, WRBC, WRBX
Node_Name	Name of Node to fetch data from	One of the node names specified in "Client Node Descriptor" above
Address	Starting address of read block	0
Length	Length of data array	3
Data_Array_Low_Scale*	Scaling zero in Data Array	-32767 to 32767, default 0
Data_Array_High_Scale*	Scaling max in Data Array	-32767 to 32767, default 100
Node_Low_Scale*	Scaling zero in Connected Node	-32767 to 32767, default 0
Node_High_Scale*	Scaling max in Connected Node	-32767 to 32767, default 100

Example

```
// Client Side Map Descriptors

Map_Descriptor
Map_Descriptor_Name, Data_Array_Name, Data_Array_Location, Function, Node_Name, Address, Length
wtio_MAP, DA_AI, 0, RDBC, Scale1, 0, 3,
```

3. Revision History

Date	Driver Version	Document Revision	Comment
04/22/02	1.00d	1	Revision history added
2/18/04	1.00d	2	Releasing

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>